


Finn 3 Seater Sofa: F34632KD-FK-3P2C

1


A X 4	E X 1
	
16.7CM(H)	
B X 1	
	
18.8CM(H)	
C X 4	
	
M10	
D X 4	
	
M10 x 18MM	

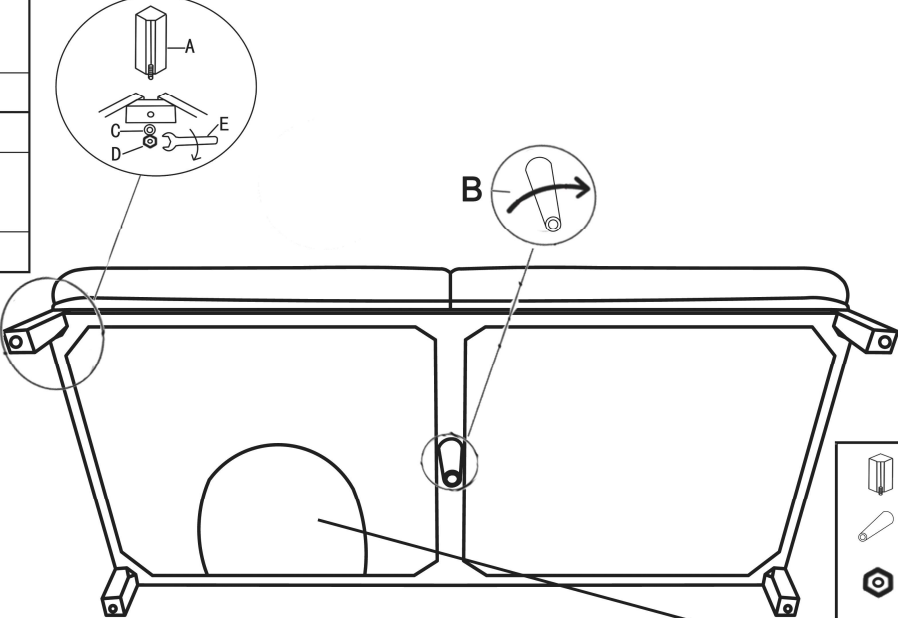

The diagram shows the sofa frame with callouts for parts A, B, C, D, and E. Part A is a screw for the backrest, B is a screw for the seat, C is a nut for the leg, D is a washer for the leg, and E is a wrench for the leg. A note indicates that the legs are located in the zipped compartment under the sofa.

	• • • •	X 4
	• • • •	X 1
	• • • •	X 4
	• • • •	X 4
	• • • •	X 1

2

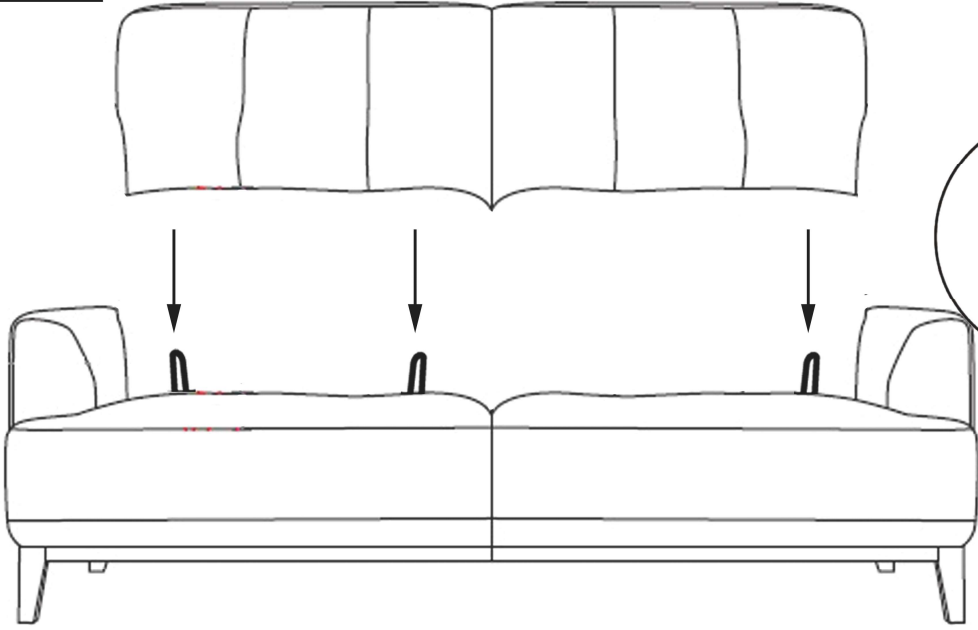

The diagram shows the sofa backrest being attached to the sofa frame. Arrows indicate the backrest is placed on the frame. A callout shows a clip being used to secure the backrest.