 
 
 
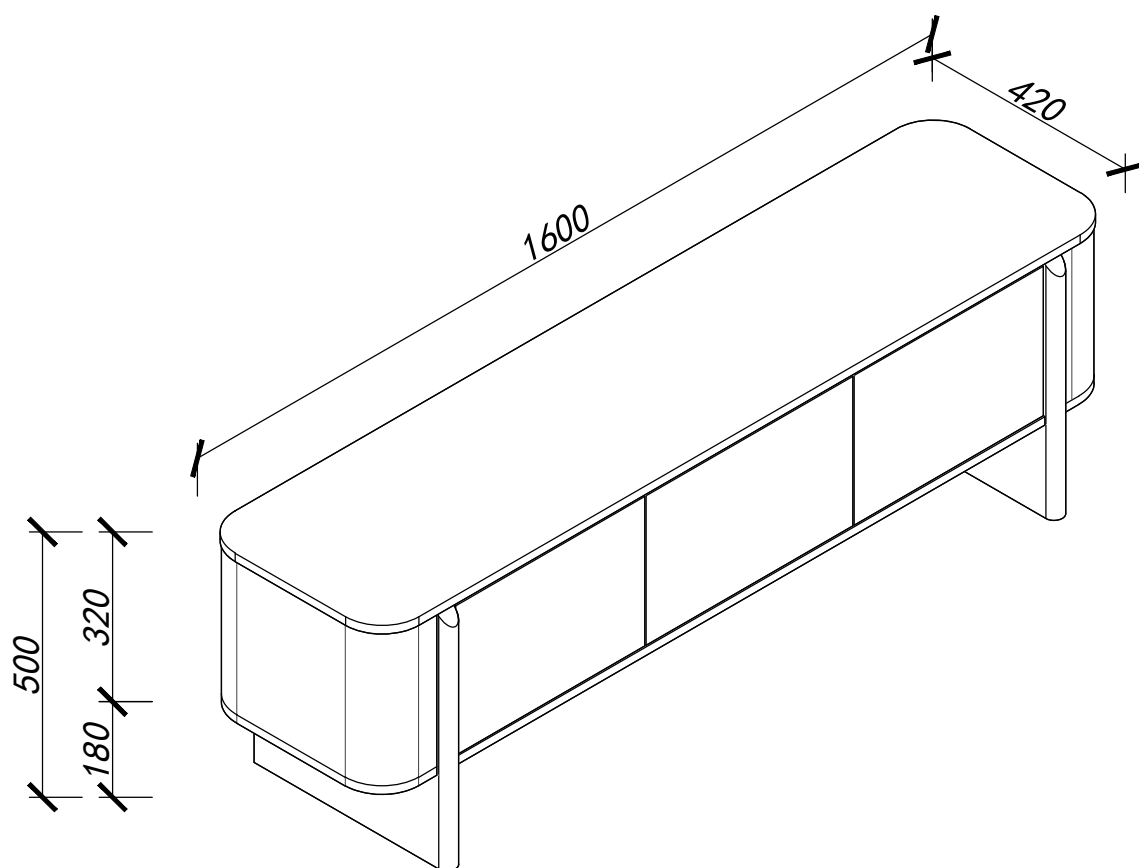 
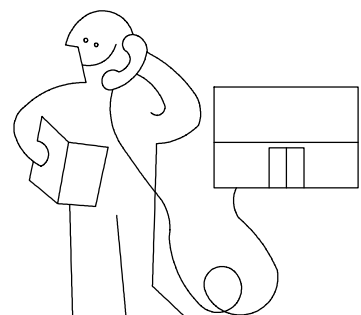 
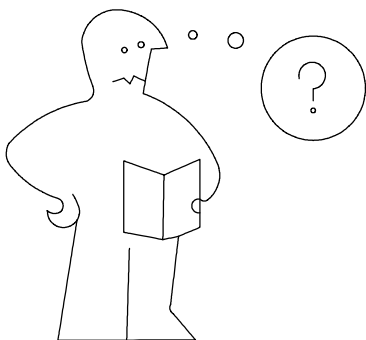 
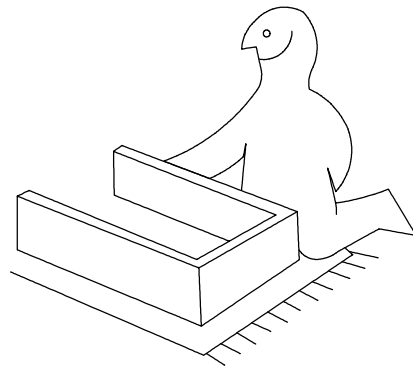 
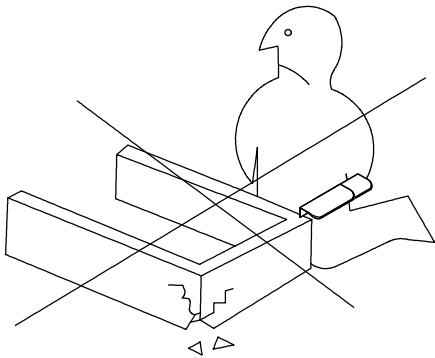 
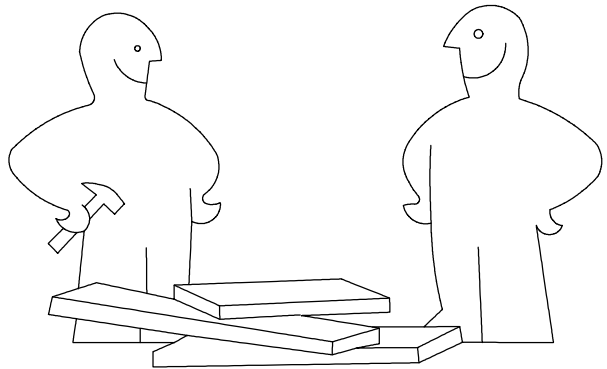 
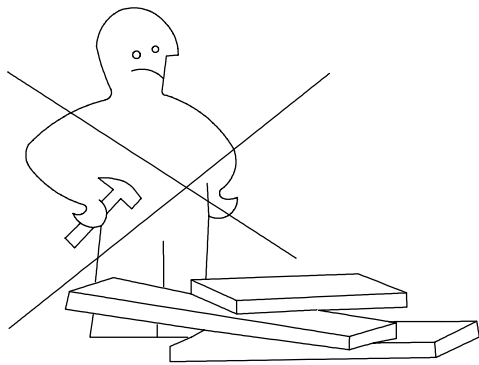 


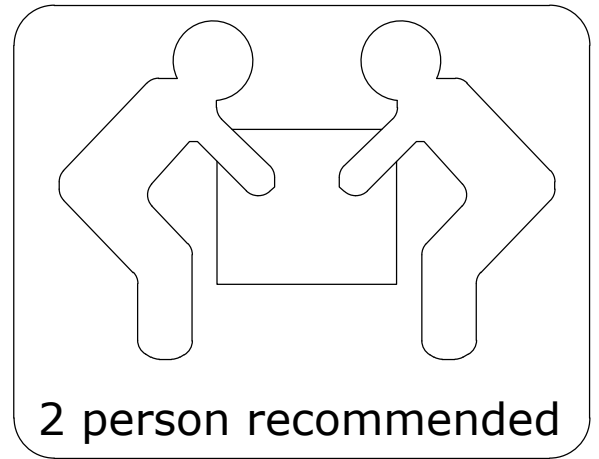


Assembly Instructions

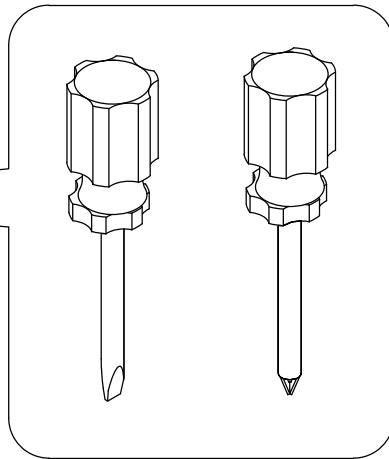

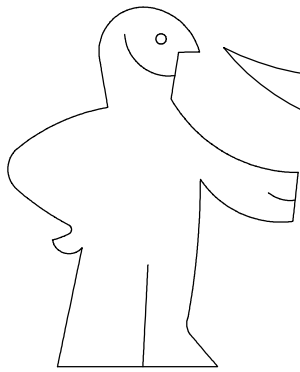

Panel No	Panel Sizes	Quantity
1	1600*400*16	1
2	1286*400*16	1
3	304*396*121	1
4	304*396*121	1
5	288*357*16	1
6	288*357*16	1
7	479*420*36	1
8	479*420*36	1
9	405*350*16	2


Panel No	Panel Sizes	Quantity
10	435*350*16	1
11	1286*60*18	1
12	1286*100*18	1
13	152*60*16	2
14	1296*298*5	1
15	282*412*16	1
16	282*450*16	1
17	282*412*16	1

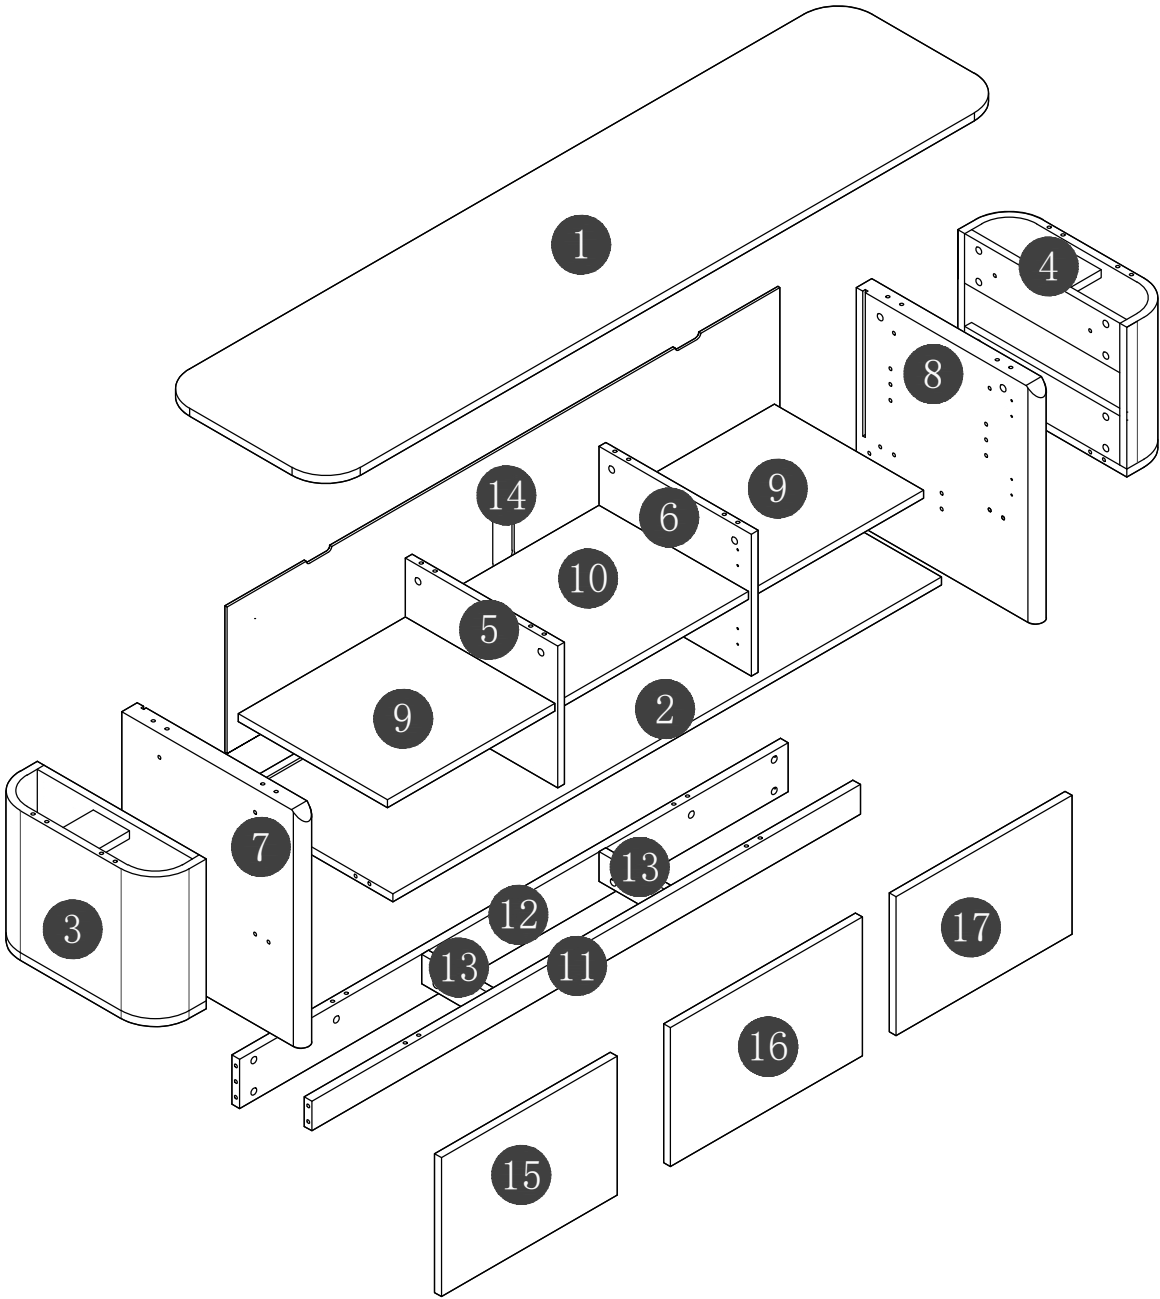 

Fittings



 M6*40
A1=32



Φ 8*40
A2=4



Φ 8*30
B=36



 
Φ 15*12
C=32




Φ 21
D=32




E=10

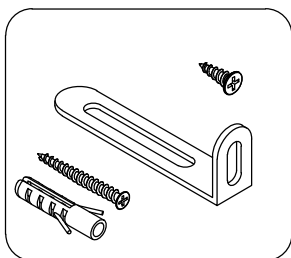


F2=2

 


H =1

 


Q=8

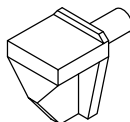 


L=12

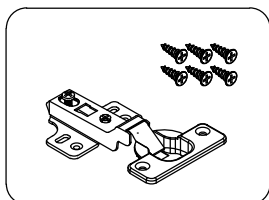 

I2=2

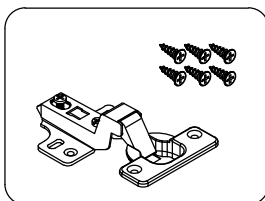 


I3=4

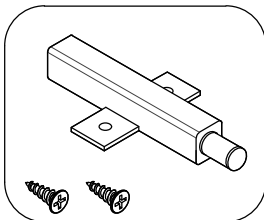 


K=3

 
1

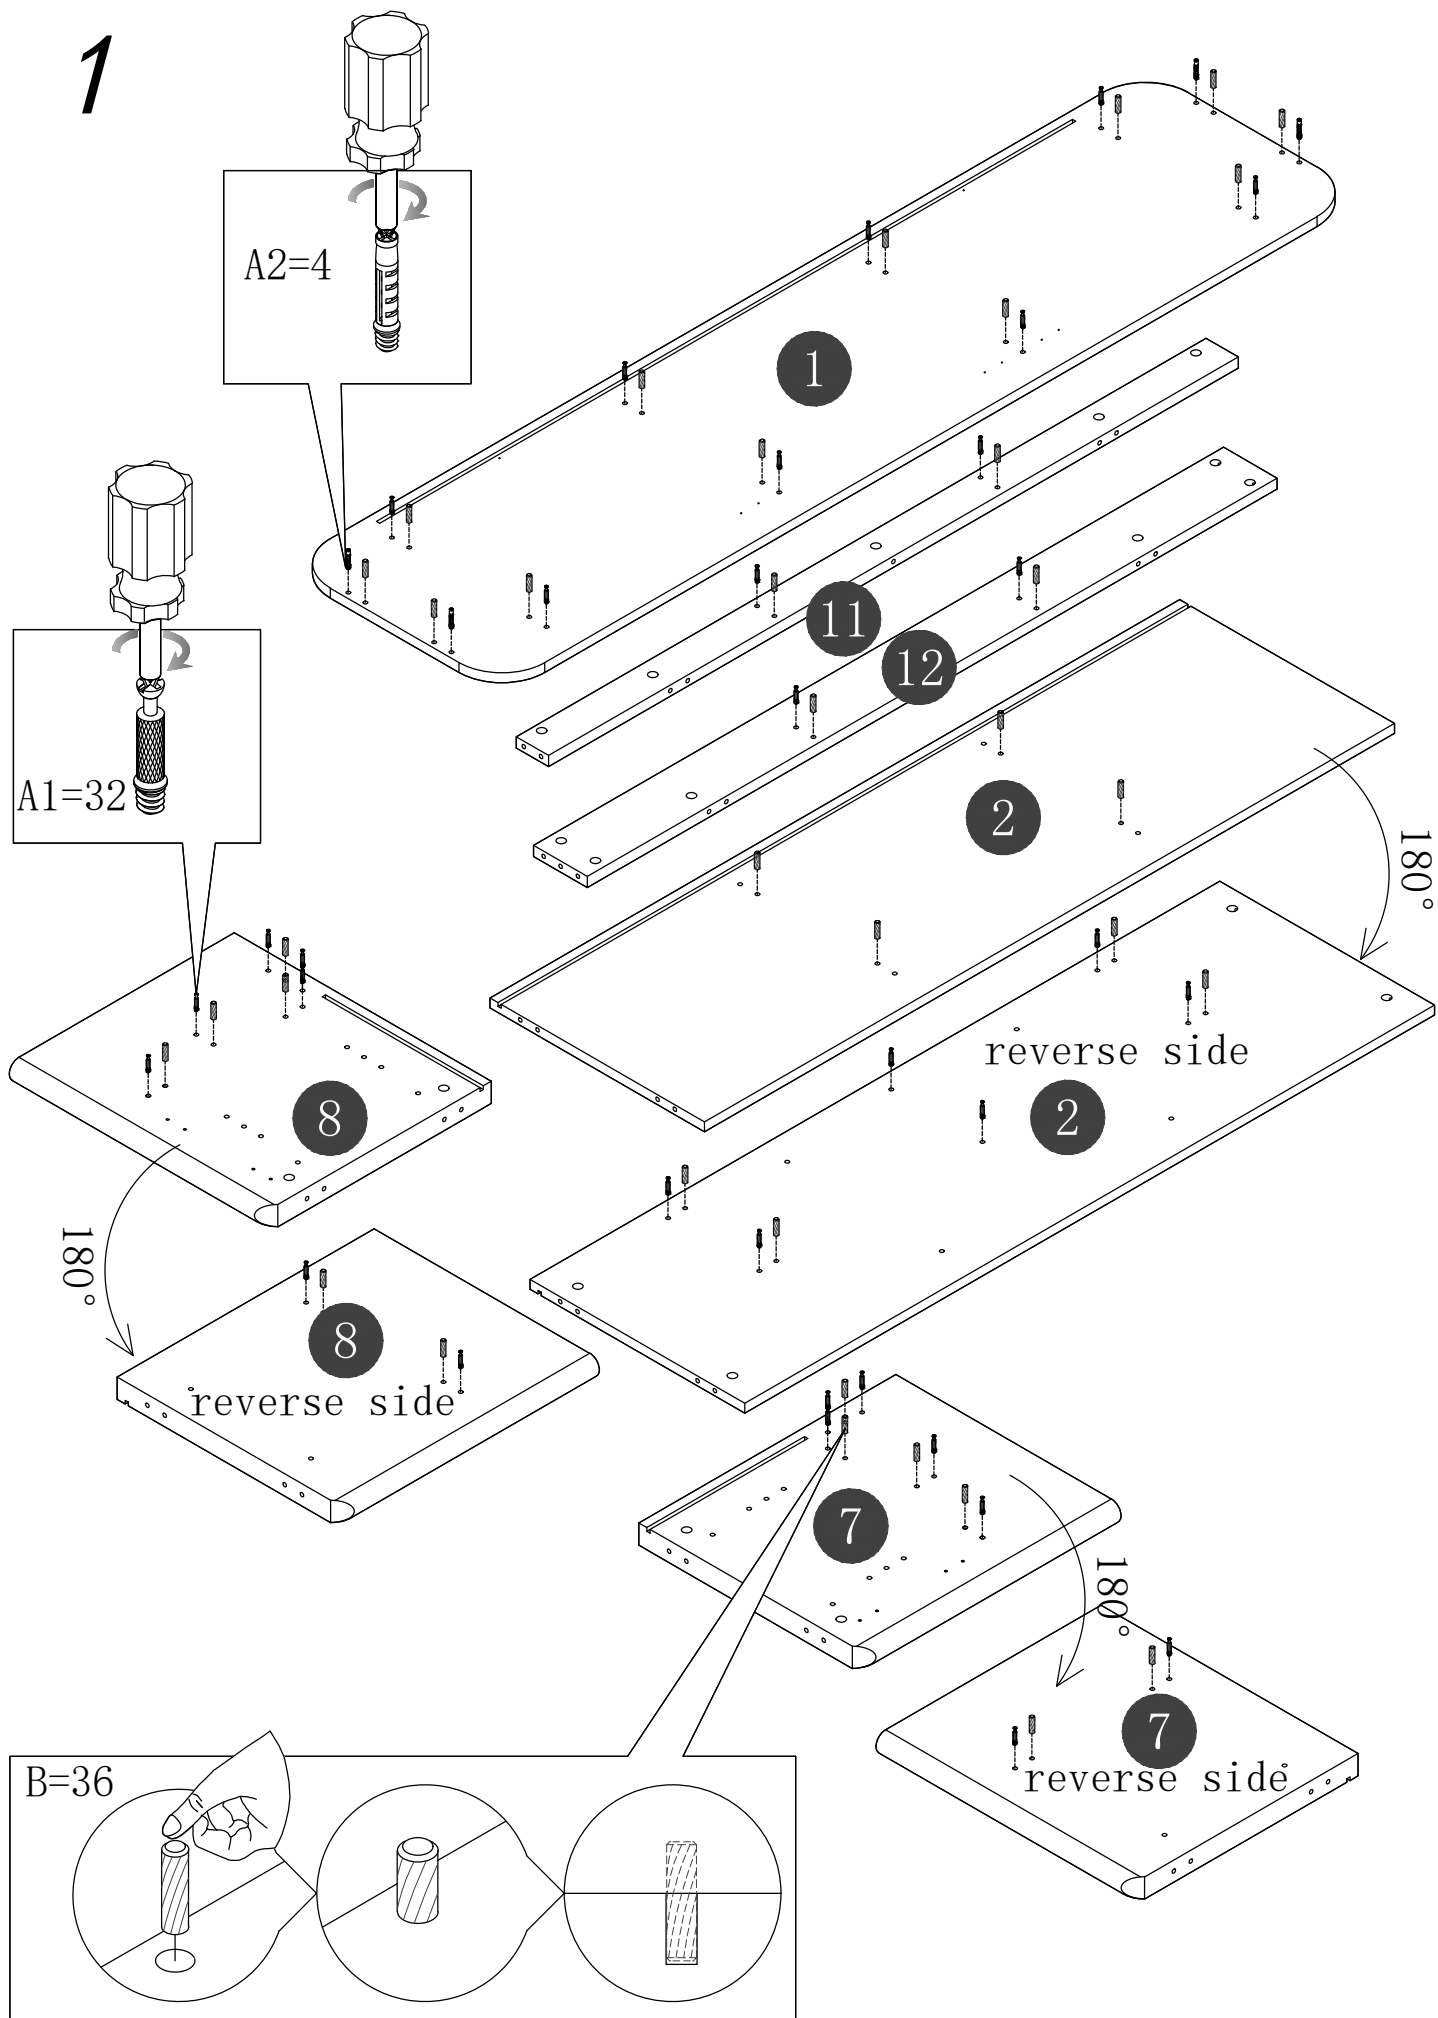


2

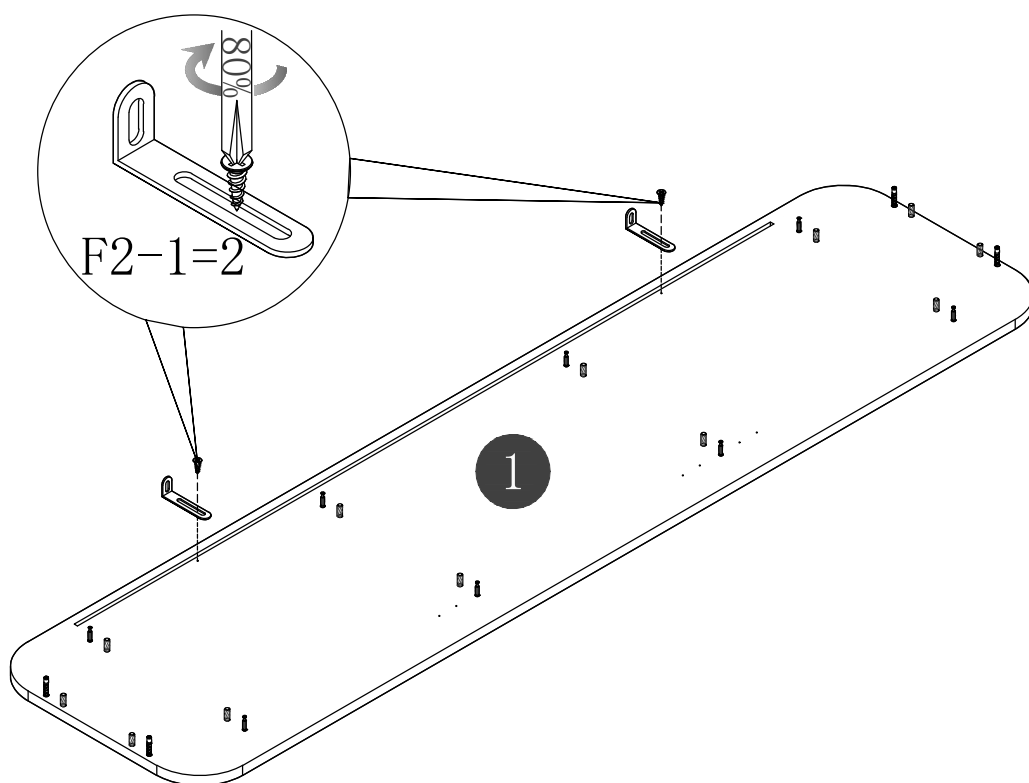 


3

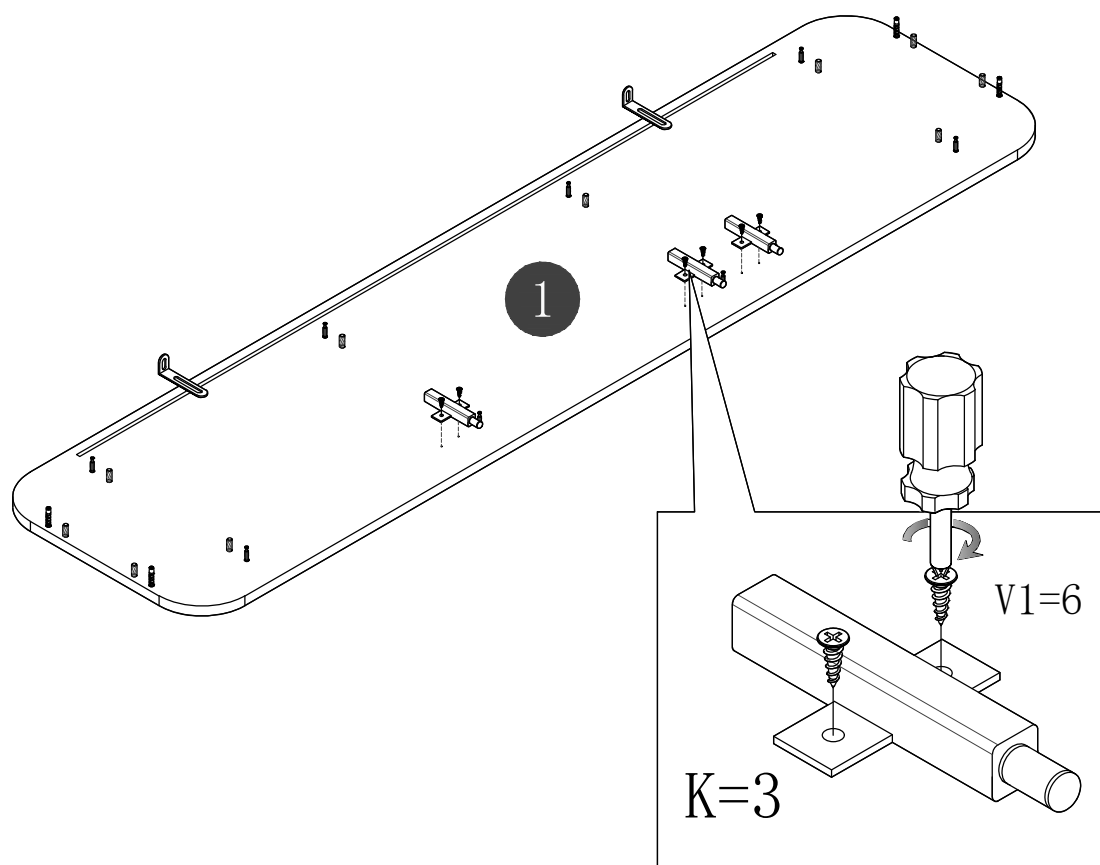 


4

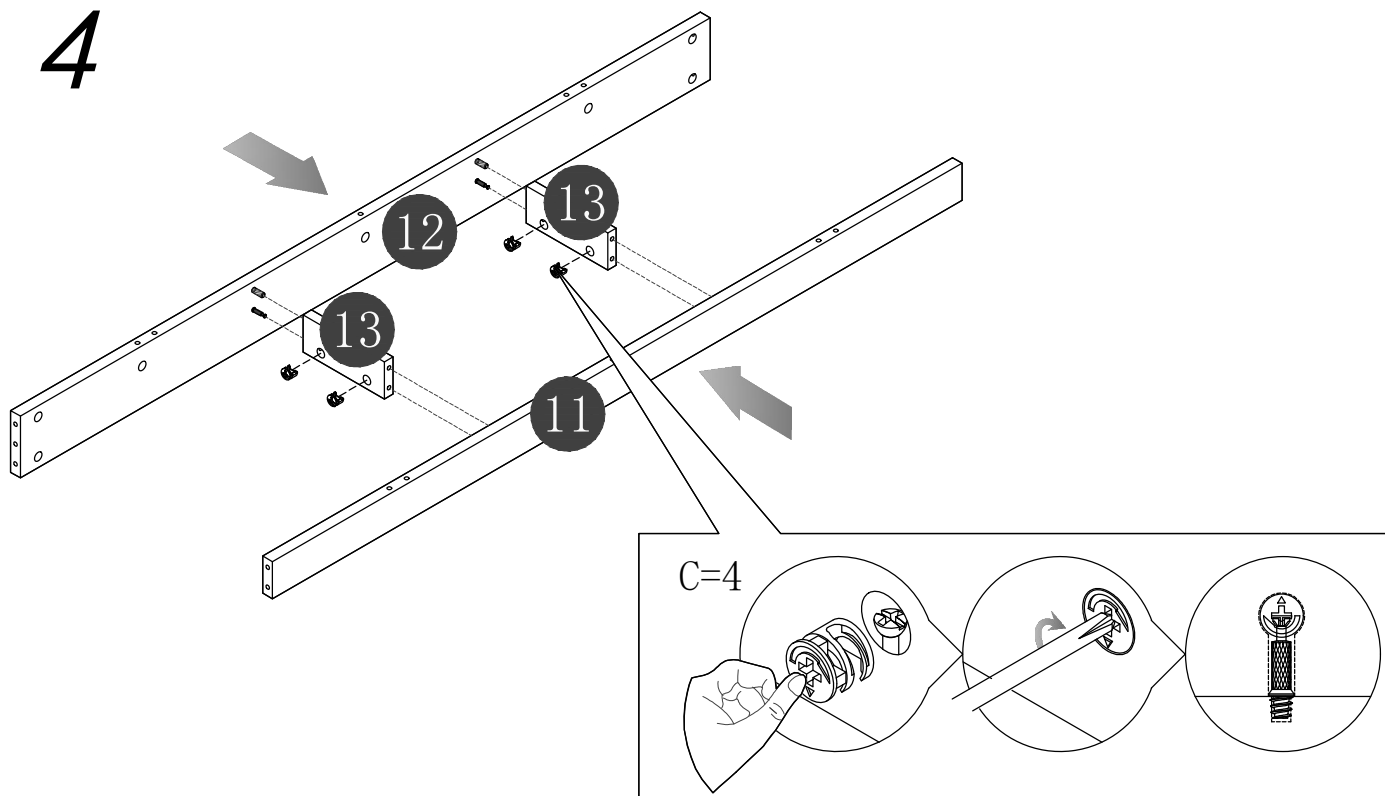 


5

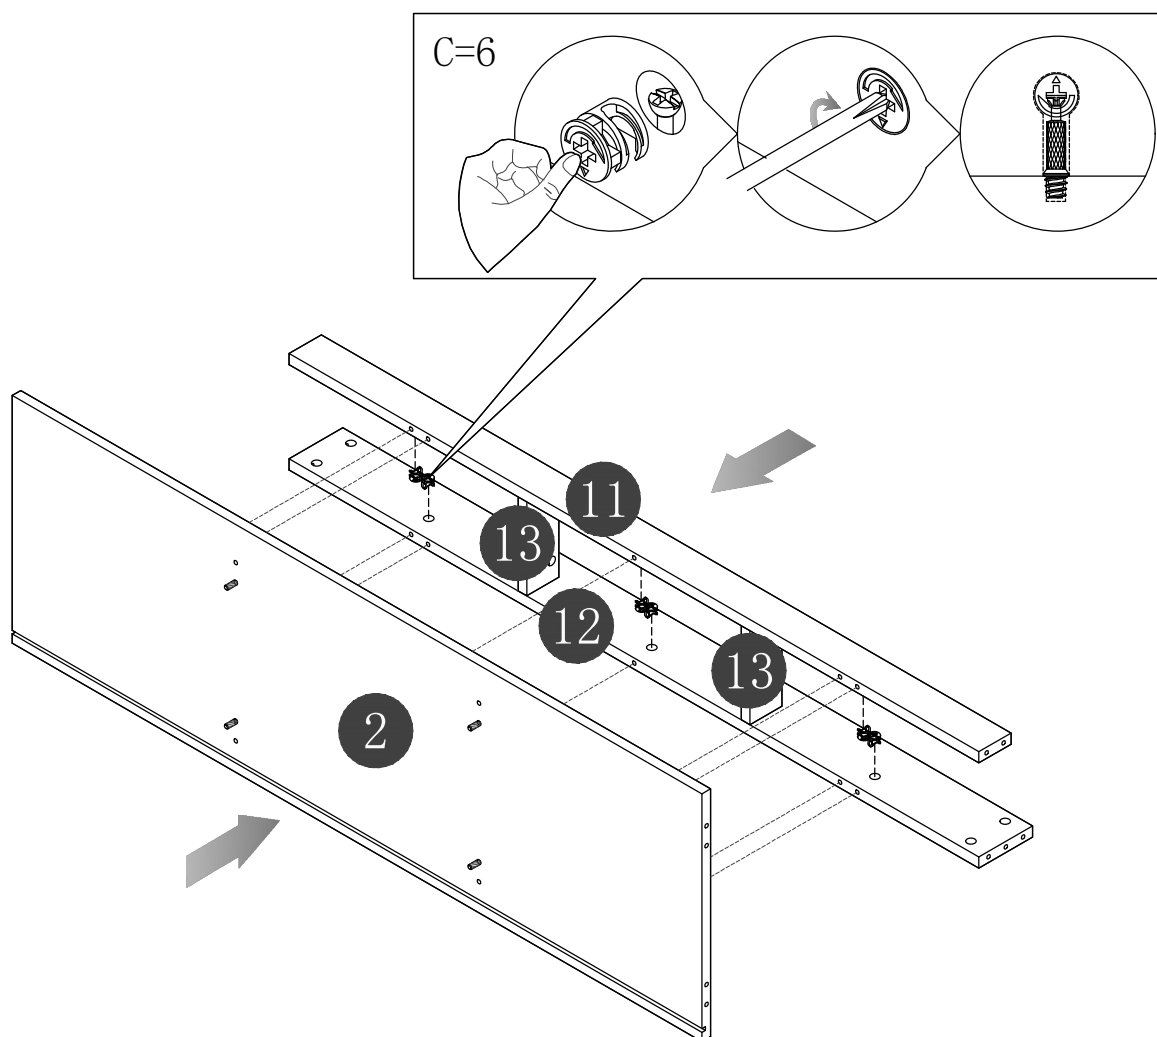 


6

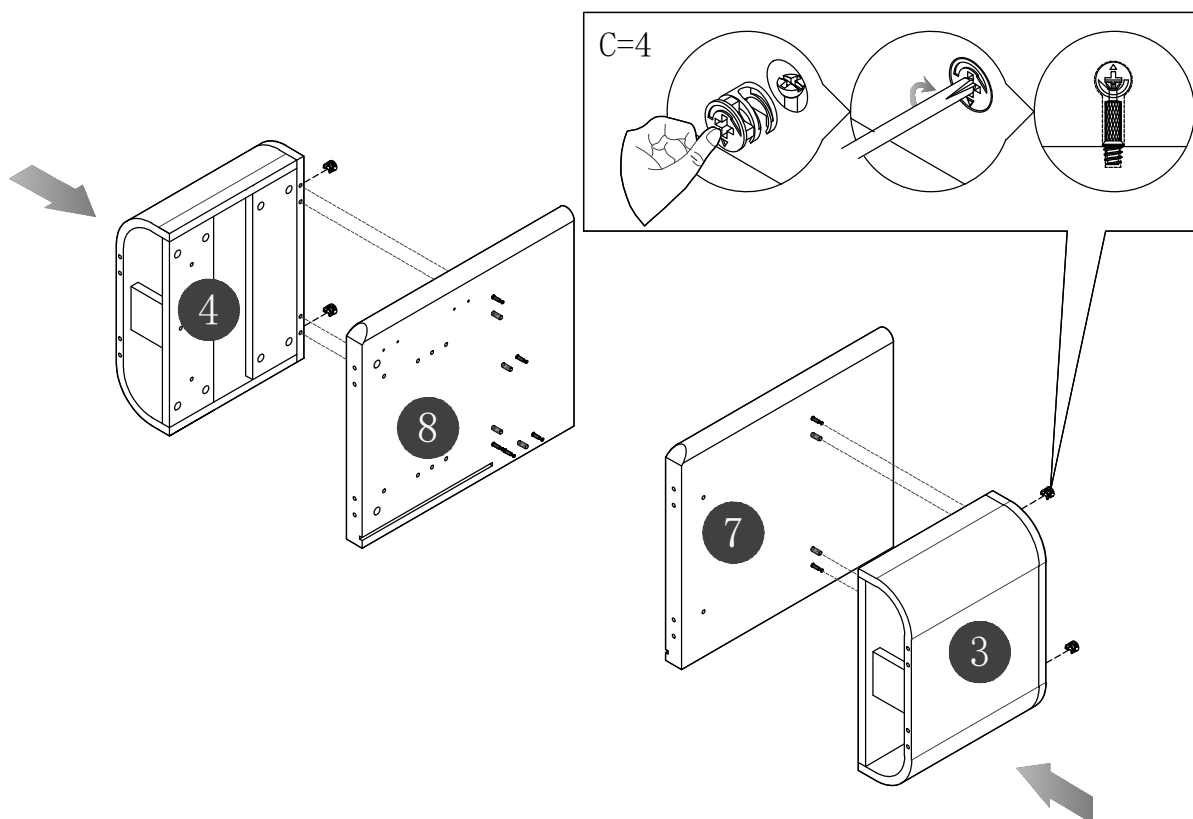 


7

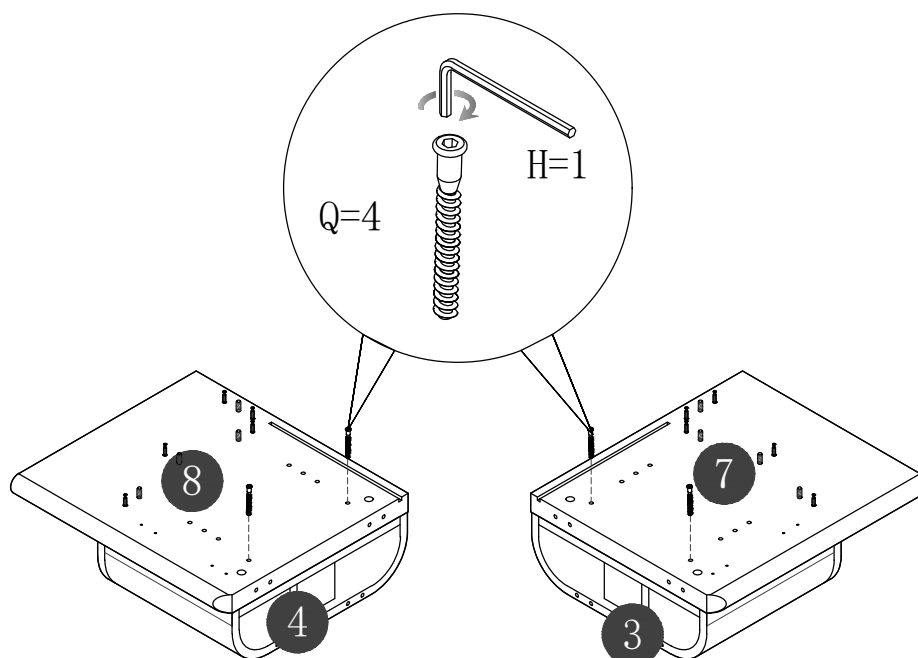 


8

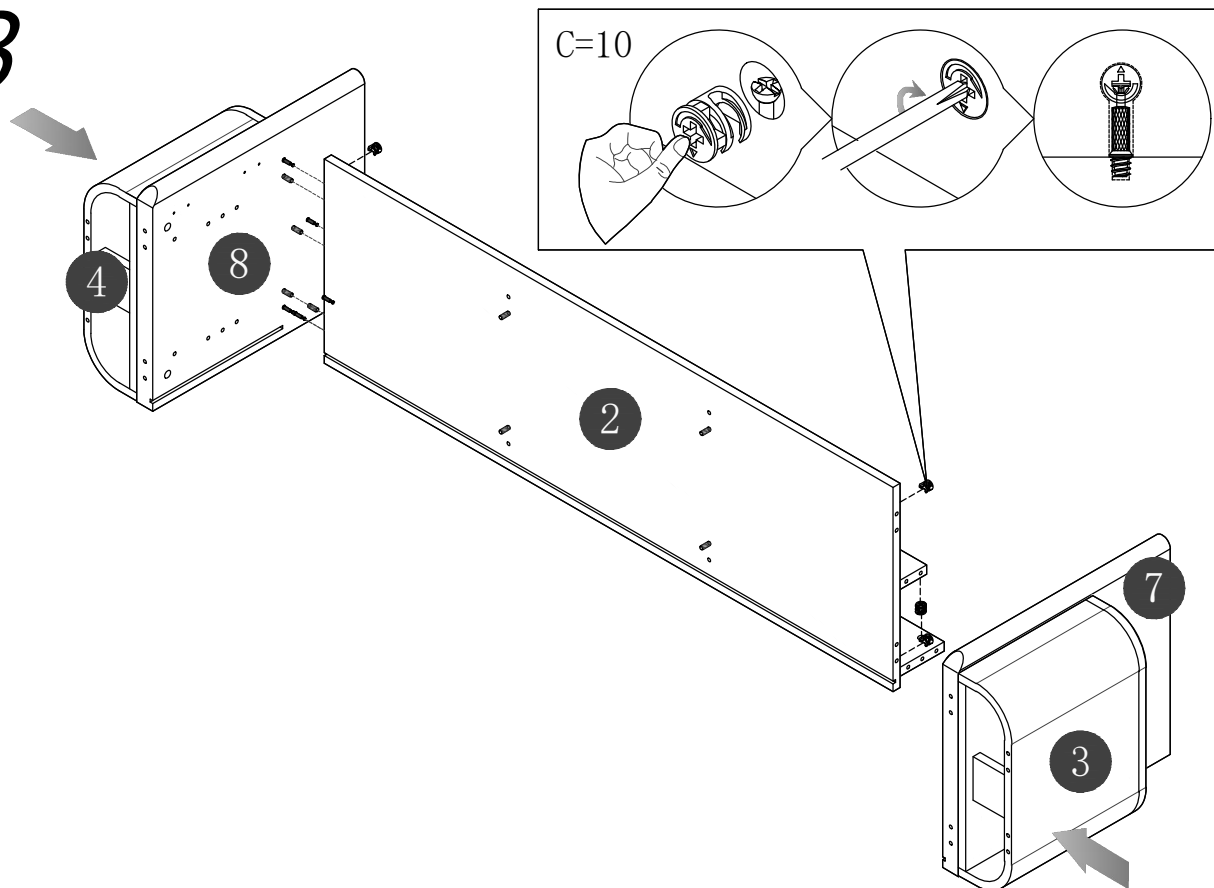 


9

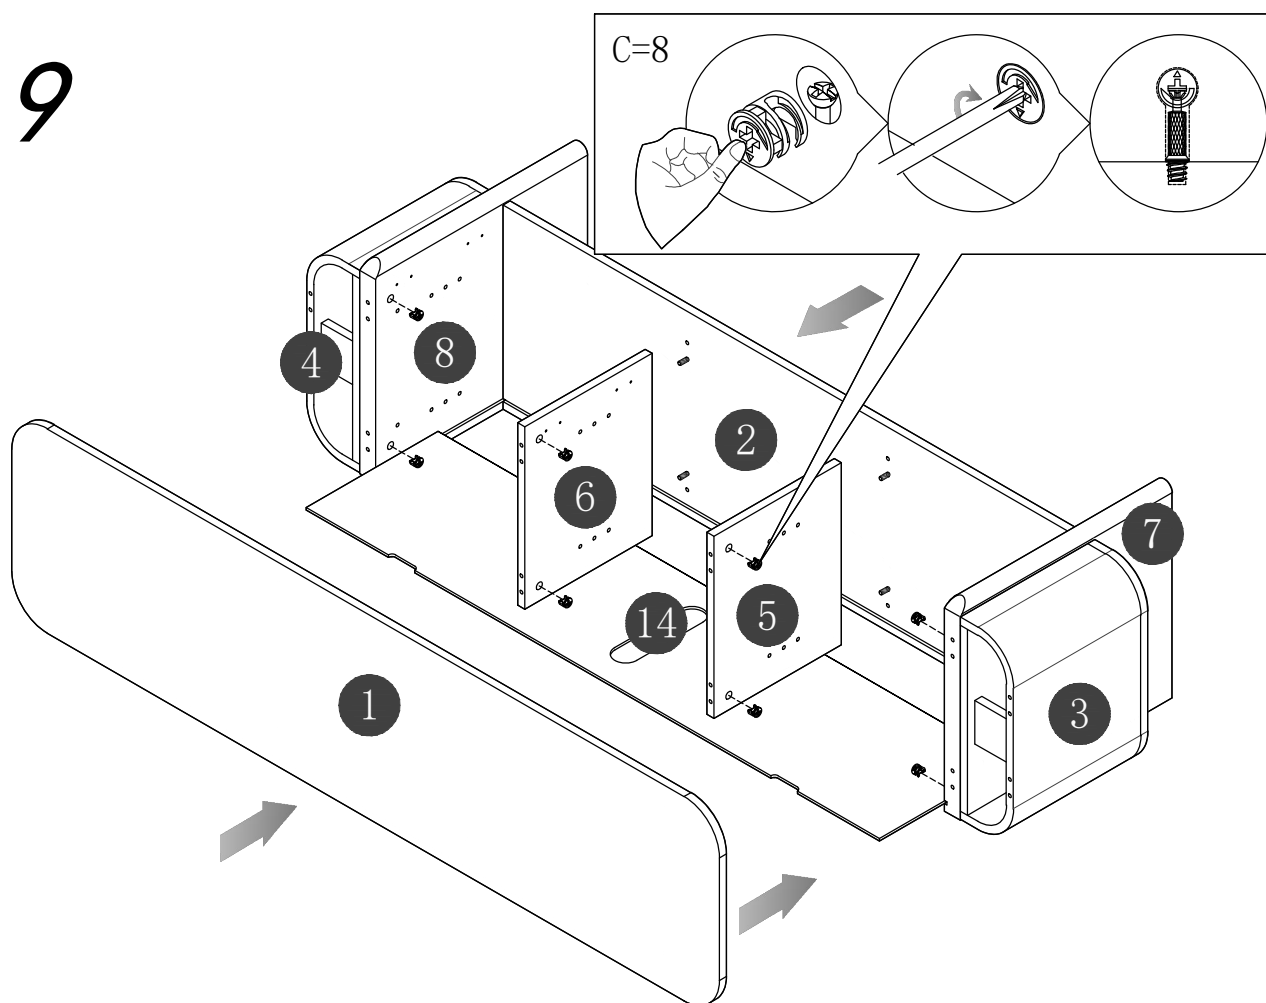 


10

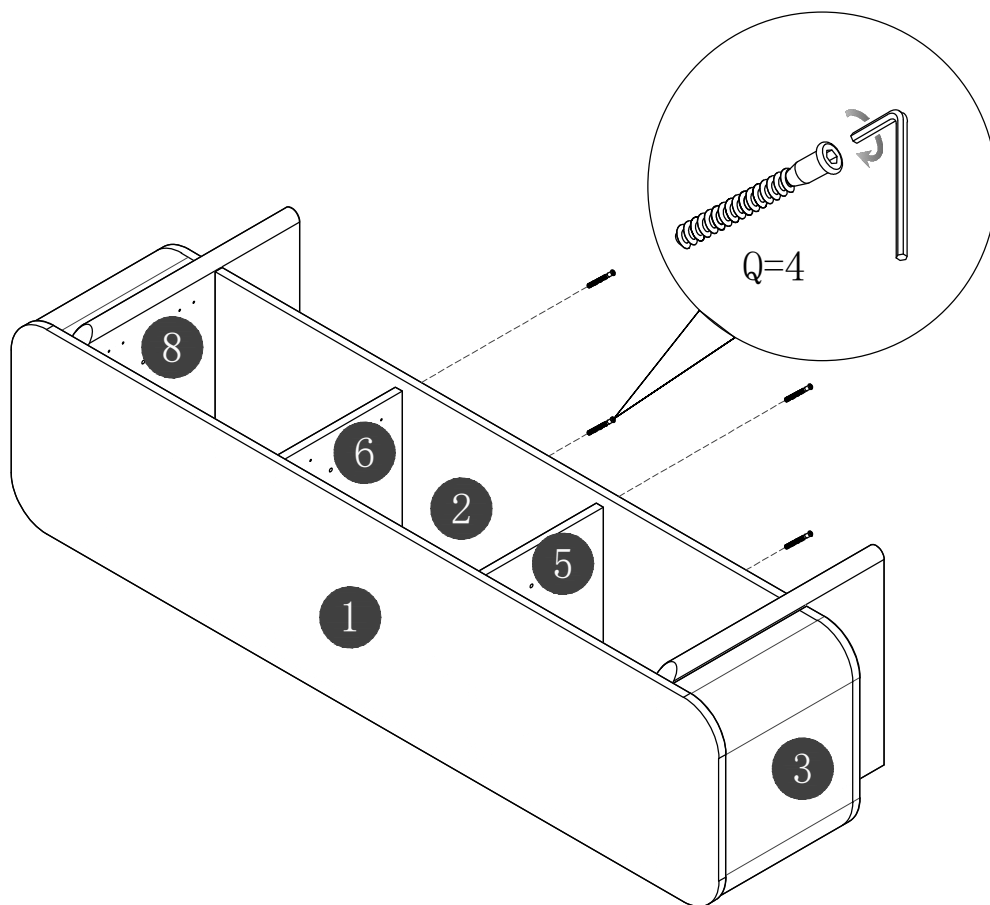 


11

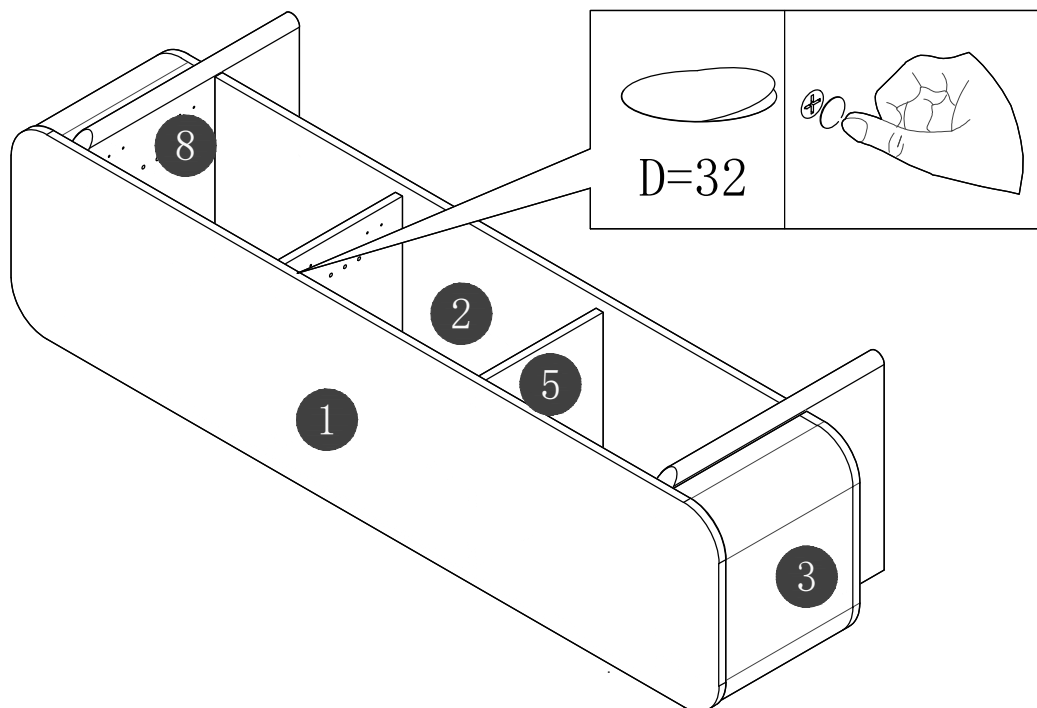 


12

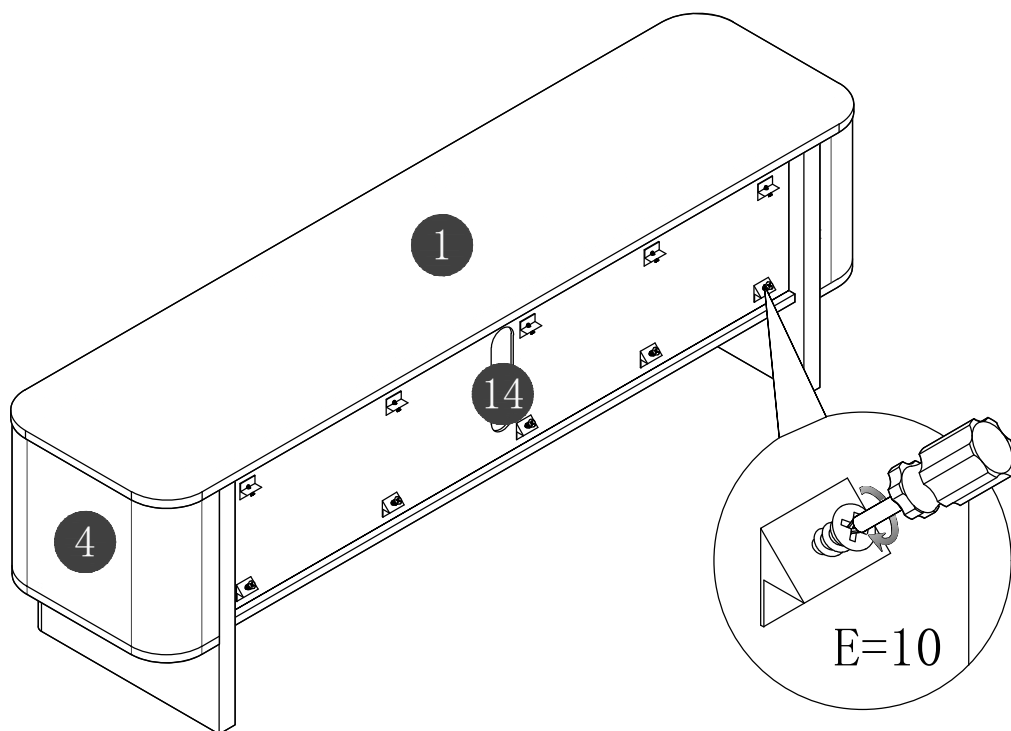 


13

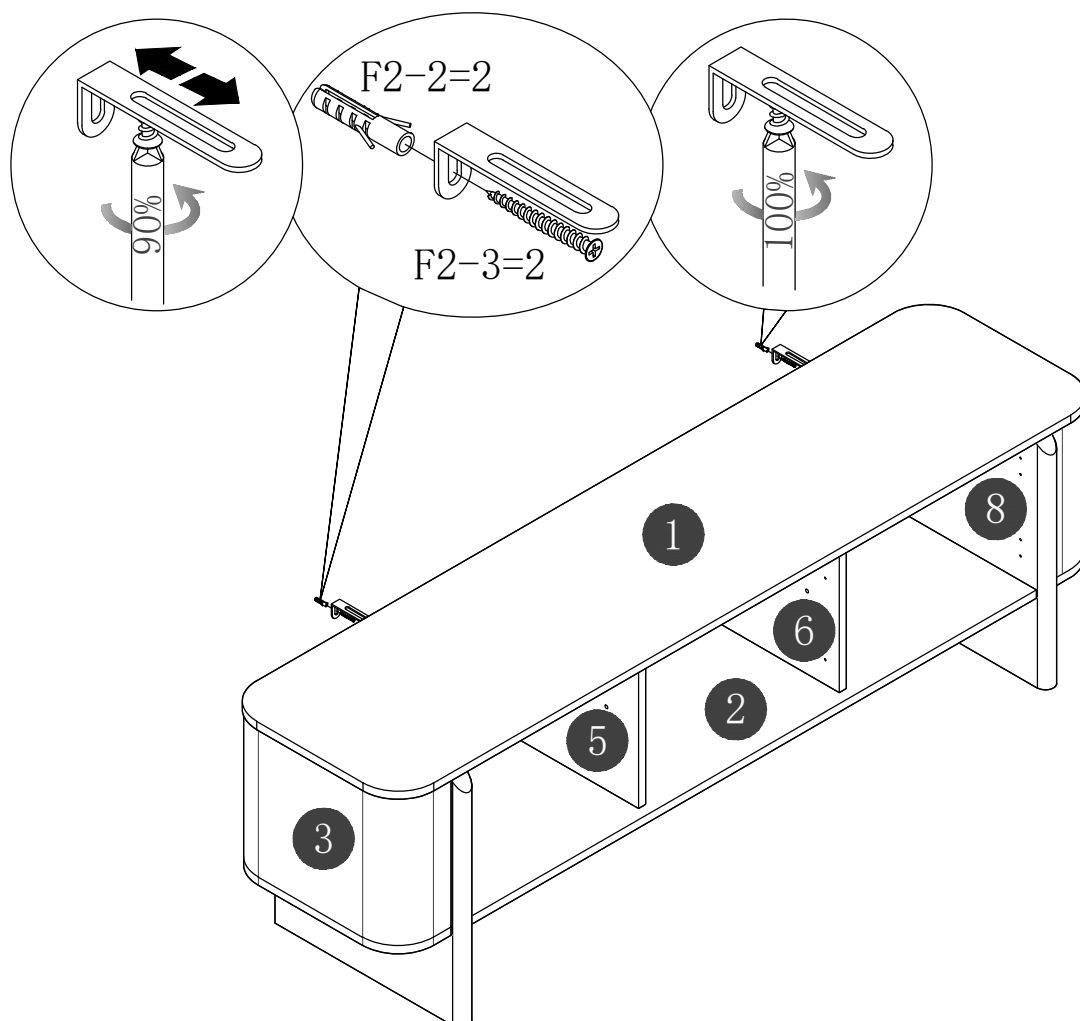 






14

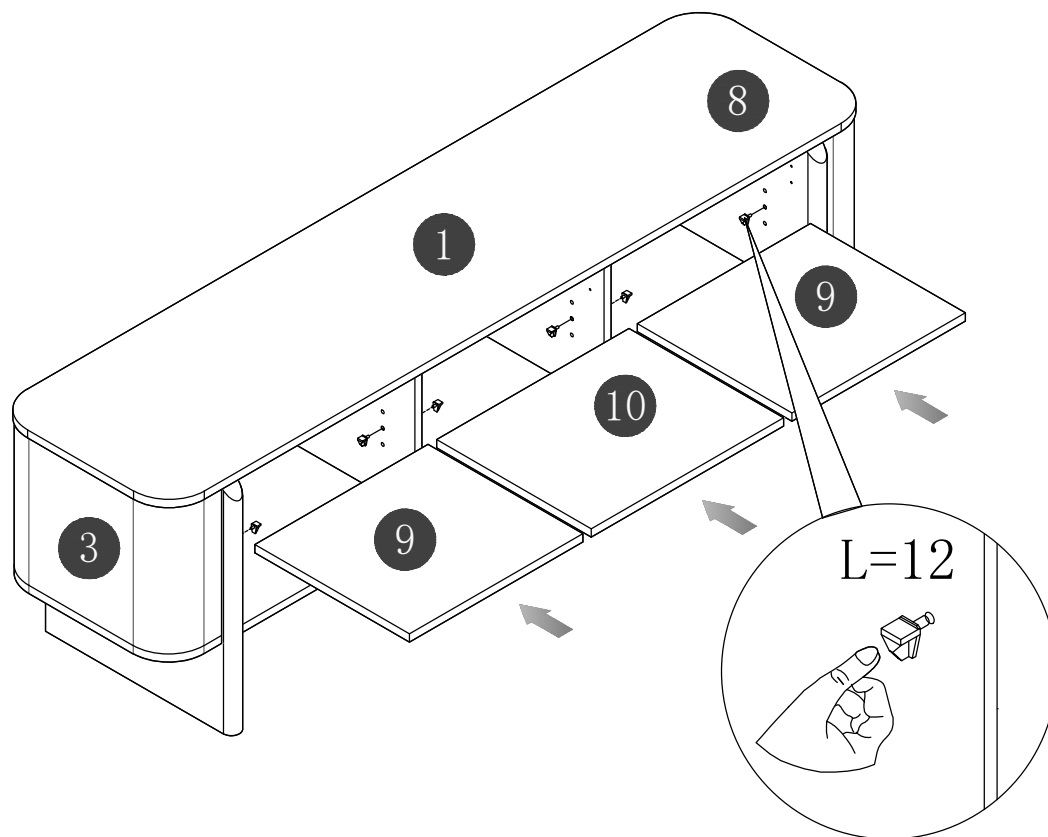 


15

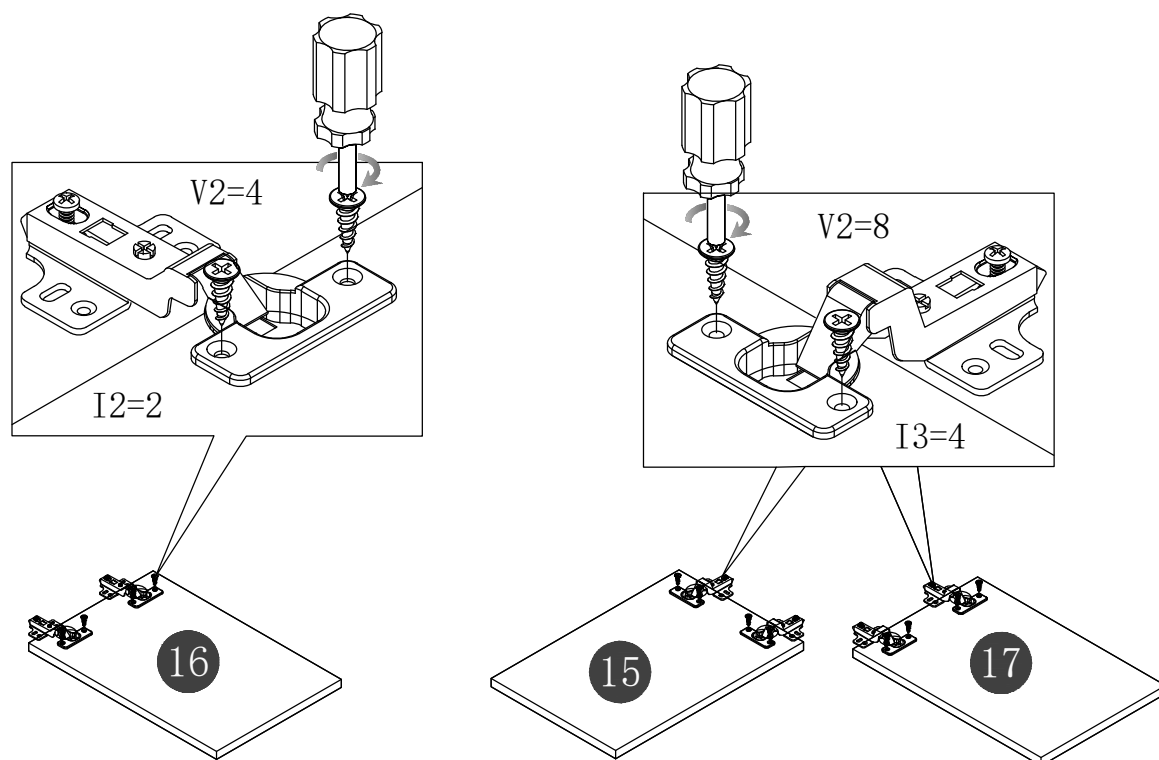 

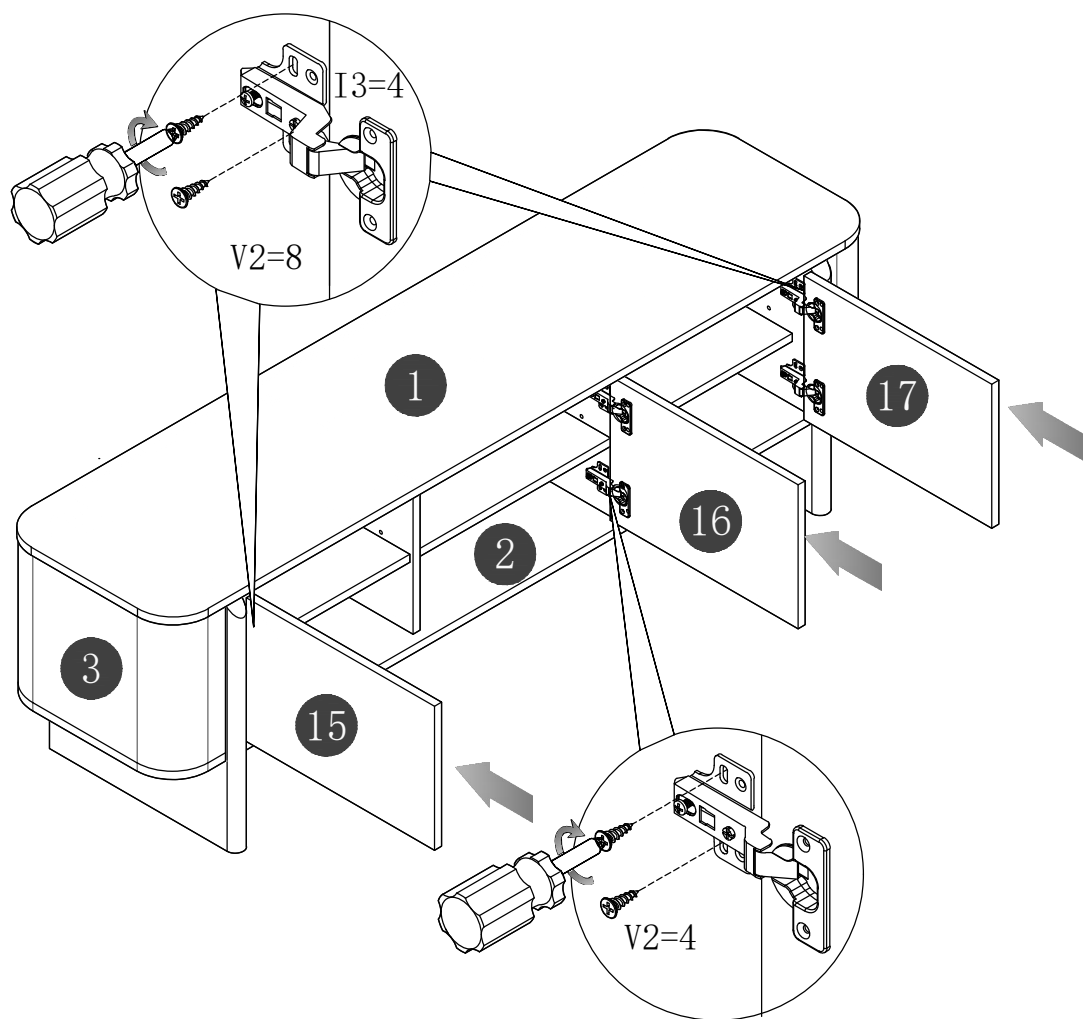 

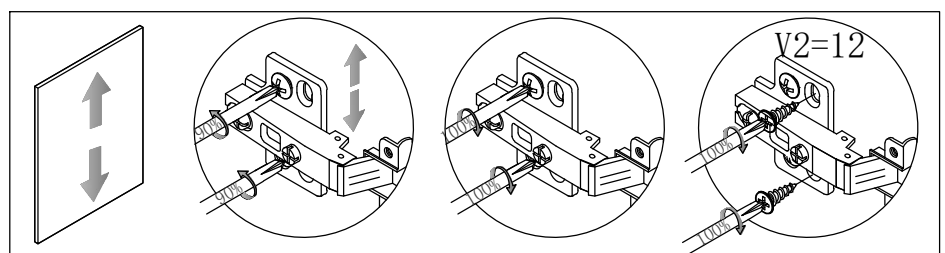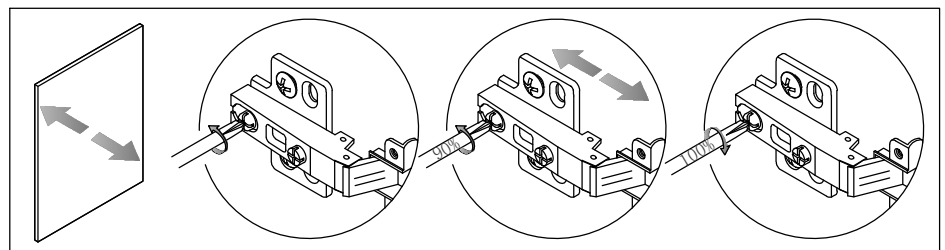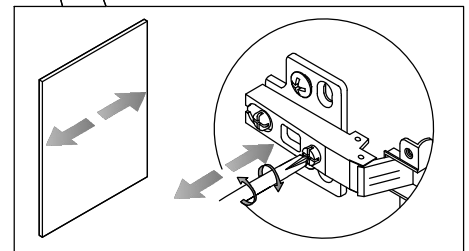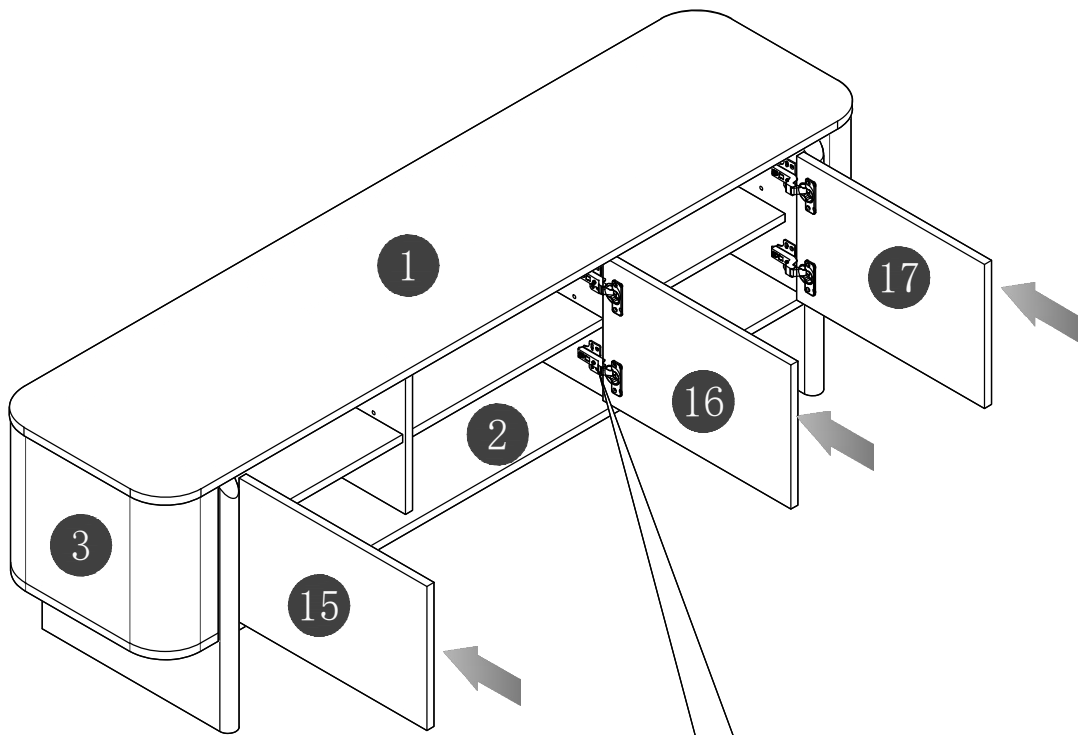    


18

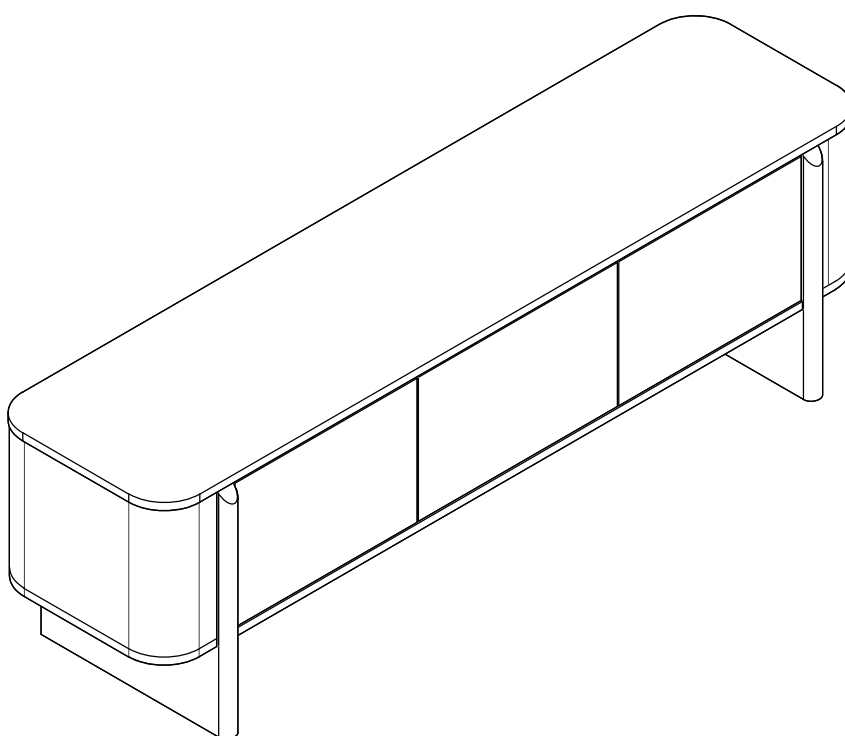 

Finish

 
墨本三门电视柜W160 邮购包装图 1

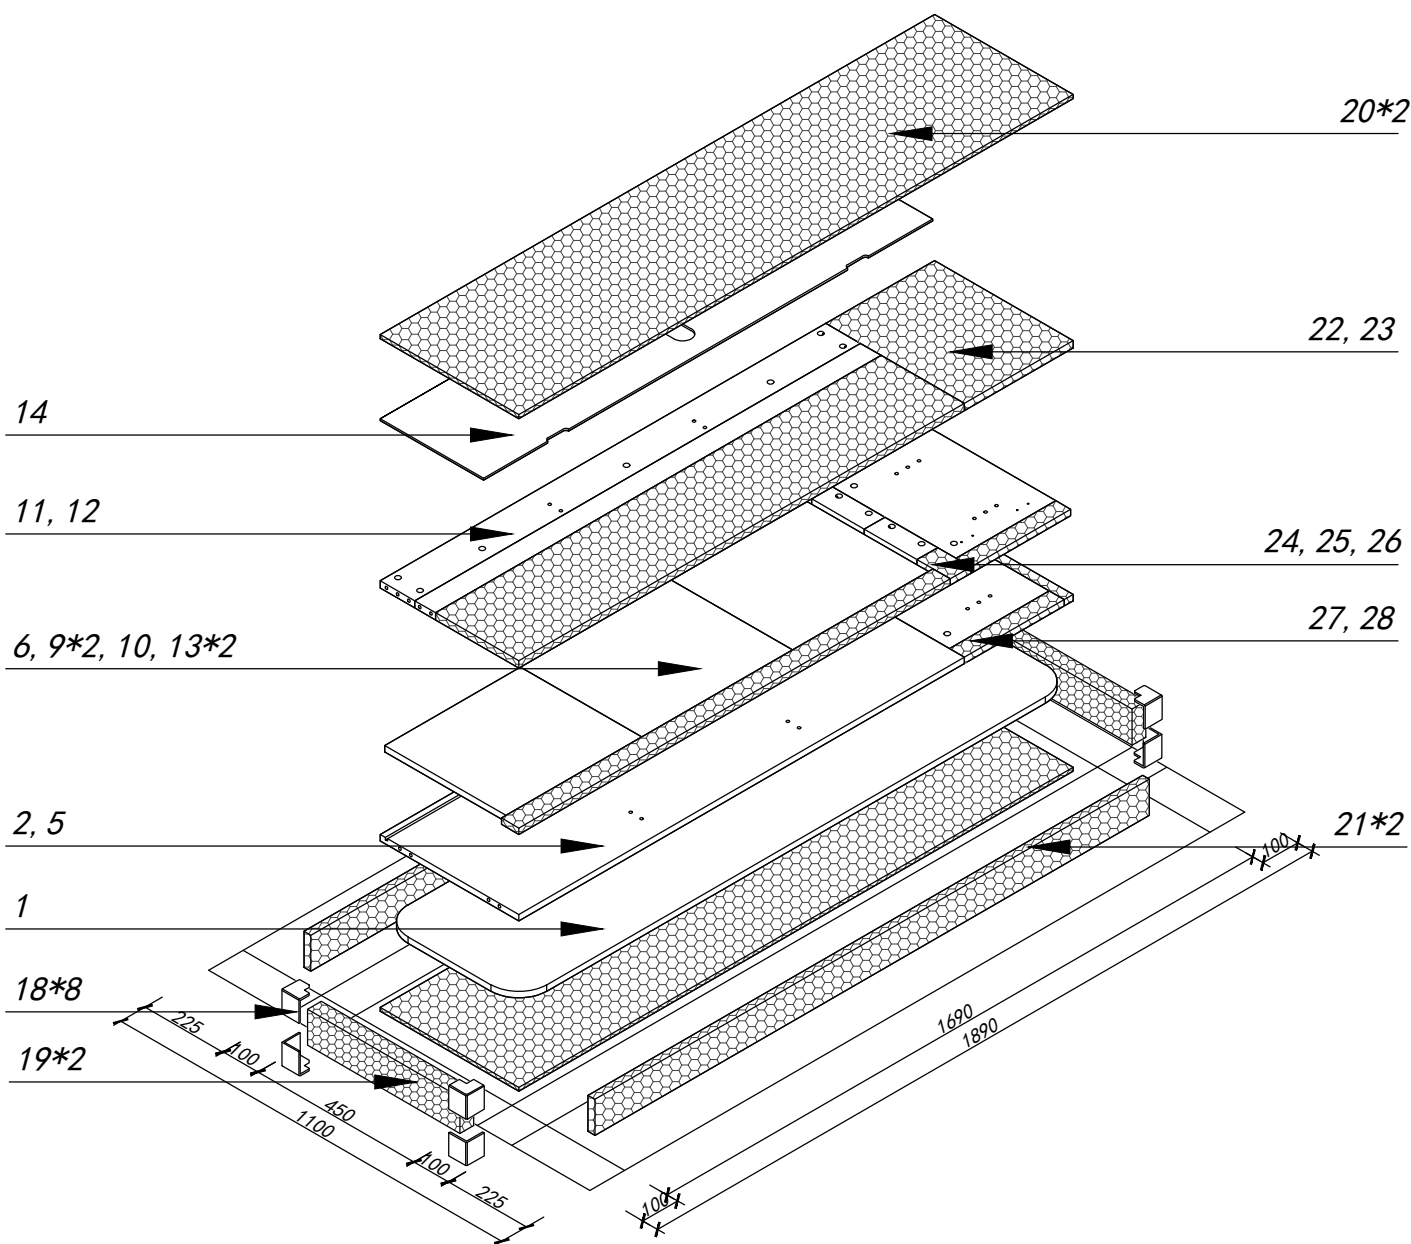

Panel No		Panel Sizes	Quantity
柜体外径		1600*400*70	
纸盒		1690*450*100	
18	护角	50*50*50	8
19	泡沫	440*90*40	2
20	泡沫	1600*400*10	2
21	泡沫	1600*90*20	2
22	泡沫	400*314*15	1

Panel No		Panel Sizes	Quantity
23	泡沫	1286*240*15	1
24	泡沫	288*43*15	1
25	泡沫	96*60*15	1
26	泡沫	1245*50*15	1
27	泡沫	400*26*15	1
28	泡沫	288*43*15	1

 墨本三门电视柜W160 邮购包装图 2

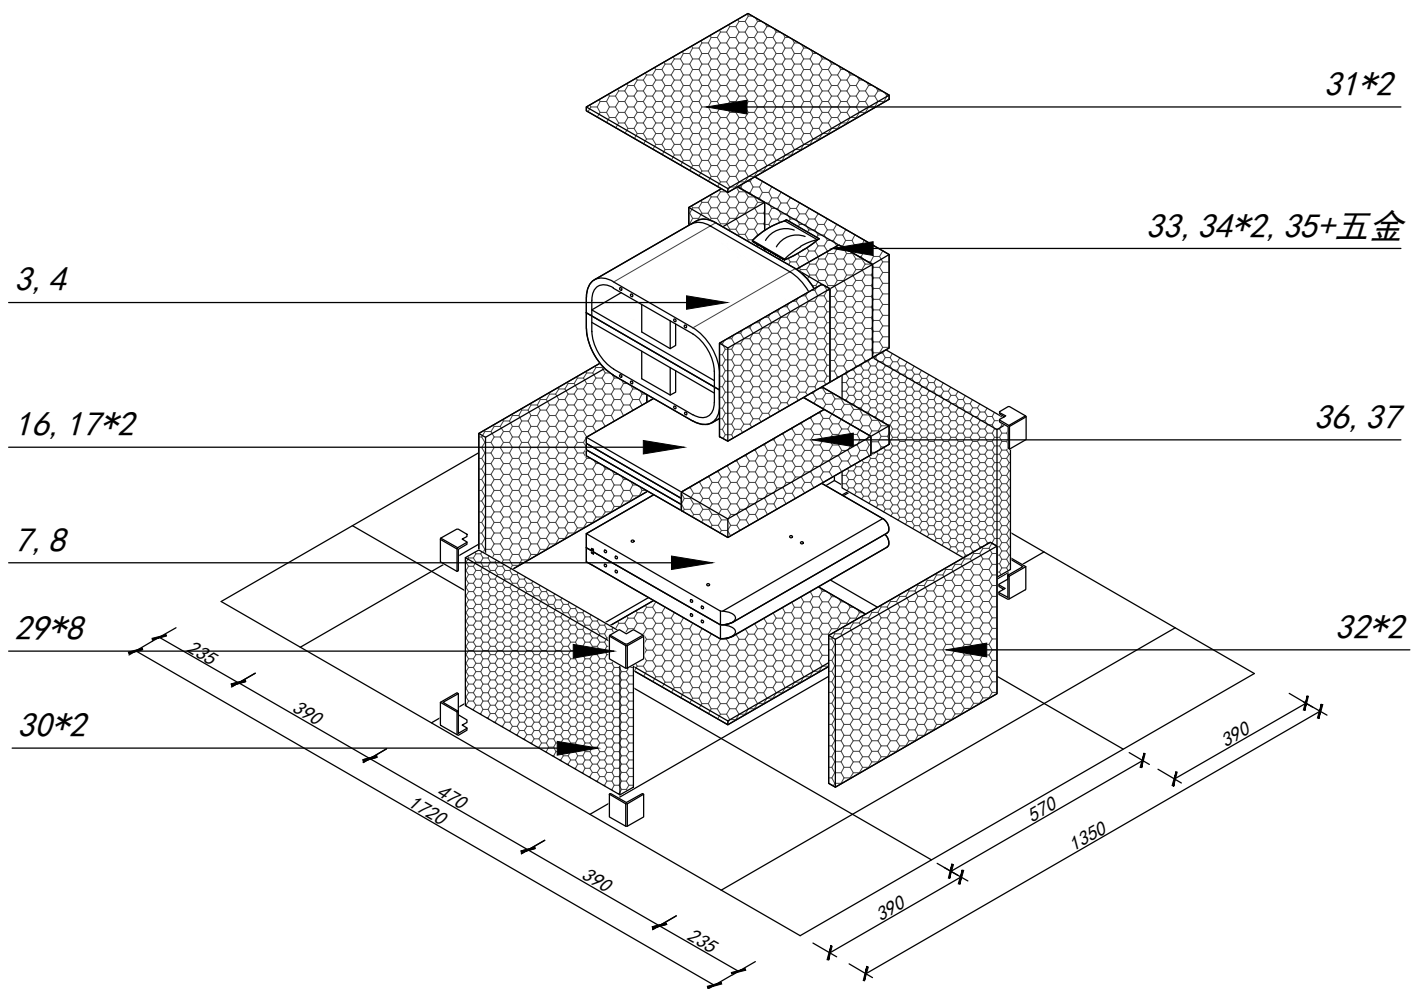

Panel No		Panel Sizes	Quantity
柜体外径		480*420*360	
纸盒		570*470*390	
29	护角	50*50*50	8
30	泡沫	460*380*40	2
31	泡沫	480*420*10	2
32	泡沫	480*380*20	2

Panel No		Panel Sizes	Quantity
33	泡沫	420*240*50	1
34	泡沫	240*126*100	2
35	泡沫	304*240*25	1
36	泡沫	420*55*50	1
37	泡沫	425*138*50	1