


SUBWAY 1350 RECTANGULAR TABLE

ITEM NO. 20-3877T





Required :
15 minutes

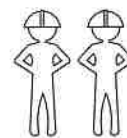

TIPS


- 1 Please review all parts and hardware before disposing of any packaging.
- 2 Check to be sure that all parts and hardware are complete before you start assembly.
- 3 Before beginning assembly, separate each type of screw.
- 4 **Using a screw that is too long will cause damage.**
- 5 Carefully study the screw diagrams below.
- 6 You may receive extra hardware with your unit.
- 7 Place all parts on a clean and smooth surface to avoid the parts from being scratched.
- 8 Keep the product away from heat and humidity.
- 9 Light blue stains and natural wood knots on the product are not considered defects.
- 10 Before start assembly, please categorize the hardware.

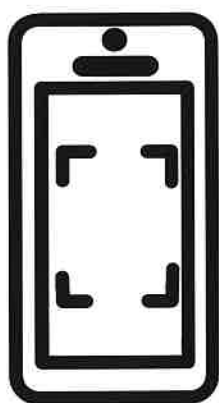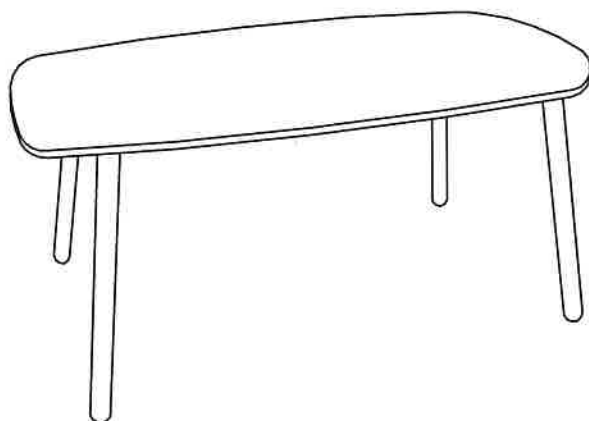

SCAN ME



For Step-By Step Real
Photo Assembly Instructions.

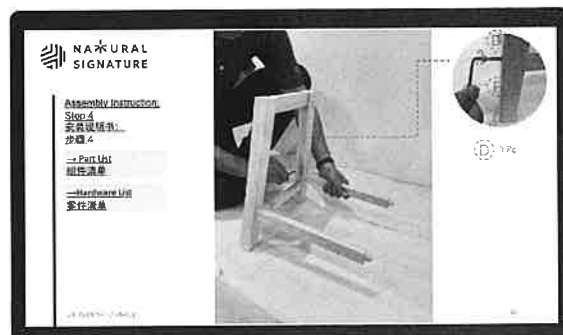

SUBWAY 1350 RECTANGULAR TABLE

ITEM NO. 20-3877T



PART LIST

A Table Top
1Pc



B Leg
4Pcs



HARDWARE LIST *Before start assembly, please categorize the hardware.

C JCBB M8 X 85MM
8Pcs



D SPRING WASHER 5/16"
8Pcs



E FLAT WASHER 5/16" X 22MM
8Pcs




F ALLEN KEY M5
1Pc




ASSEMBLY INSTRUCTIONS

1 STEP 1

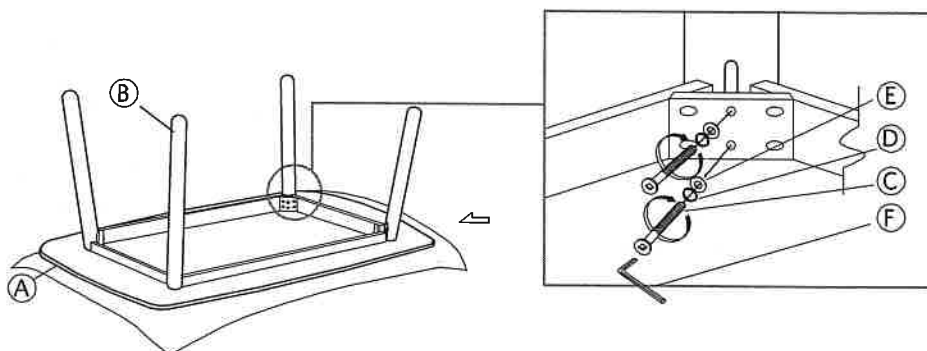

2 STEP 2

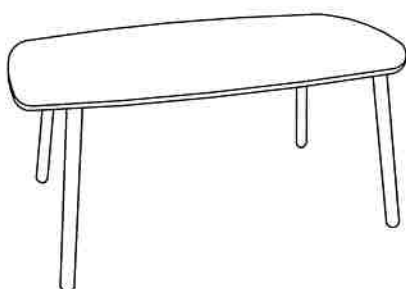

FULLY SET-UP