




# QUEEN / KING BEDFRAME ASSEMBLY INSTRUCTIONS

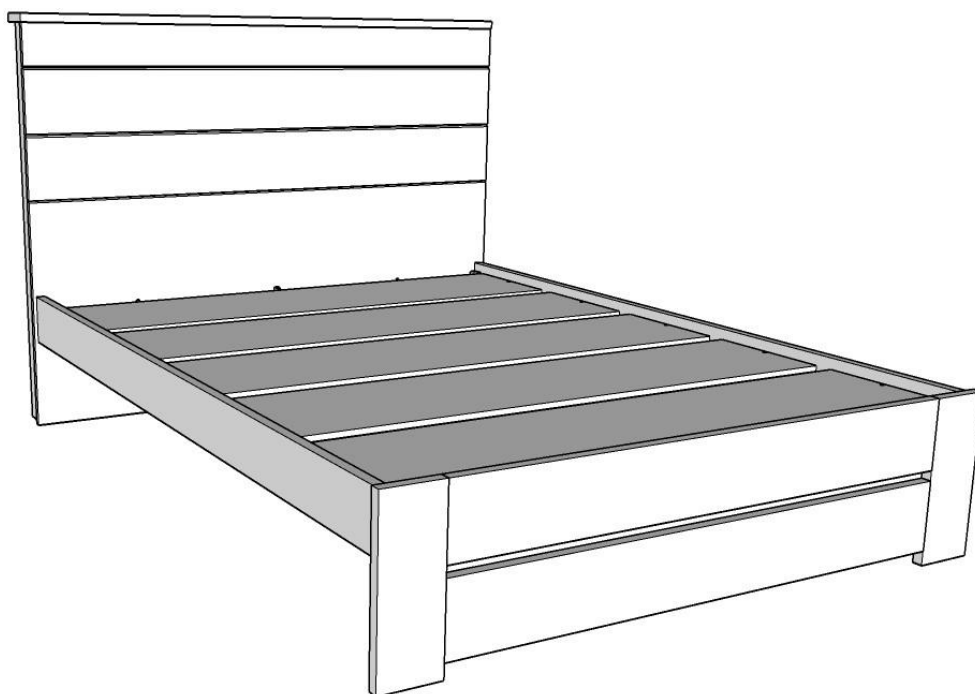

*Note: These instructions are generic, and your bedframe may appear different but will assemble the same way.*

The Platform 10 Queen and King sized Bedframes have been weight tested to 400kgs.



All Platform 10 furniture is backed with a 10-year manufacturer's guarantee from Compac Furniture. Please refer to our website for furniture information and to register your product(s).

[www.platform10.co.nz/productguarantee](http://www.platform10.co.nz/productguarantee)

## PARTS LIST


Please check you have all the necessary parts before beginning to assemble your Bedframe. If any parts are missing or damaged please contact the manufacturers directly, at 0800 7101010, or email [info@platform10.co.nz](mailto:info@platform10.co.nz).

QTY	PART NAME
1	Headboard
1	Footboard
2	Side Rails
1	Centre Rail
5	Plywood Slats
10	Long (Black) Hex Socket Screws
12	Short (Silver) Hex Socket Screws
1	Allen Key Tool


## STEP ONE:

Remove the laminate stickers covering the threads on the headboard. These are in place so the headboard can be used without the frame. Then screw the Short (silver) Hex Socket Screws into six pre-drilled holes in the Footboard and Headboard shown below. Do not screw these in completely, leave an approximately 4mm gap.

### FOOTBOARD

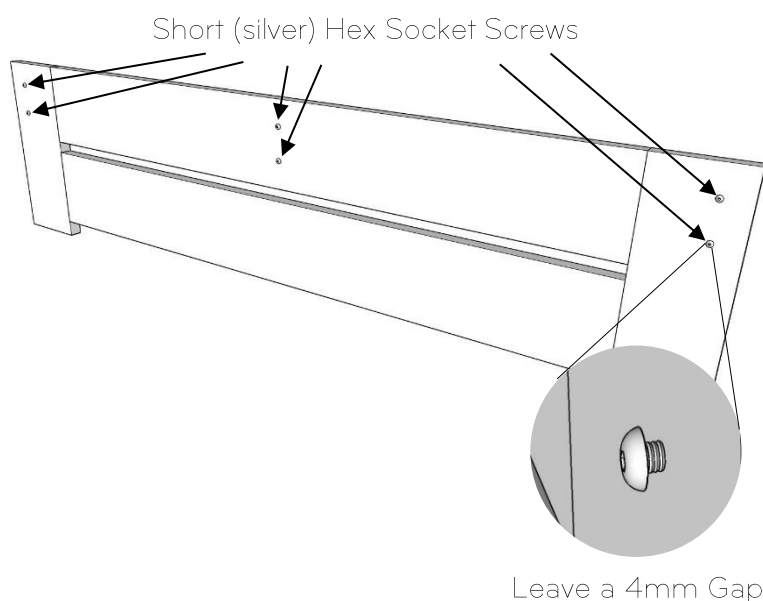


### HEADBOARD

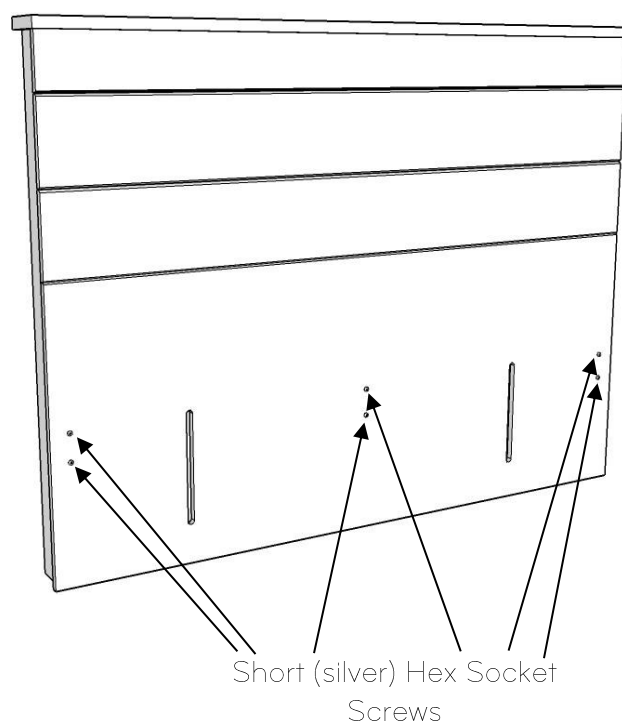

## STEP TWO:

Take one of the Side Rails and slot the keyhole shape holes in the metal bracket over the two Screw Heads in the Footboard. The Side Rail should 'click' down into place. Then use the Allen Key provided to tighten the screws firmly.


**IMPORTANT:** Secure the Side Rail to the Footboard by tightening the screws with the Allen Key before moving on to Step Three.

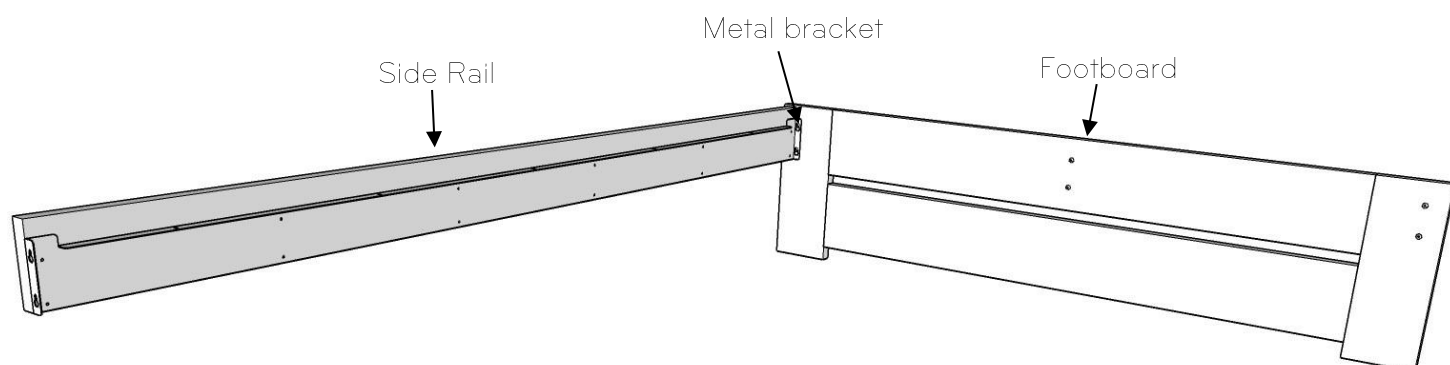

## STEP THREE:


Take the other end of the same rail and slot the keyhole-shaped hole over the two screws in the Headboard to connect it to the Footboard.

Repeat Steps 2 & 3 for the other Side Rail.

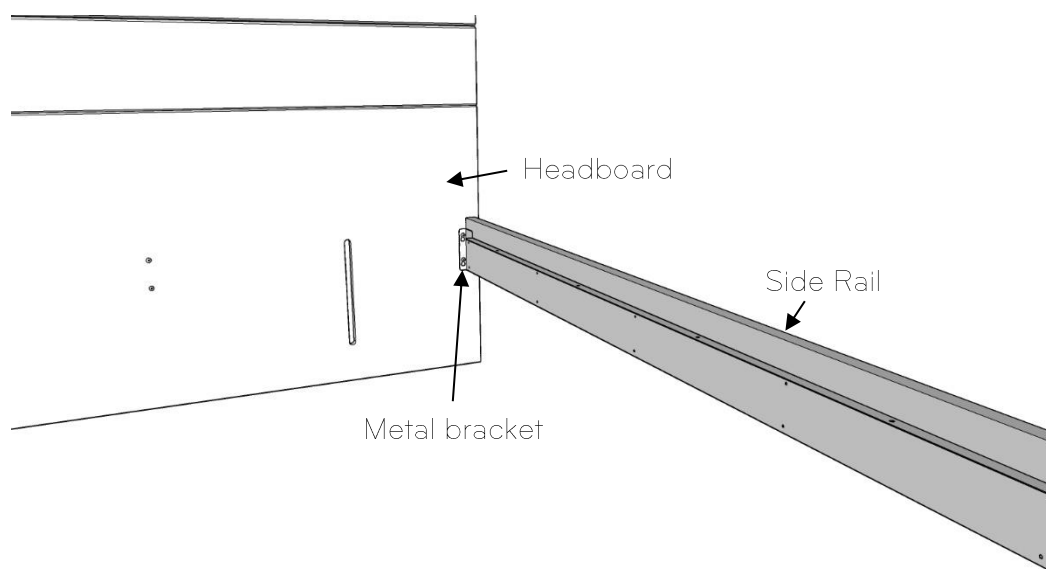


## STEP FOUR:

Repeat Steps 2 & 3 for the Centre Rail.

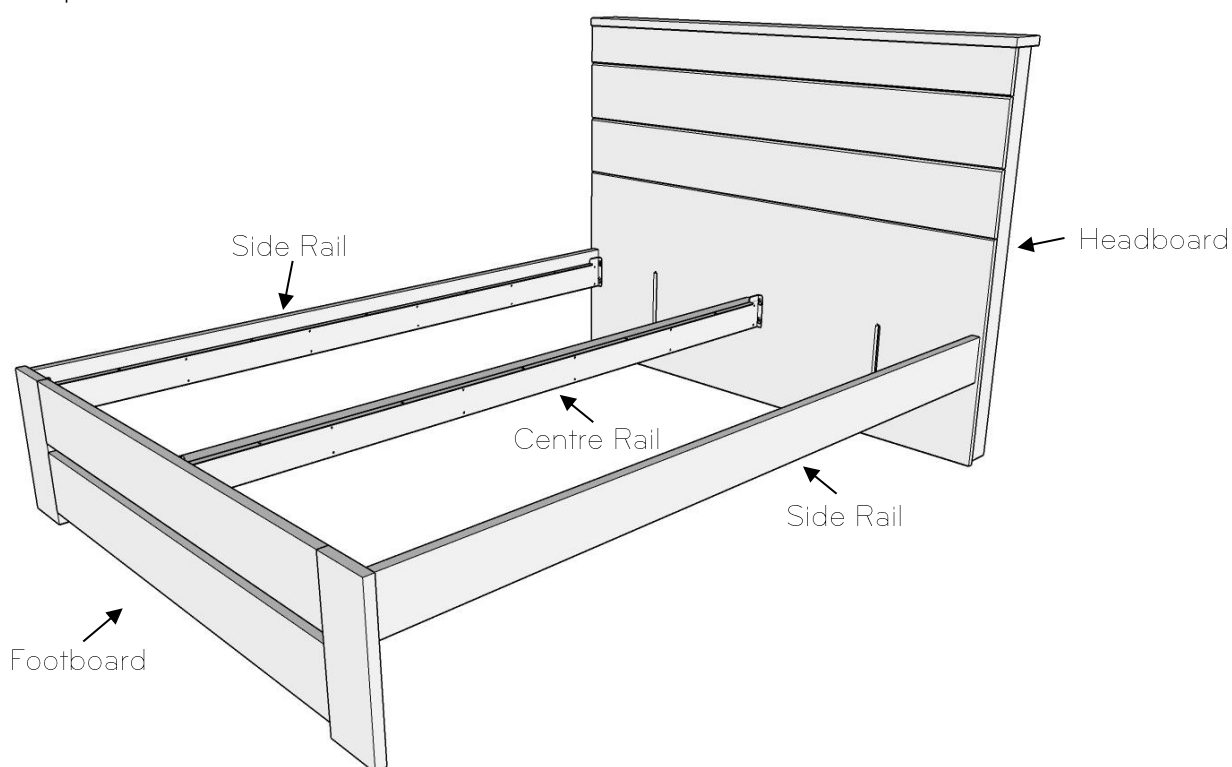

## STEP FIVE:

Take the five Slats and lay them between the rails. Align the holes on the slats with the holes in the rails and screw in the Long Hex screws. Tighten screws with the Allen Key.

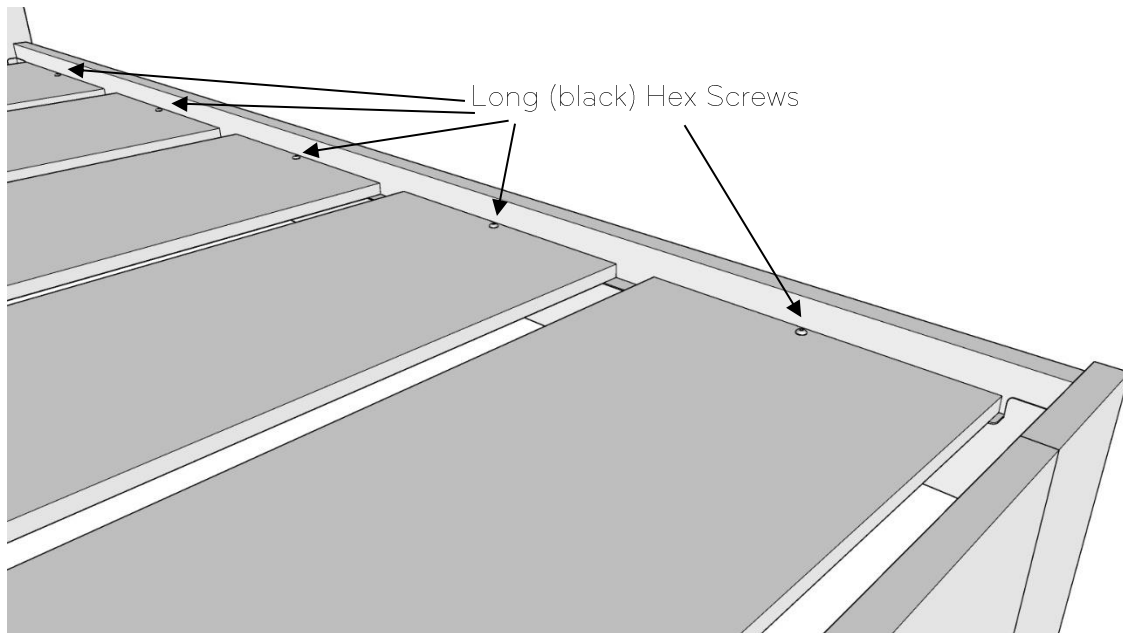

## CONGRATULATIONS

Your Platform 10 Bedframe is now complete. ENJOY!