





# 1000 Wide Shelf Desk

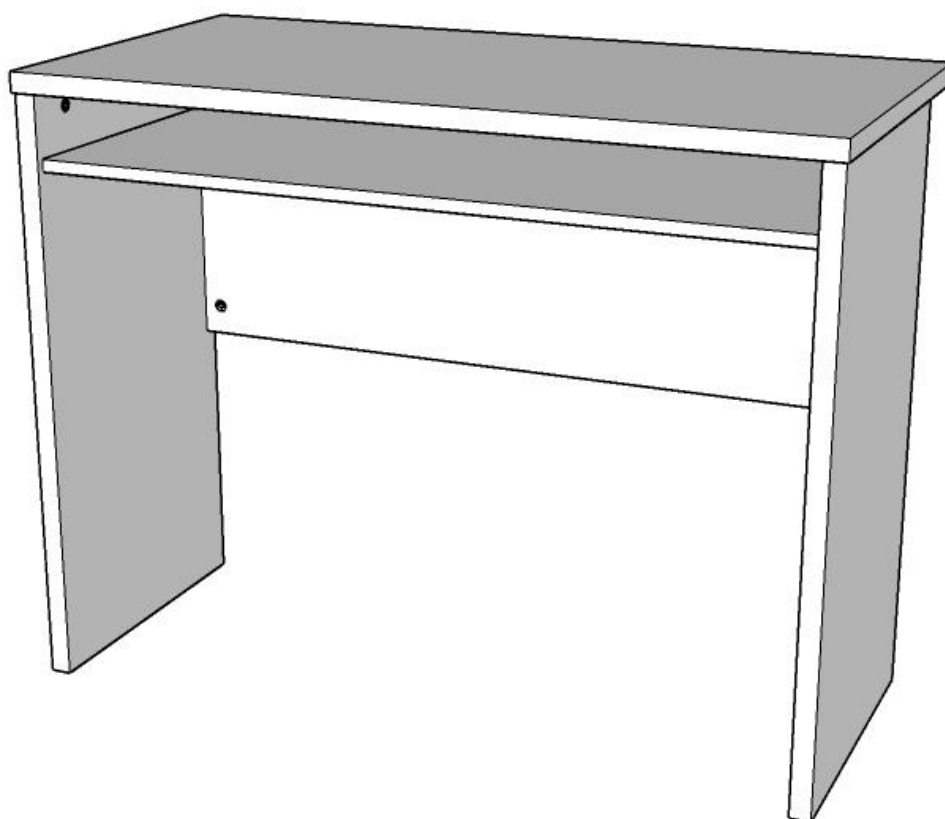

## INSTRUCTION MANUAL



# Assembly Details

<p><b>30</b>Min</p> <p>Approximate Assembly Time</p>	 <p>1 Person Assembly</p>	<p>Floor Area 3m x 2m</p>  <p>Required Assembly Space</p>
 <p>Tools Required</p>		

## Tips before you start

1. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent damage
2. Please check that all parts are present before you start the assembly of your furniture
3. For ease and speed of assembly, we recommend that you identify all the parts required for each step before commencing with assembly
4. For larger items, please ensure that you have sufficient space (as indicated on page 1)
5. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily
6. During Assembly please take care not to over-tighten hardware as this may damage the product
7. Always place the product on a steady and stable surface
8. Do not use the product as a stepladder
9. This product is intended for indoor, household use only as it is a non-industrial product

## Care and Maintenance

- ✓ Please periodically check all things and re-tighten as necessary
- ✓ To clean your item, please use a damp cloth and wipe clean
- ✓ Never allow any kind of liquid on your furniture
- ✓ Please do not place hot items (eg. Hot drinks) directly on to the surface

# Parts List

QTY	PART	MEASUREMENTS	NOTES
1	Top	1000 x 500 x 25mm	Laminate on one side.
1	LH End	745 x 396 x 25mm	Laminate on both sides.
1	RH End	745 x 396 x 25mm	Laminate on both sides.
1	Modesty	390 x 944 x 15mm	Laminate on both sides.
1	Shelf	366 x 944 x 15mm	Laminate on one side.


# Hardware List



14 x  
Connecting  
Bolts




15 x Large  
Cams  
(15mm)



8 x Dowels




4 x Nail on  
Glides



8 x Stick-on  
Cam Covers

# Cam Installation & Operation Guide



The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

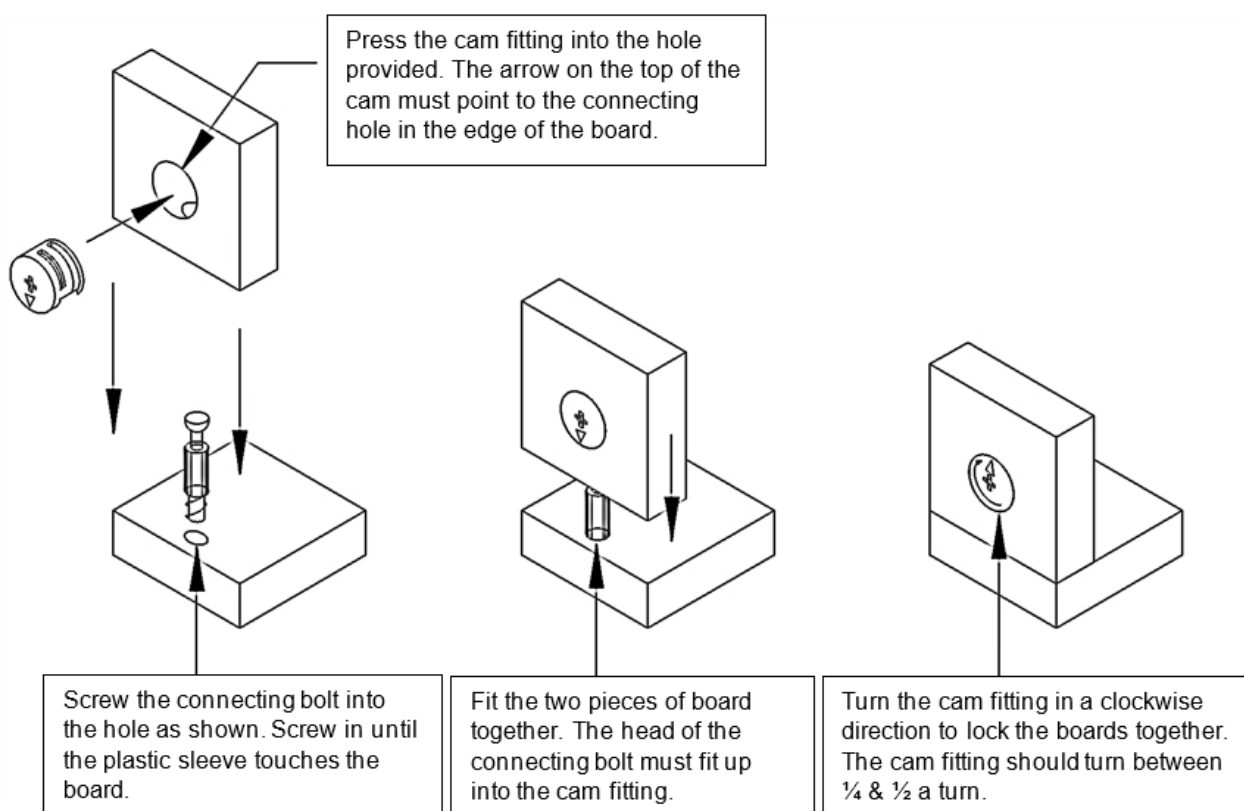

# Assembly




## STEP 1: Top

- To begin assembly, lay the top finished side down on a clean and clear surface
- Screw **four Connecting Bolts** into the holes as shown

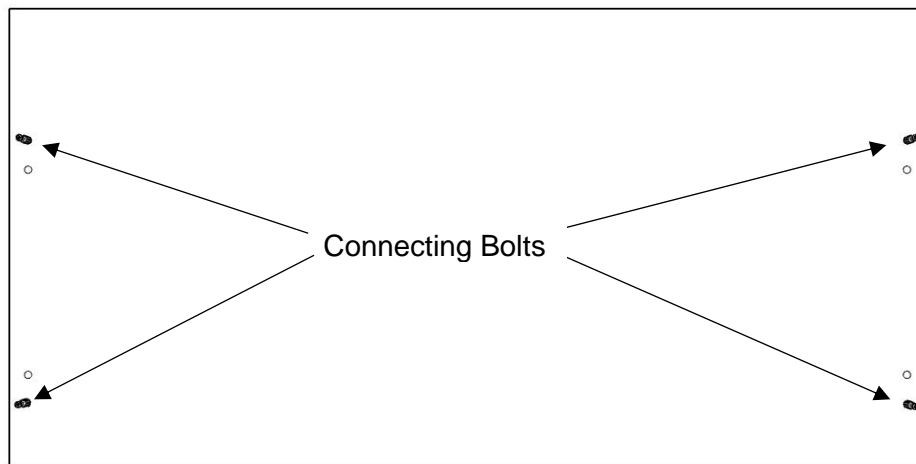




## STEP 2: LH End

- Insert **two Large Cams** as shown (make sure the arrow on the top of the Cam points towards the top edge of the End).
- Push **two Dowels** into the top edge of the End
- Screw **four Connecting Bolts** into the holes as shown
- Tap the two Nail on Glides into the bottom of the **Ends** as indicated below. Space them about **50mm** in from the front and back edges.

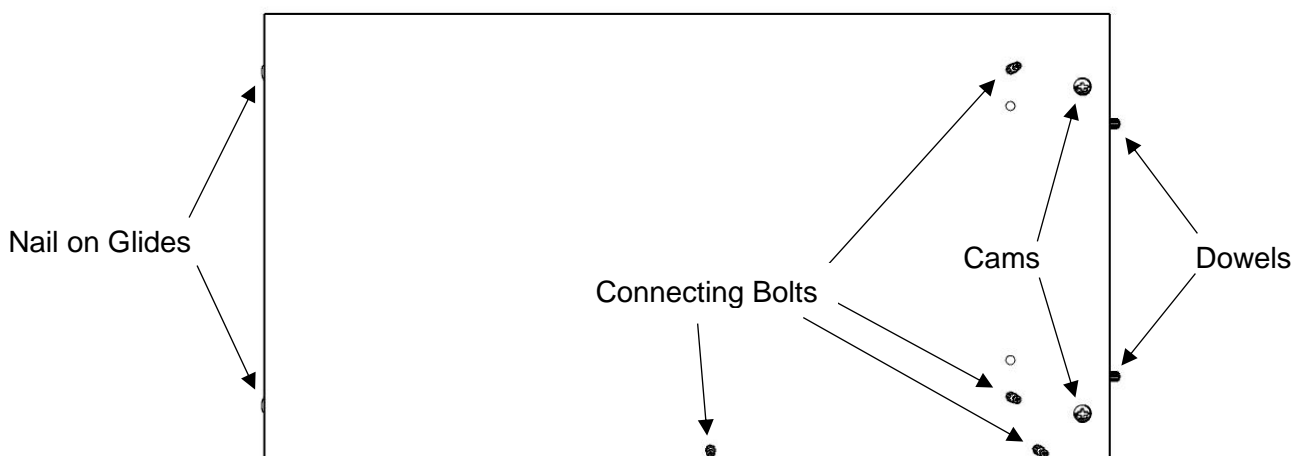



### STEP 3: RH End

- Repeat the previous steps to install the hardware in the RH End.

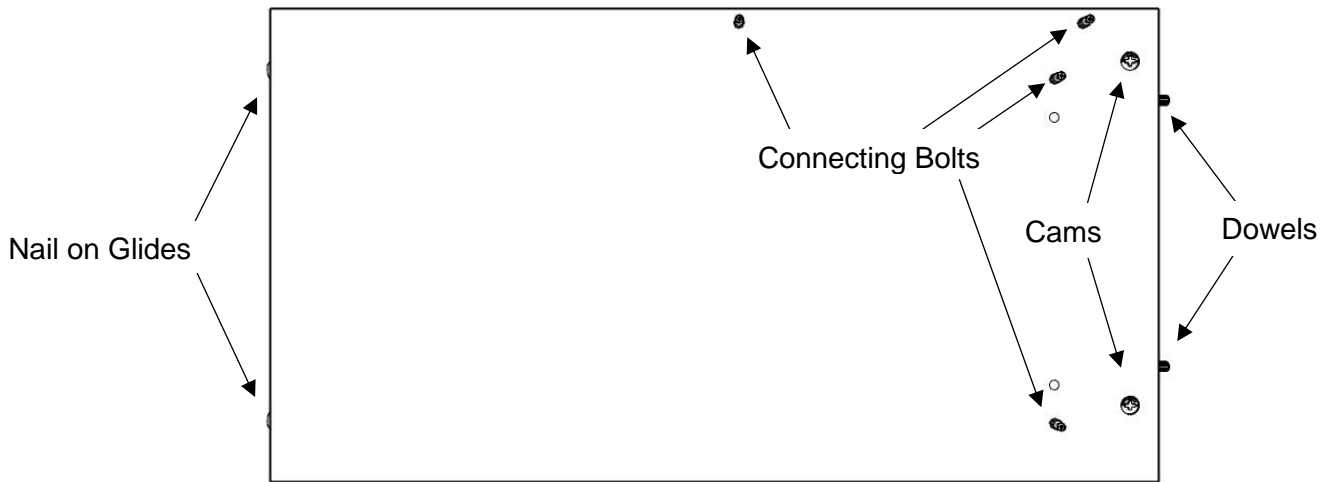


### STEP 4: Modesty

- Install **four Large Cams** into the Modesty as shown below (*ensure the arrow on the top of the Cam points towards the edge*).
- Install the **two Connecting Bolts** as indicated below.

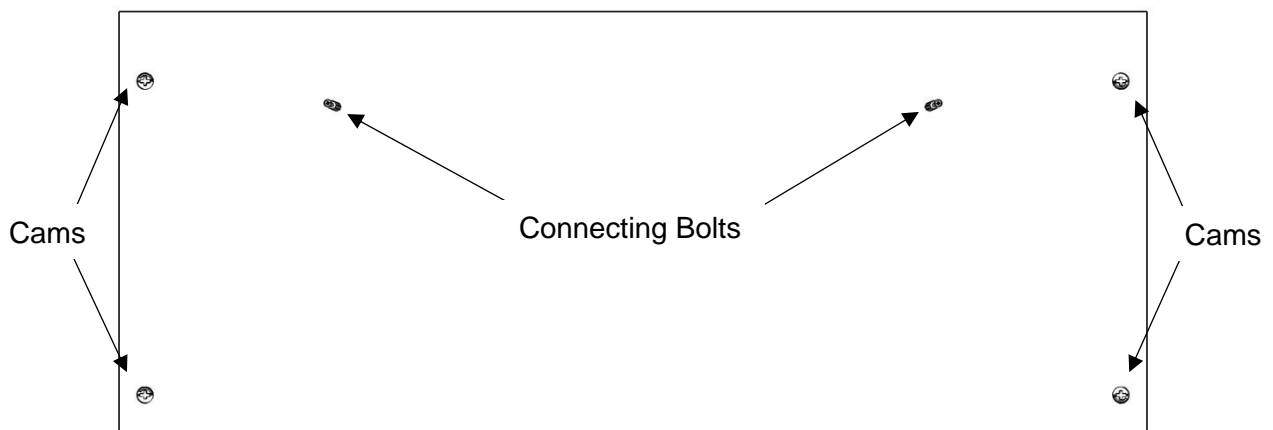


## STEP 5: Attach the Shelf to the Modesty

- Attach the **Shelf** to the **Modesty** by fitting the Connecting Bolts with the corresponding pre-drilled holes as shown below.
- Lock the pieces together by turning the Cams  $\frac{1}{4}$  -  $\frac{1}{2}$  of a turn in a clockwise direction.

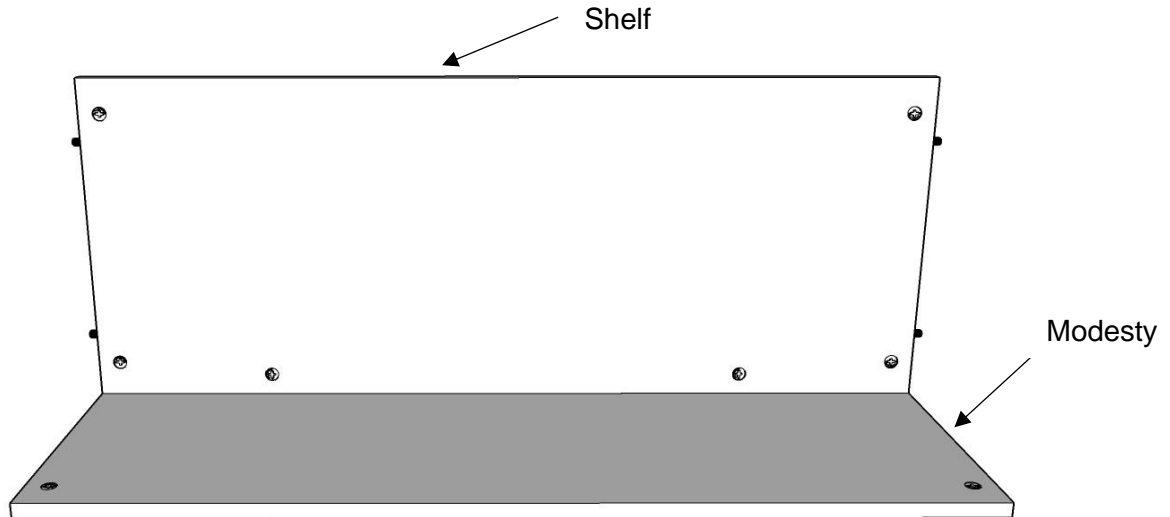

## STEP 6: Attach the LH End


- Attach the **LH End** by fitting the Connecting Bolts with the corresponding pre-drilled holes as shown below.
- Once again, lock the pieces together by turning the Cams  $\frac{1}{4}$  -  $\frac{1}{2}$  of a turn in a clockwise direction.

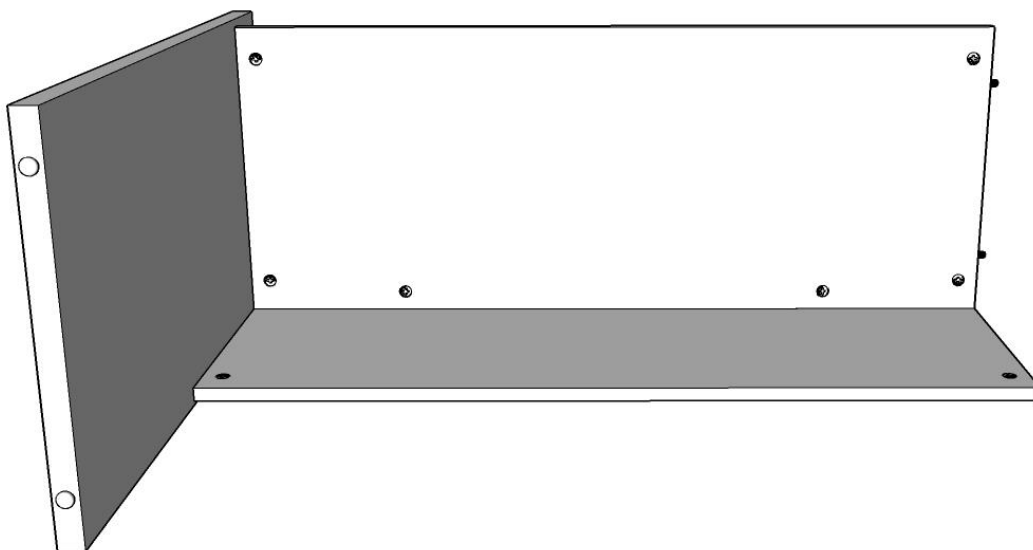



## STEP 7: Attach the RH End

- Attach the **RH End** by fitting the Connecting Bolts with the corresponding pre-drilled holes as shown below.
- Lock the pieces together by turning the Cams  $\frac{1}{4}$  -  $\frac{1}{2}$  of a turn in a clockwise direction.

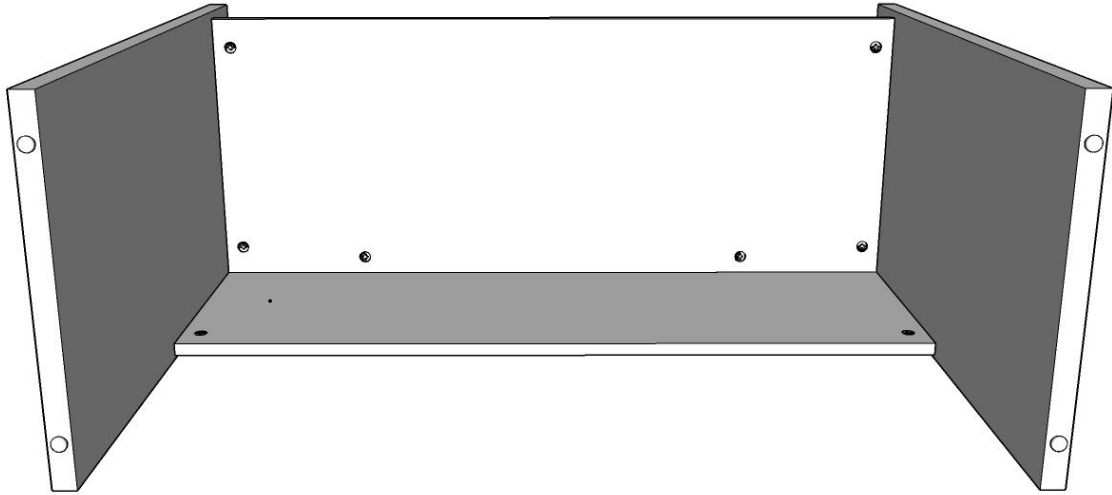

## STEP 8: Attach the Top

- Stand the desk upright and place the **Top** on ensuring the larger overhang is at the back of the ends.
- Lock the pieces together by turning the Cams  $\frac{1}{4}$  -  $\frac{1}{2}$  of a turn in a clockwise direction.
- Then put the finishing touch on your desk by using the cover stickers provided to cover the cams were visible.

