


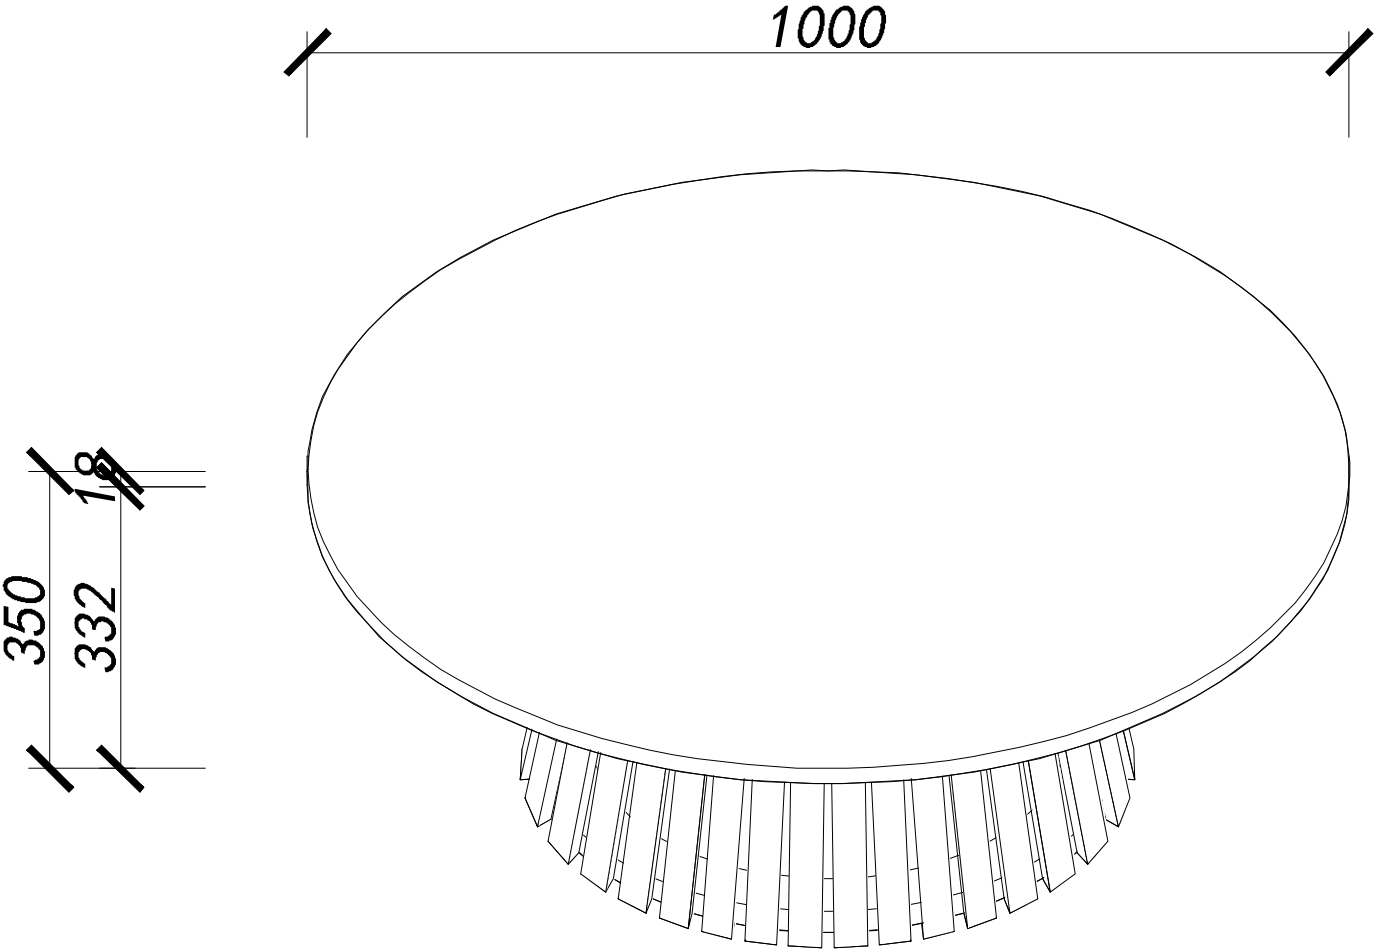
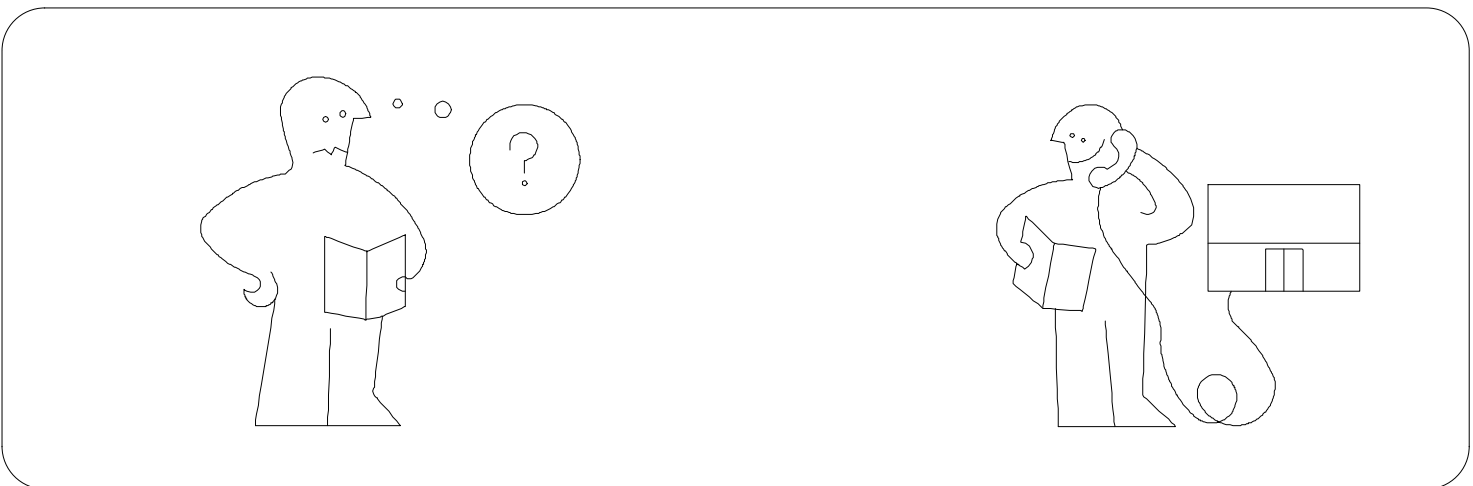
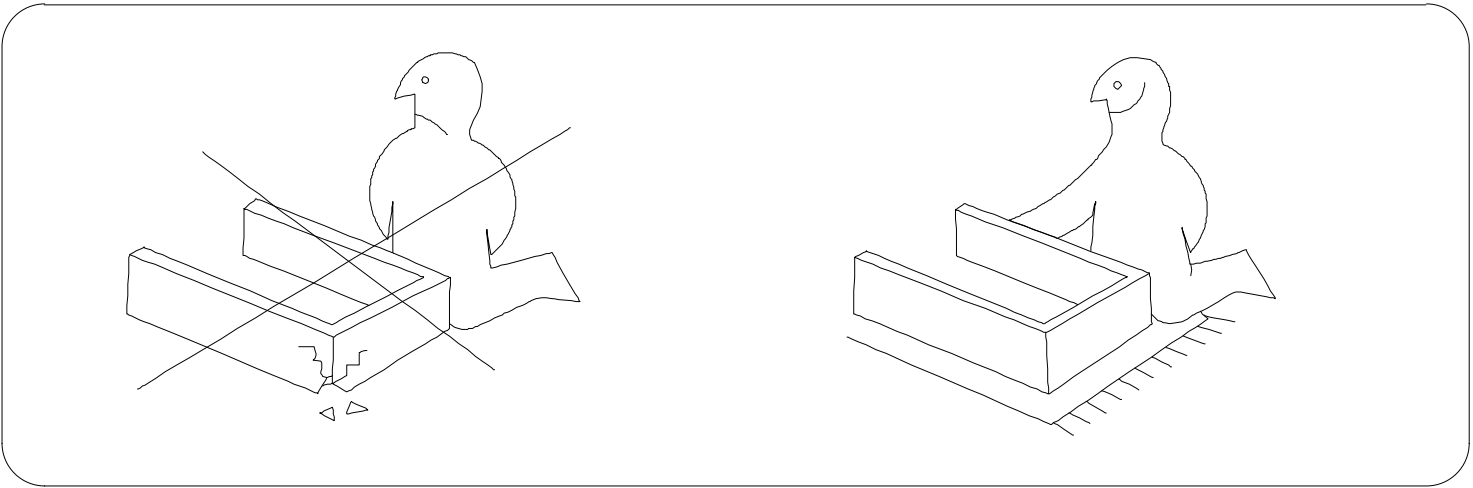
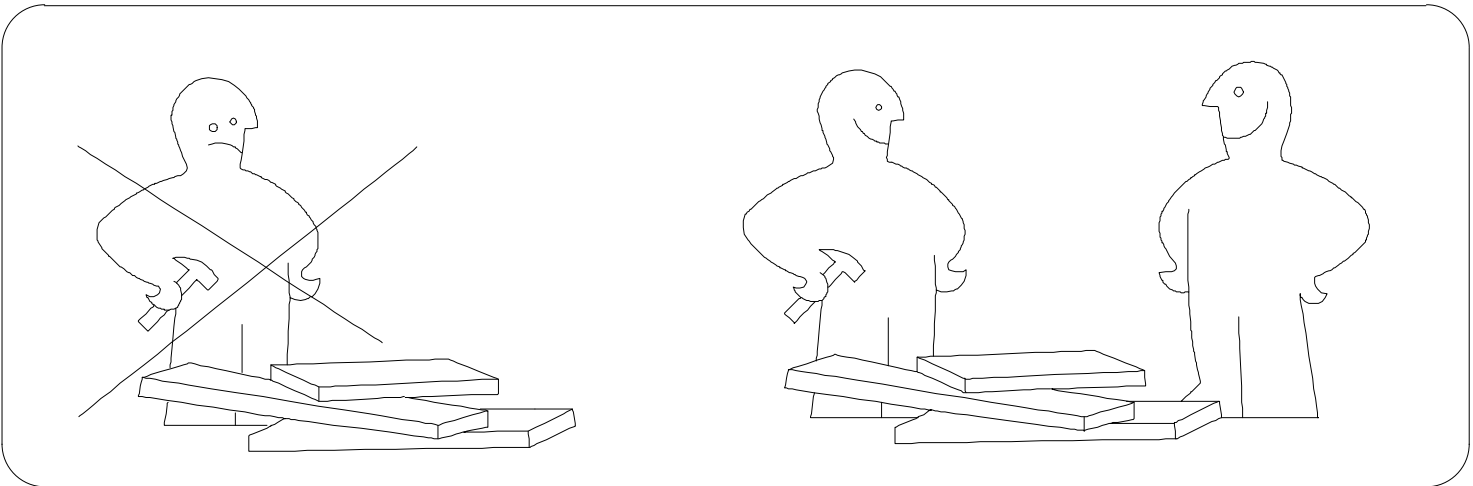
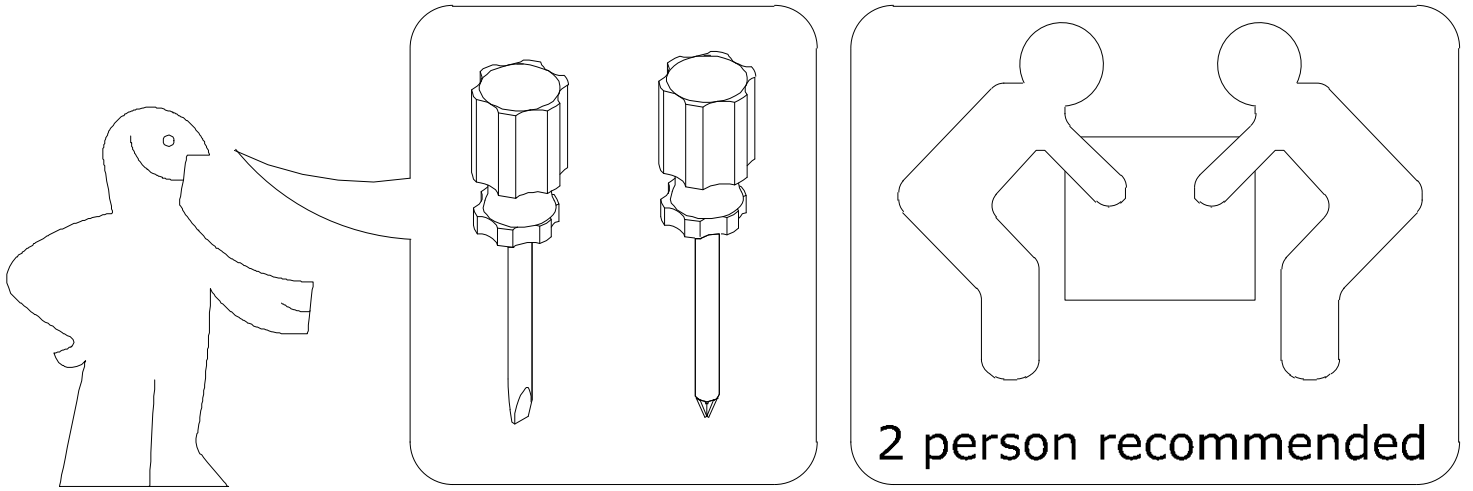


Assembly Instruction

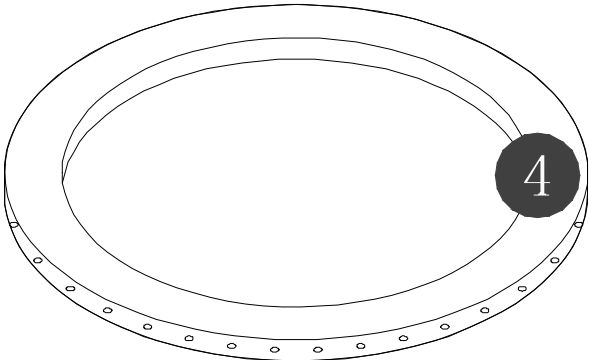


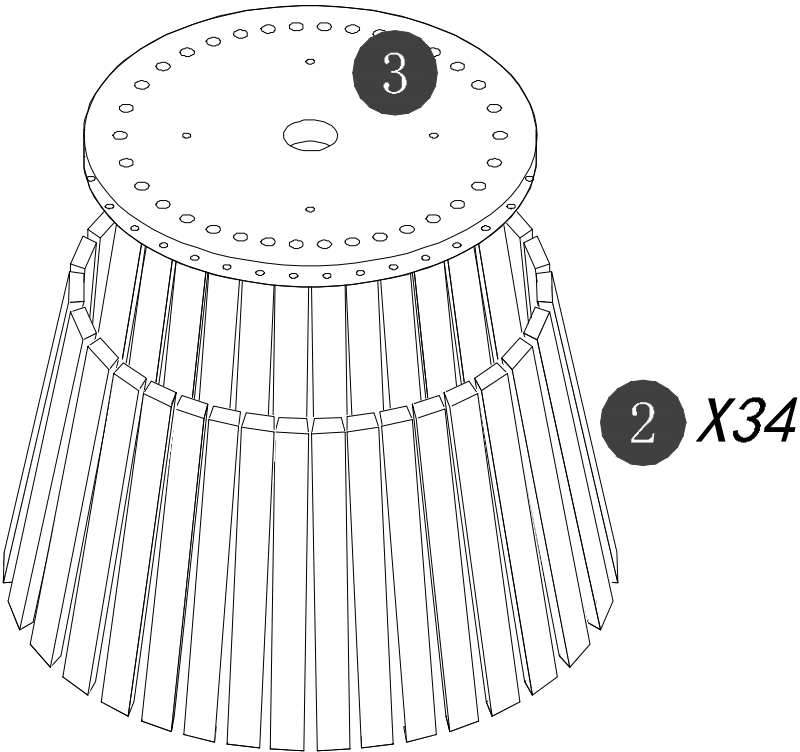

Panel No	Panel Sizes	Quantity
1	1000*1000*18	1
2	333*39*18	34
3	435*435*25	1
4	560*560*25	1

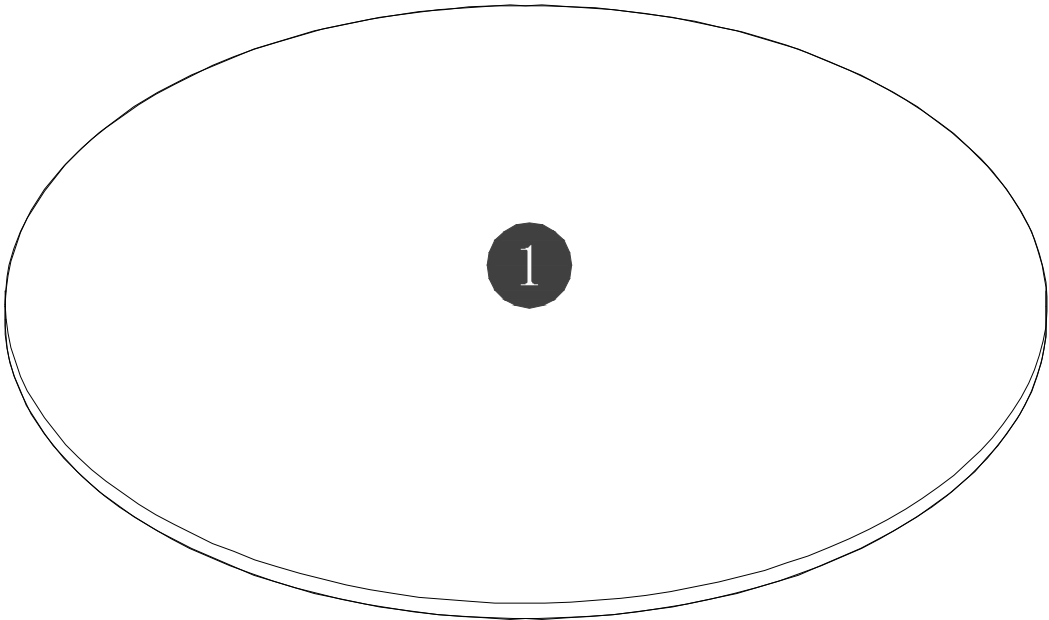


Fittings




M6*40

A1=68

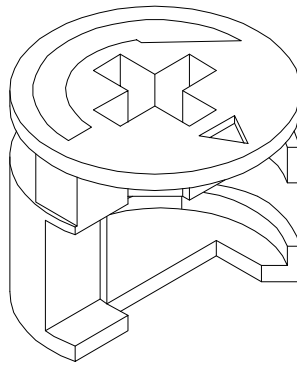


Φ 15*12

C=68

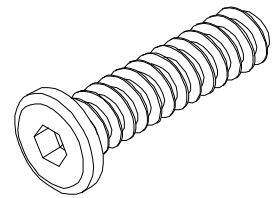


M6*40

G=4

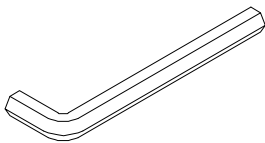


H=1

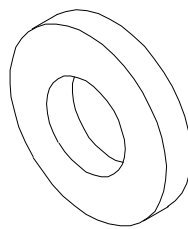


Z2=4


STEP 1

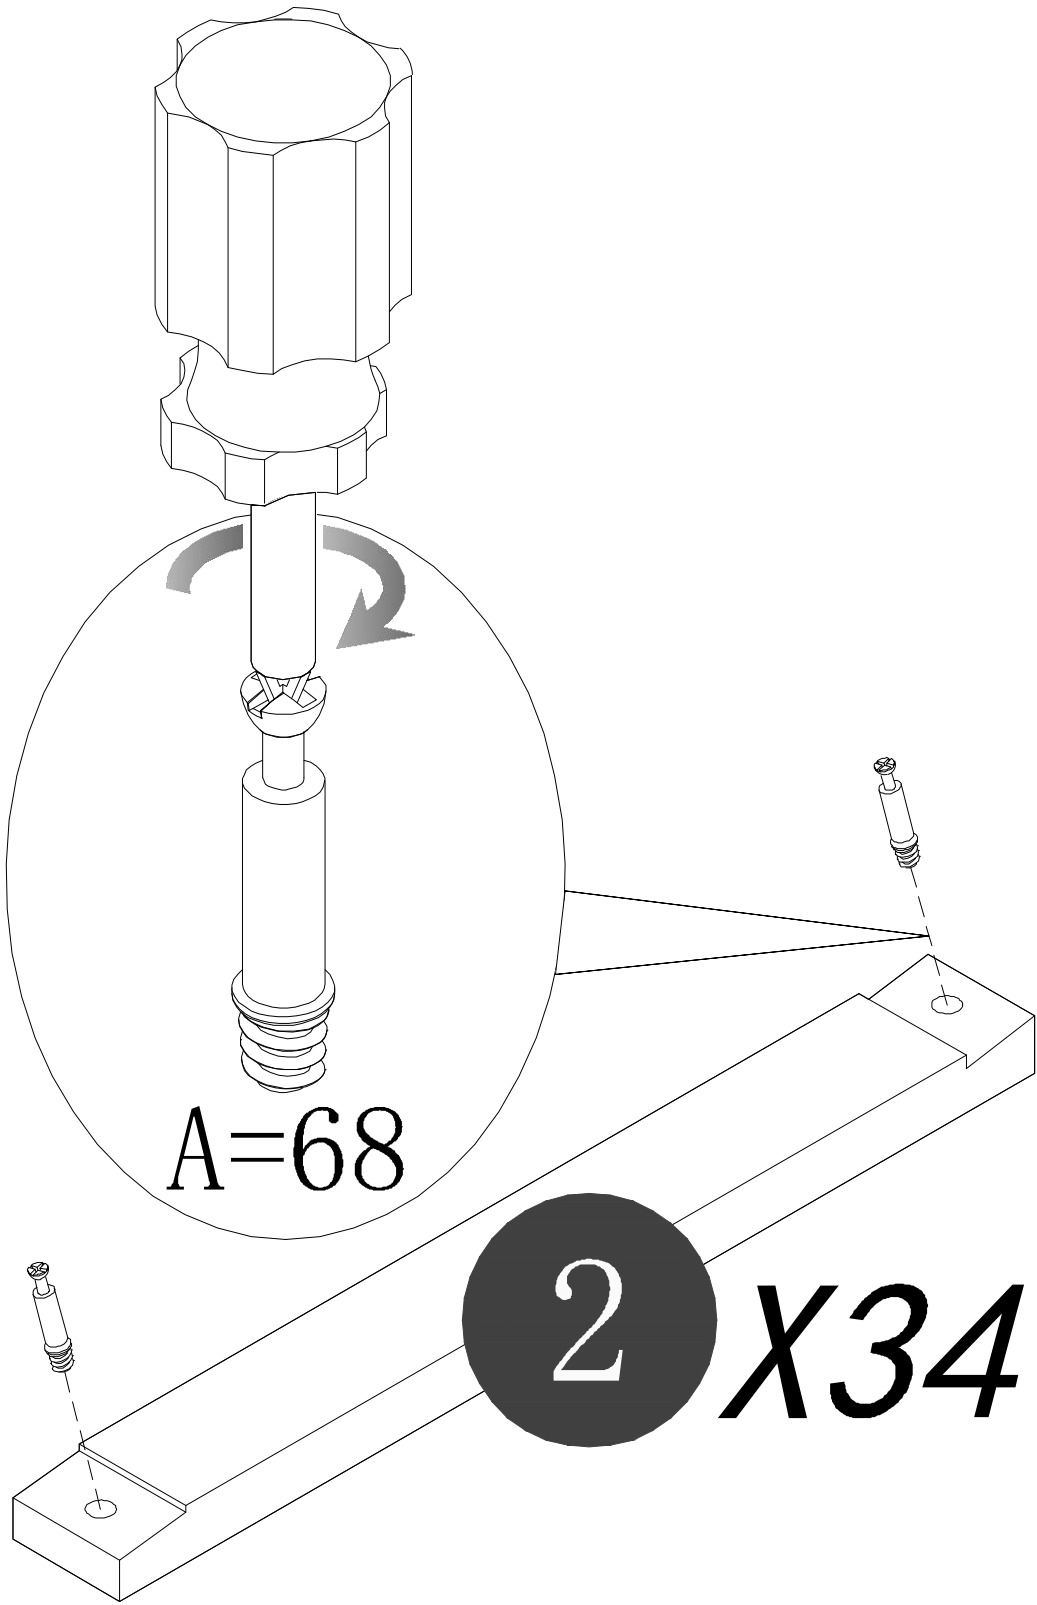


STEP 2

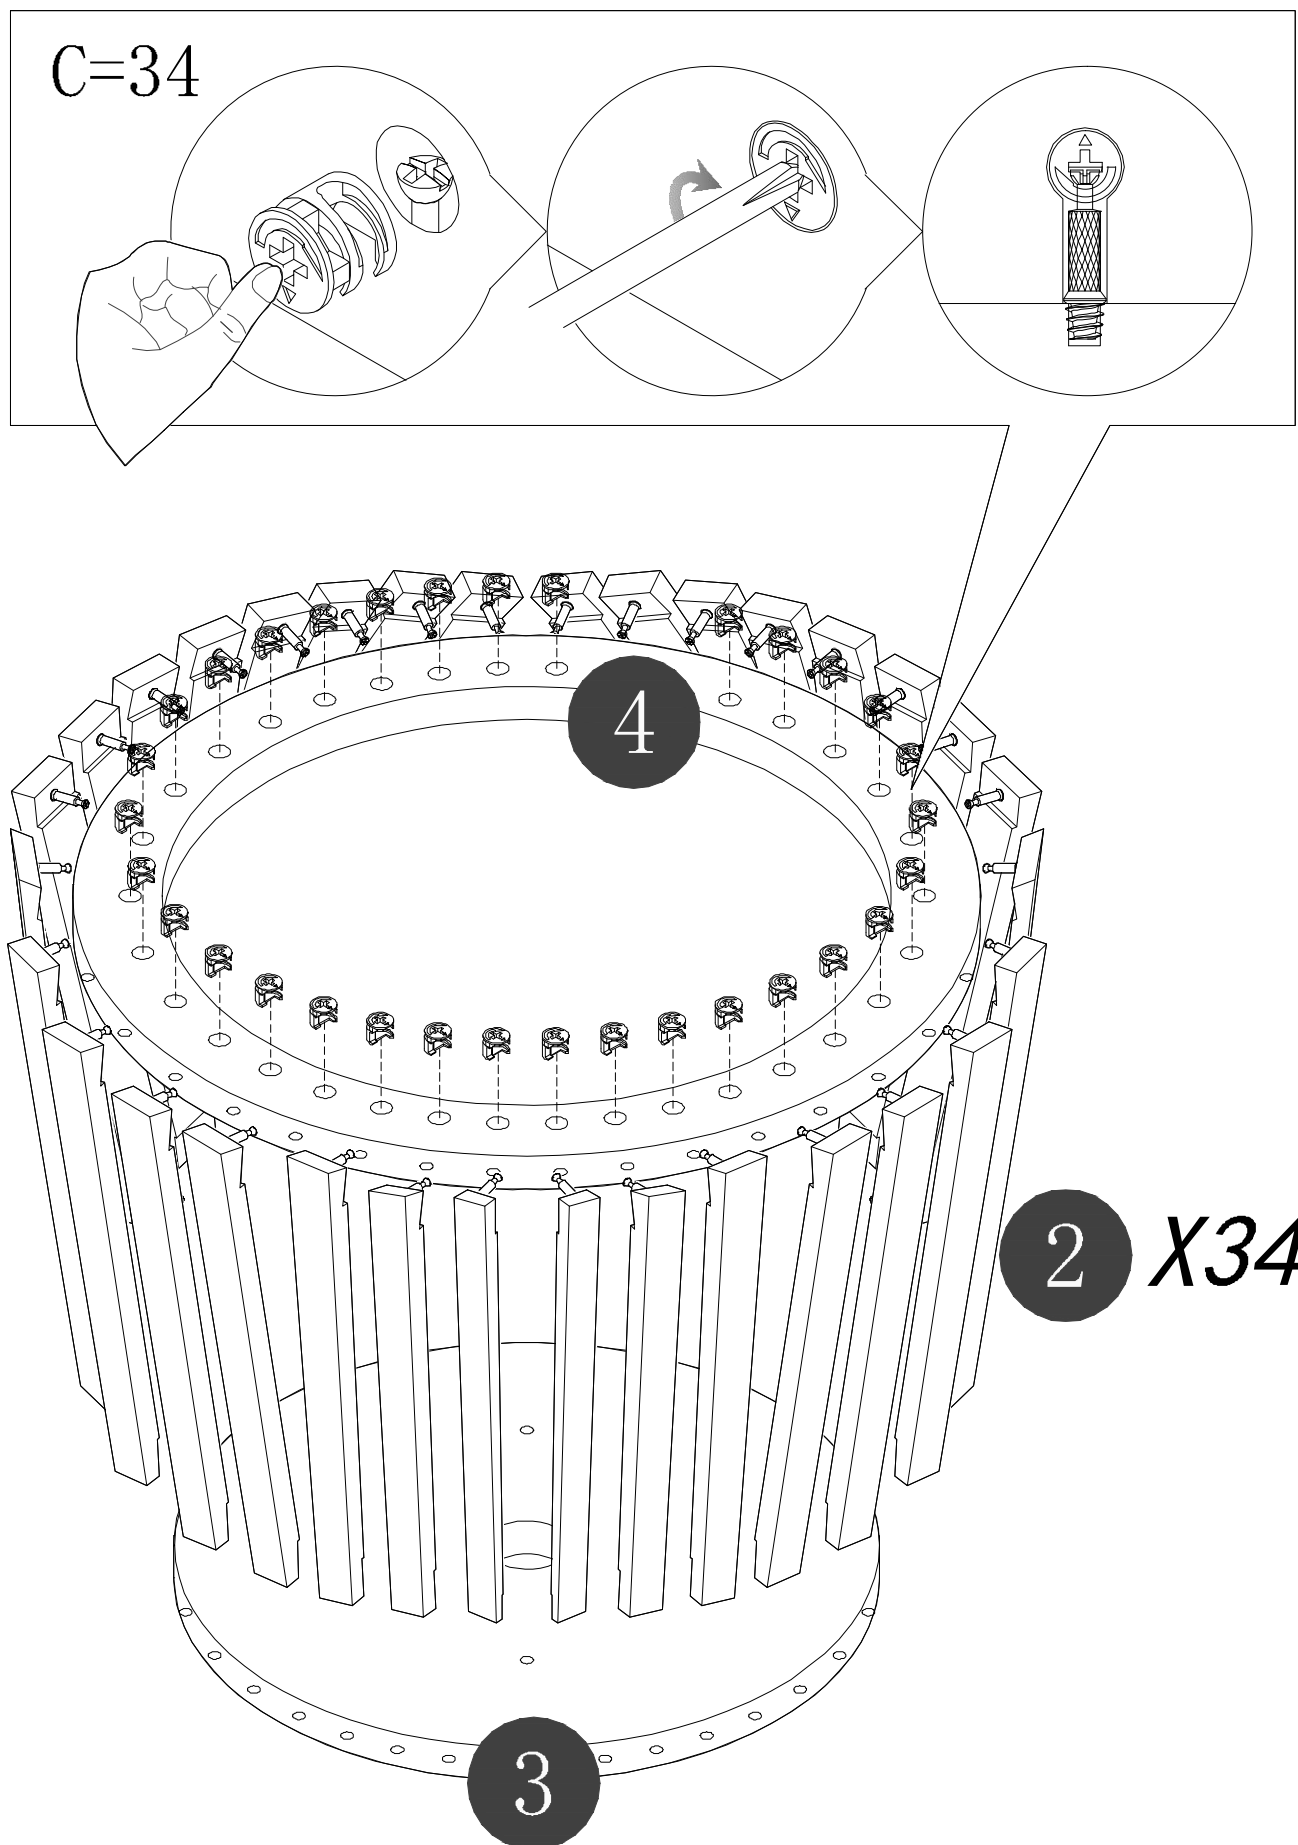


STEP 3

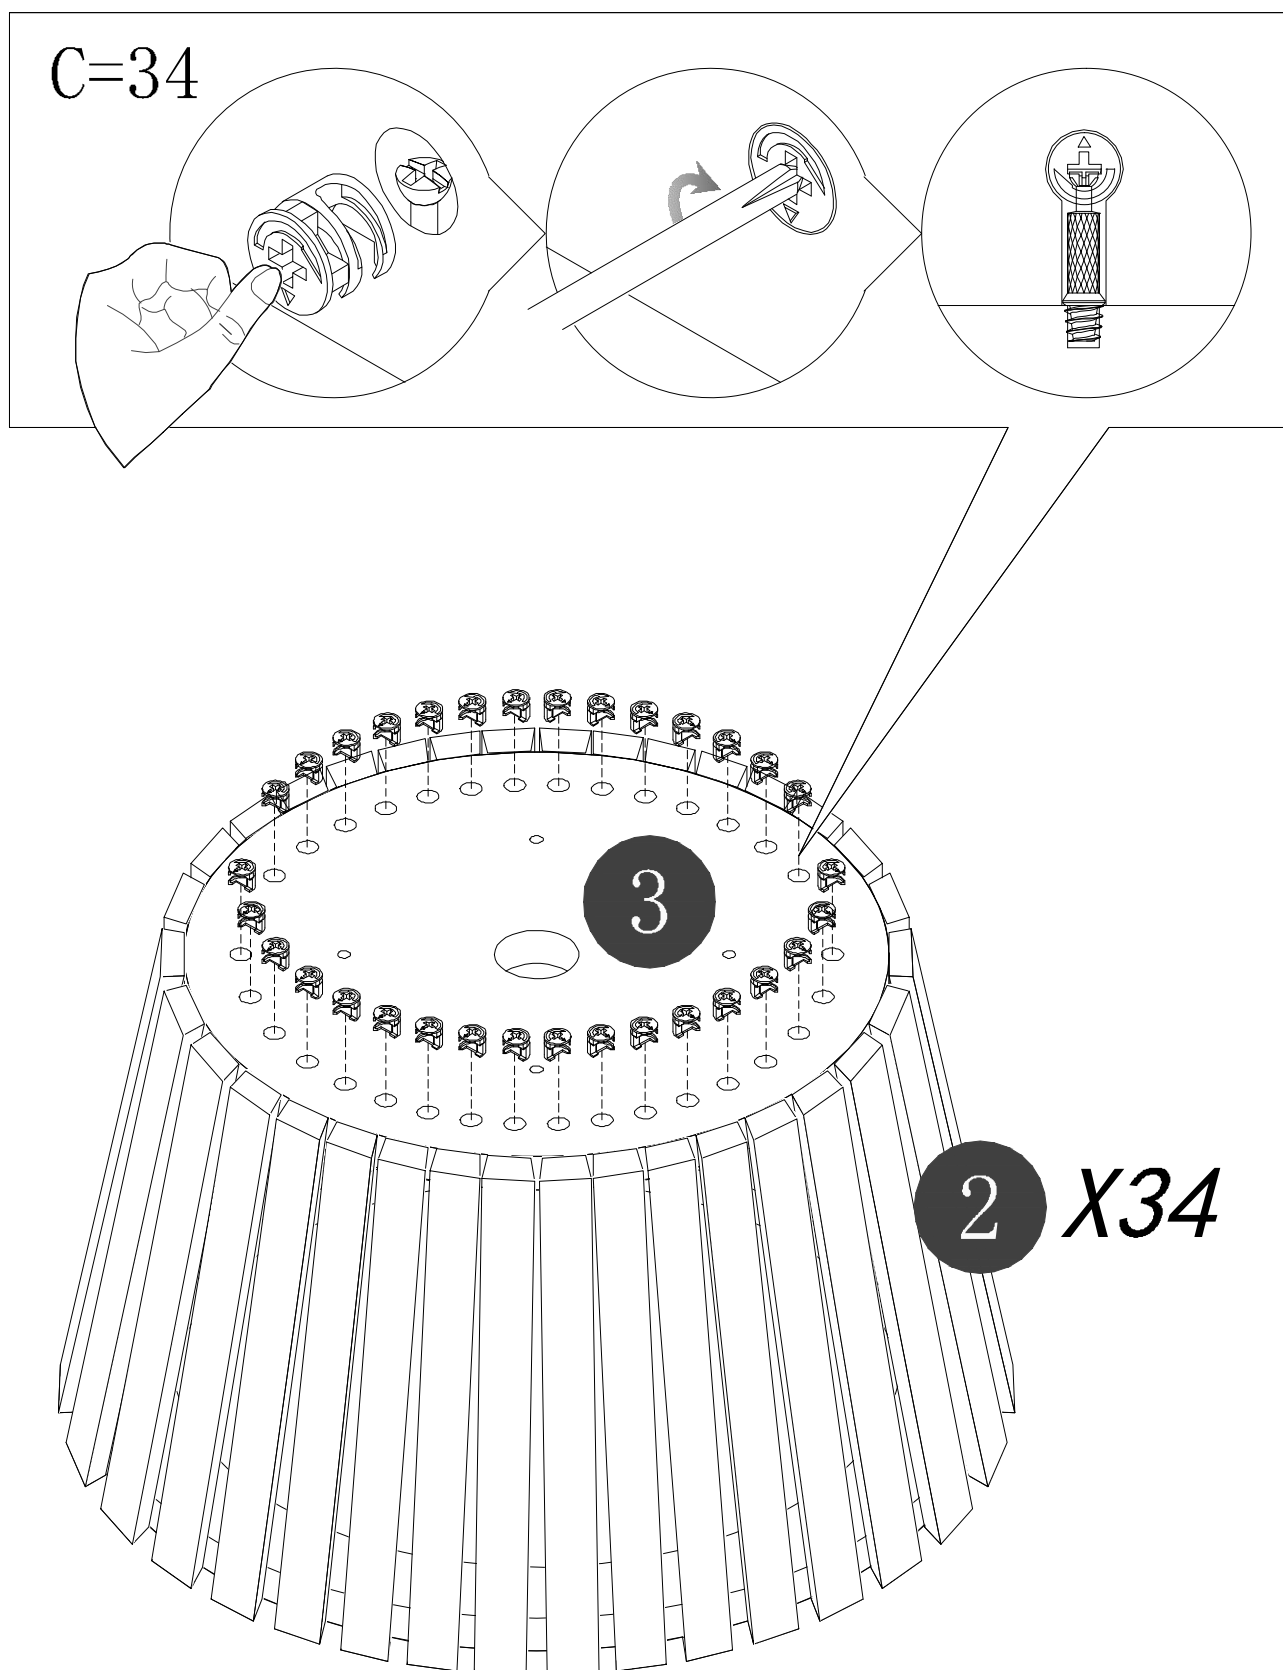

STEP 4

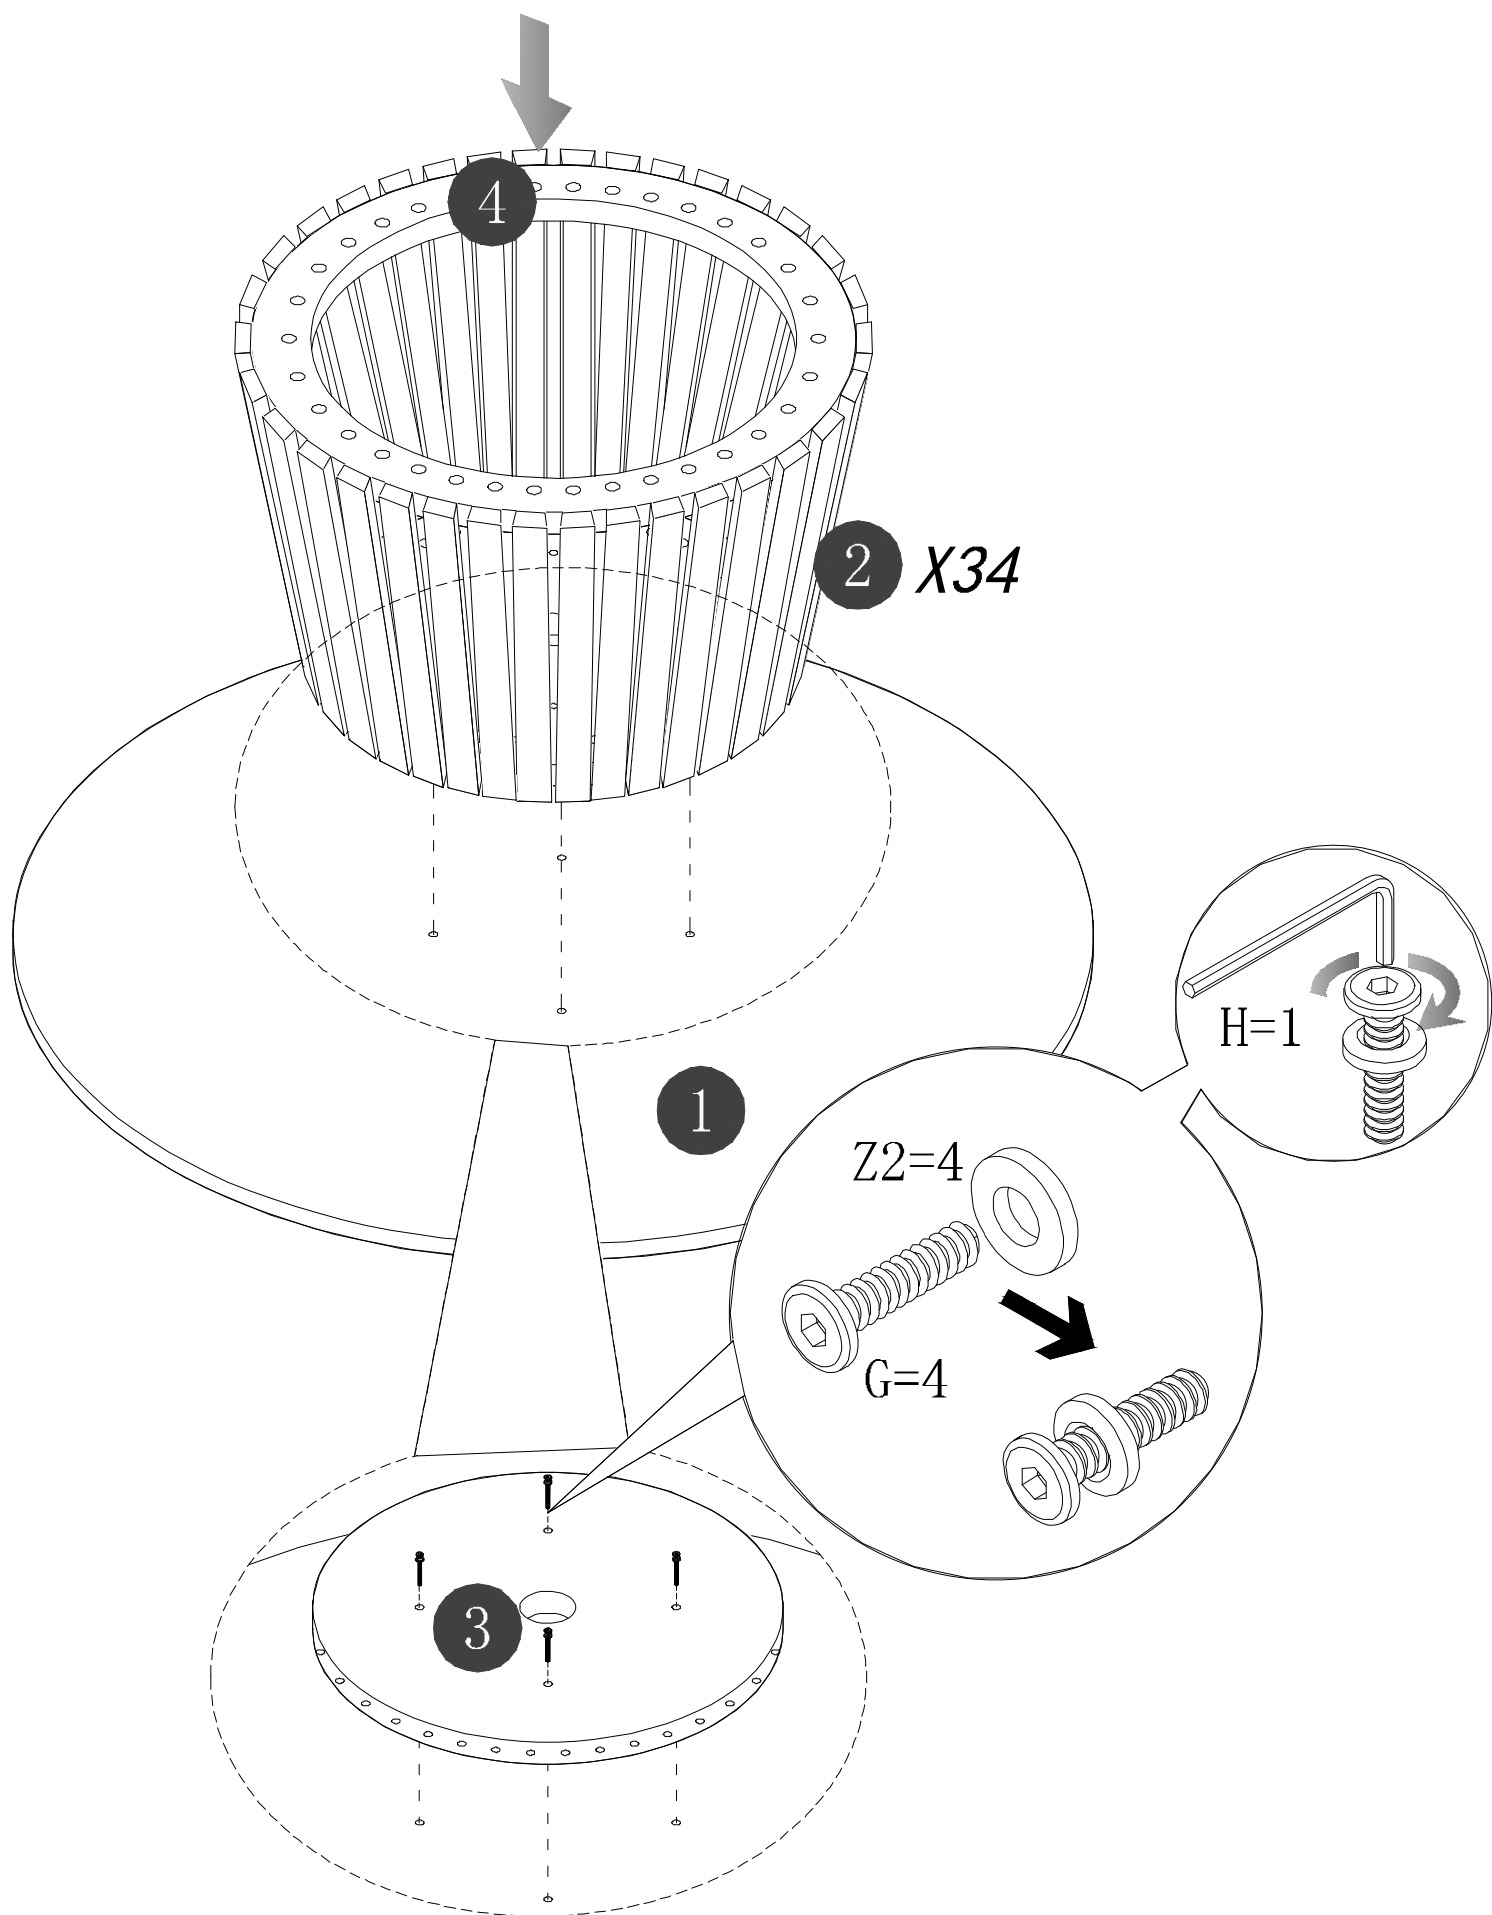


STEP 5

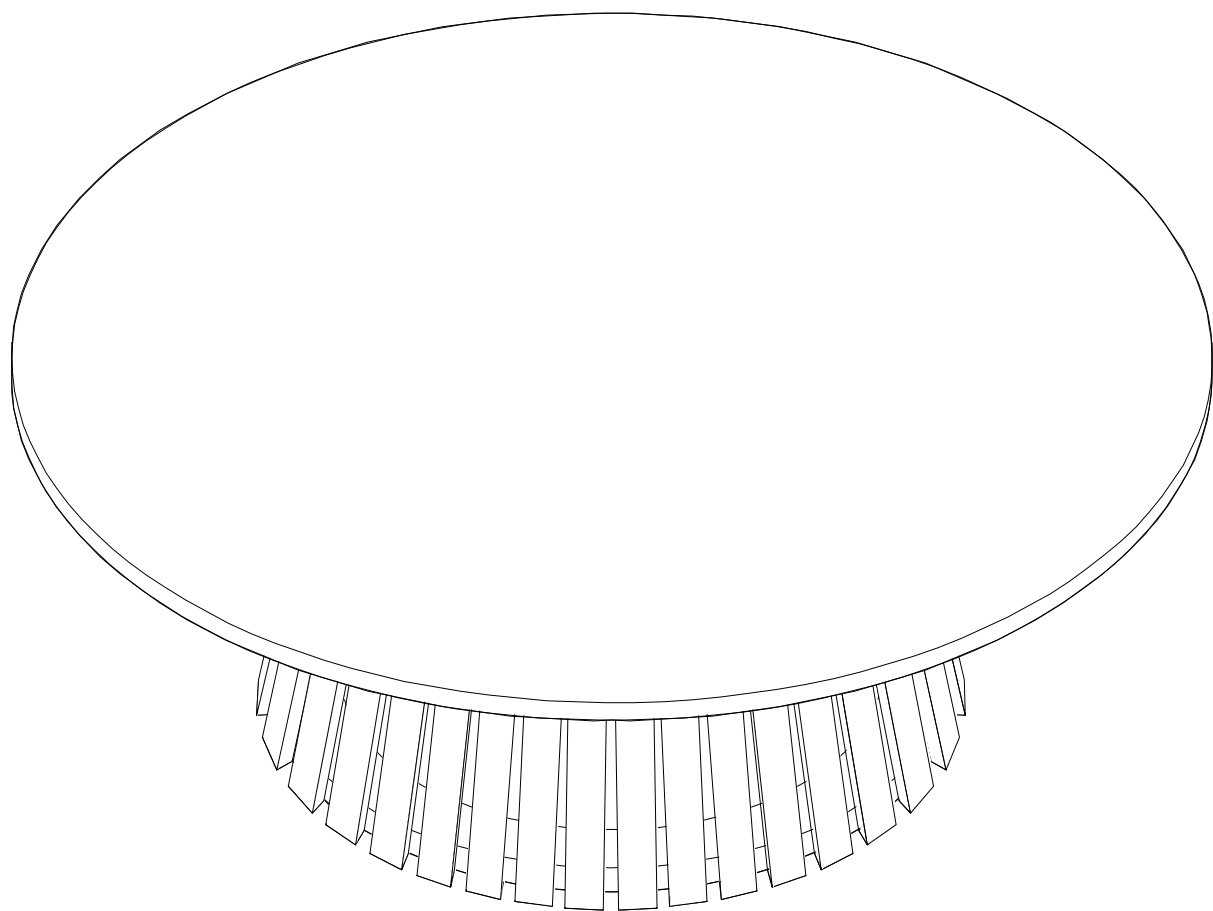

Finish

柏林矮茶几 φ 100邮购包装

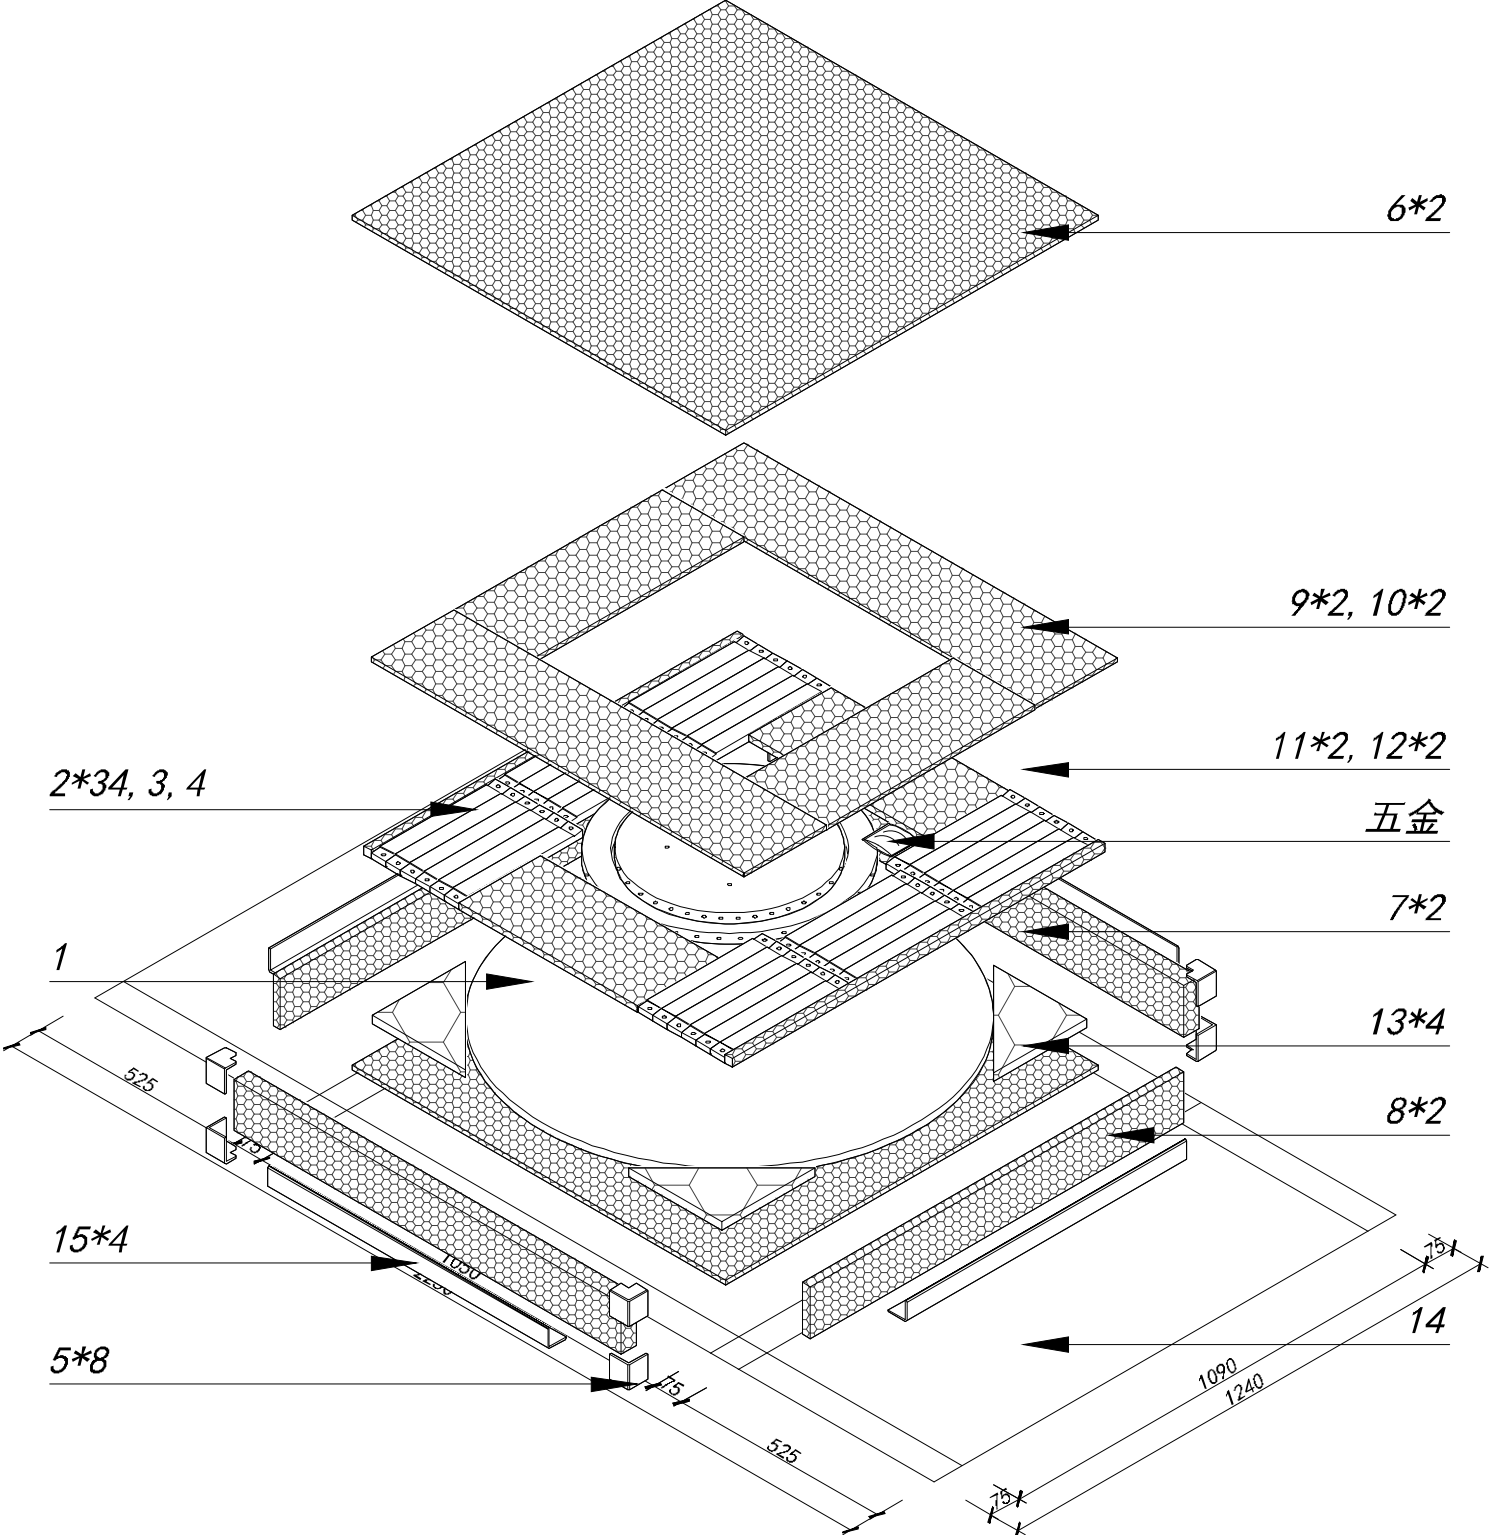

Panel No		Panel Sizes	Quantity
5	护角	50*50*50	8
6	泡沫	1000*1000*10	2
7	泡沫	1040*65*40	2
8	泡沫	1000*65*20	2
9	泡沫	1000*220*10	2
10	泡沫	560*220*10	2
11	泡沫	1000*20*15	2
12	泡沫	480*220*15	2
13	三角泡沫	292*292*15	4
14	纸盒	内径1090*1050*75	1
15	护边	700*50*50	4