


SINGLE / KING SINGLE BEDFRAME ASSEMBLY INSTRUCTIONS

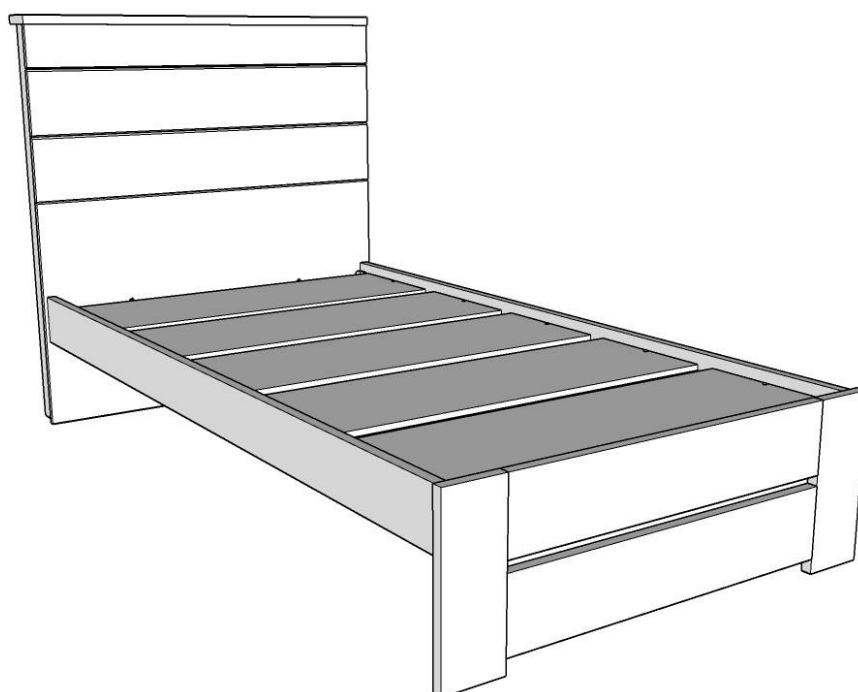

Note: These instructions are generic, and your bedframe may appear different but will assemble the same way.

The Platform 10 Single and King Single sized bedframes have been weight tested to 200kgs.



All Platform 10 furniture is backed with a 10-year manufacturer's guarantee from Compac Furniture. Please refer to our website for furniture information and to register your product(s).

www.platform10.co.nz/productguarantee

PARTS LIST


Please check you have all the necessary parts before beginning to assemble your Bedframe. If any parts are missing or damaged please contact the manufacturers directly, at 0800 7101010, or email info@platform10.co.nz.

QTY	PART NAME
1	Headboard
1	Footboard
2	Side Rails
5	Plywood Slats
10	Long (Black) Hex Socket Screws
8	Short (Silver) Hex Socket Screws
1	Allan Key Tool


STEP ONE:

Remove the laminate stickers covering the threads on the headboard. These are in place so the headboard can be used without the frame. Then screw the Short (silver) Hex Socket Screws into four thread holes in the Footboard and Headboard shown below. Do not screw these in completely, leave an approximately 4mm gap.

FOOTBOARD

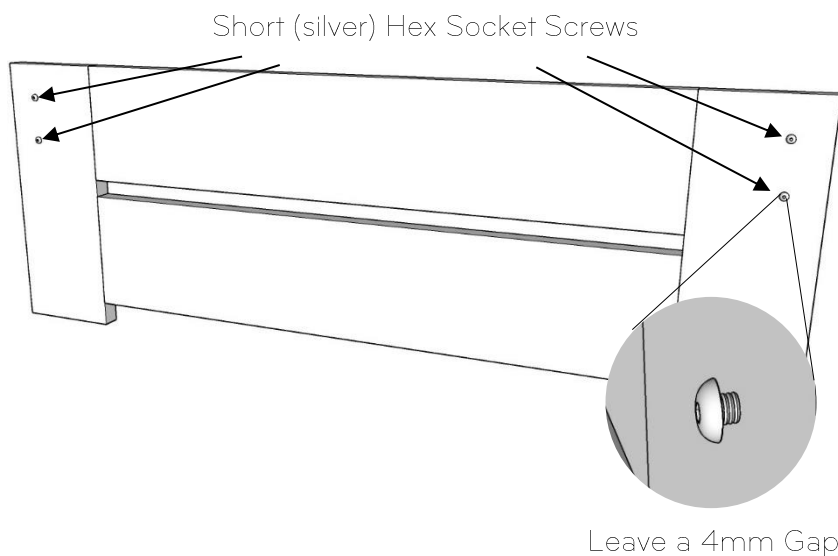


HEADBOARD

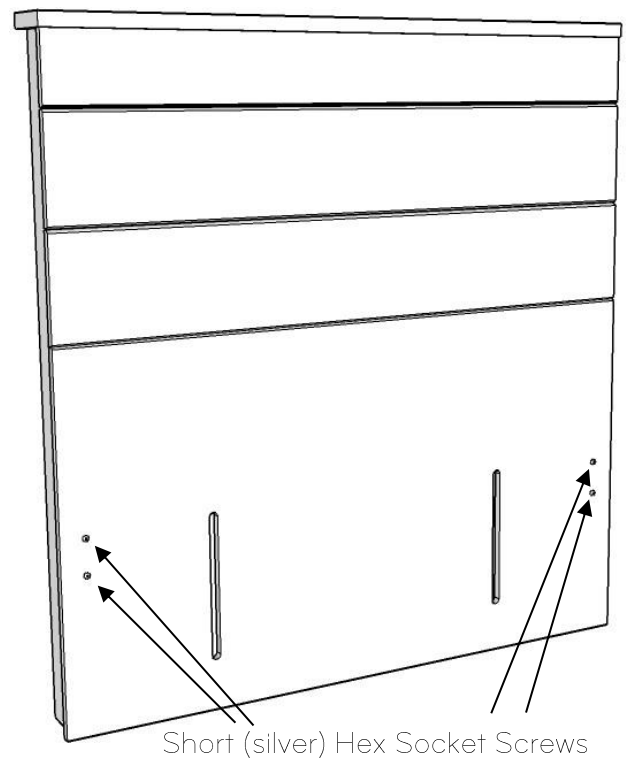

STEP TWO:

Take one of the Side Rails and slot the keyhole shape holes in the metal bracket over the two Screw Heads in the Footboard. The Side Rail should 'click' down into place. Then use the Allen Key provided to tighten the screws firmly.


IMPORTANT: Secure the Side Rail to the Footboard by tightening the screws with the Allen Key before moving on to Step Three.

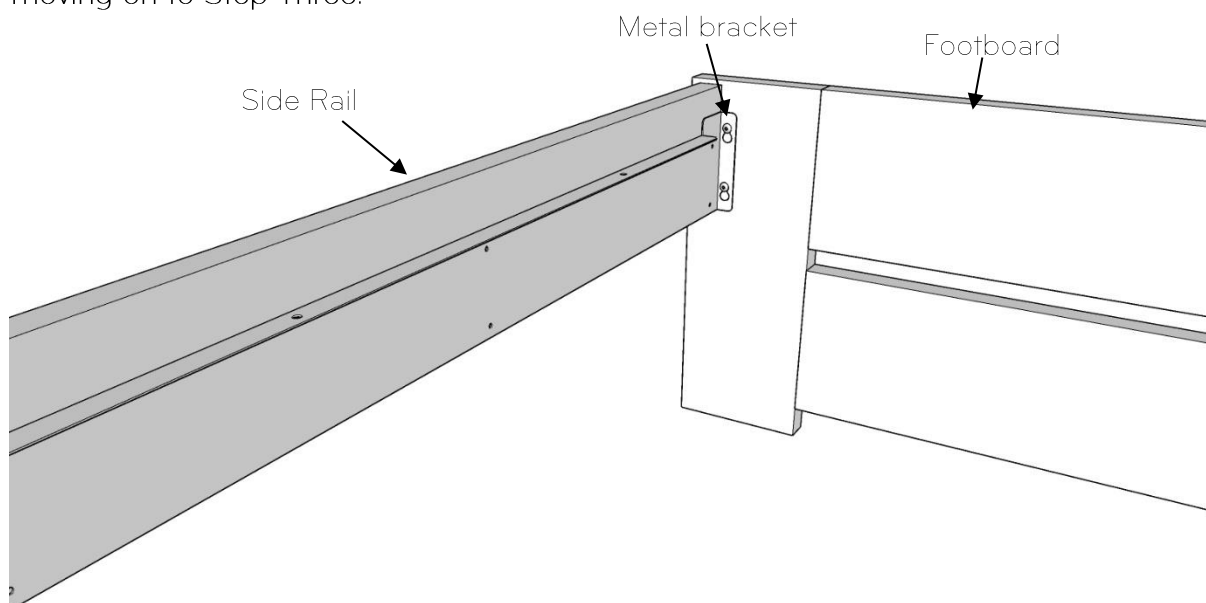

STEP THREE:


Take the other end of the same rail and slot the keyhole-shaped hole over the two screws in the Headboard to connect it to the Footboard.

Repeat Steps 2 & 3 for the other Side Rail.

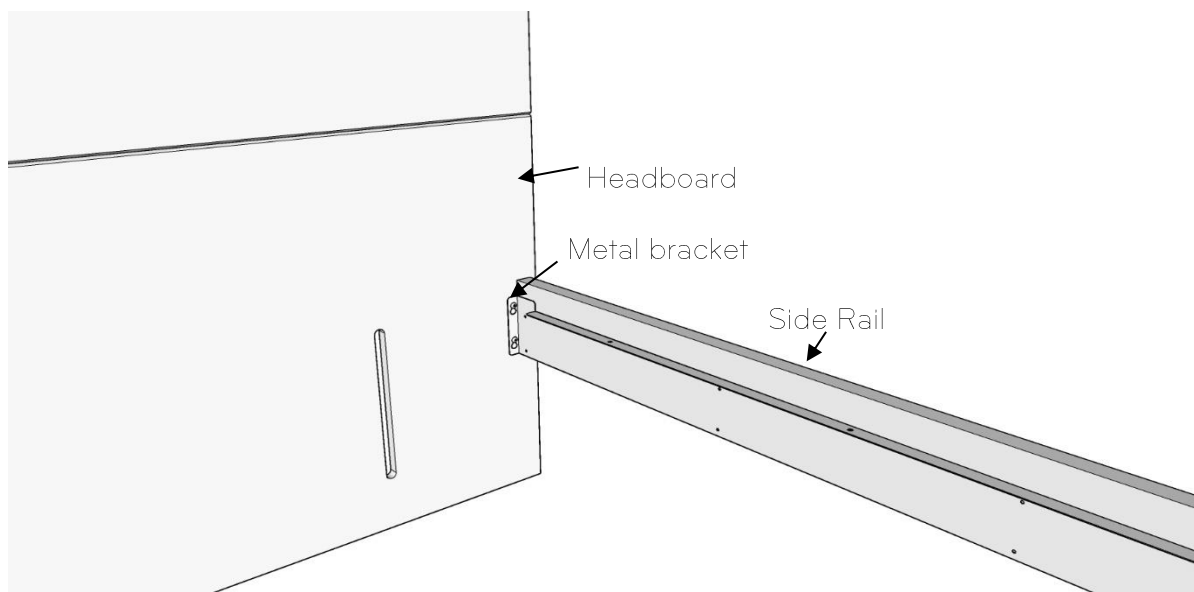

STEP FOUR:

Take the five Slats and lay them between the rails. Align the holes on the slats with the holes in the rails and screw in the Long Hex screws. Tighten screws with the Allan Key.

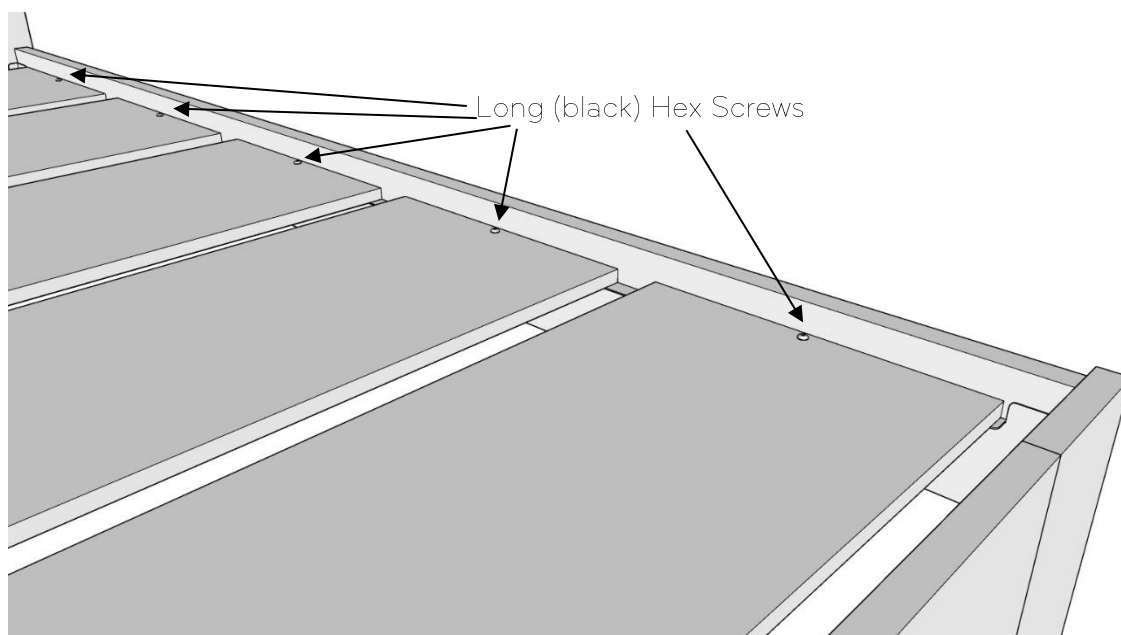



CONGRATULATIONS

Your Platform 10 Bedframe is now complete. ENJOY!