


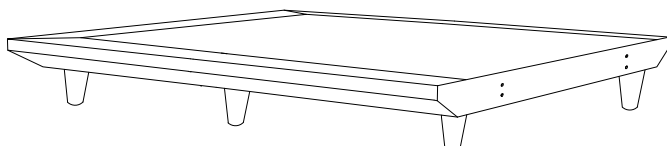

MODEL : SCANDI BASE




QUEEN

#### PART LIST




A - STARBOLT X 4 nos.



B - WOOD LEG X 7 nos.

#### 1 .TAKE OUT HARDWARE FROM THE BOTTOM BASE .

FLIP THE BASE, THEN OPEN THE VELCRO .TAKE OUT HARDWARE FROM THE BOTTOM BASE.

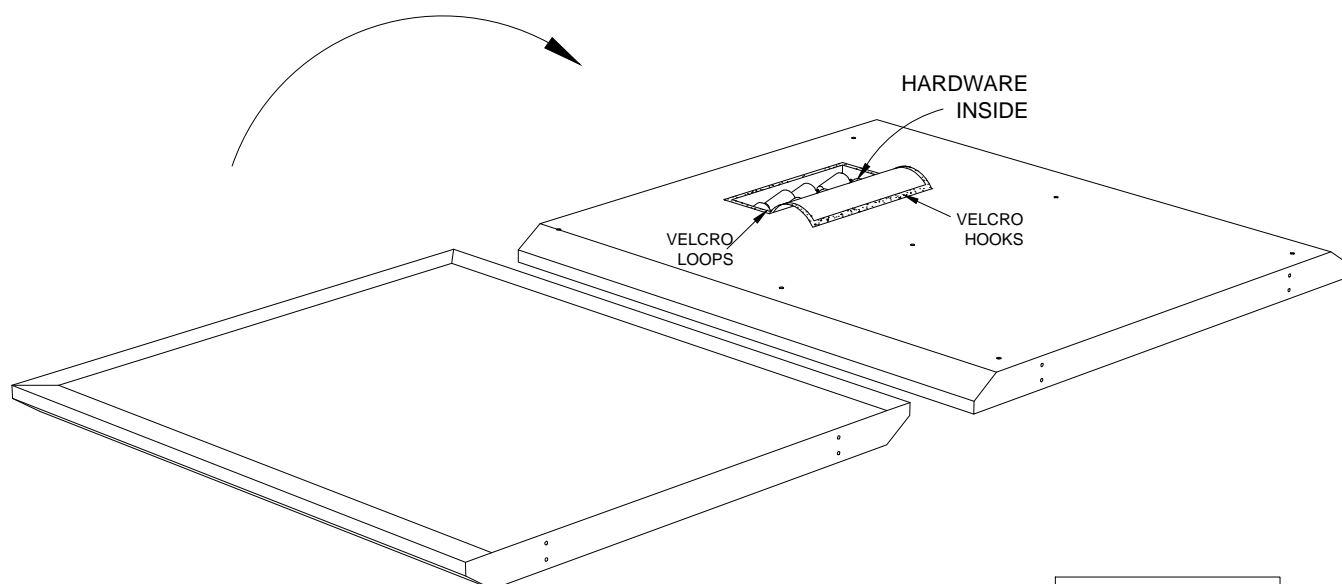

#### HARDWARE INSIDE




X 4 nos.




X 7 nos.

## 2. ATTACH THE WOOD LEG.

ATTACH THE WOOD LEG TO THE BOTTOM OF BASE BY SCREWING IN A CLOCKWISE DIRECTION. PLEASE ENSURE ALL LEG FIX AND SAME POSITION ACCORDING TO DIAGRAM.

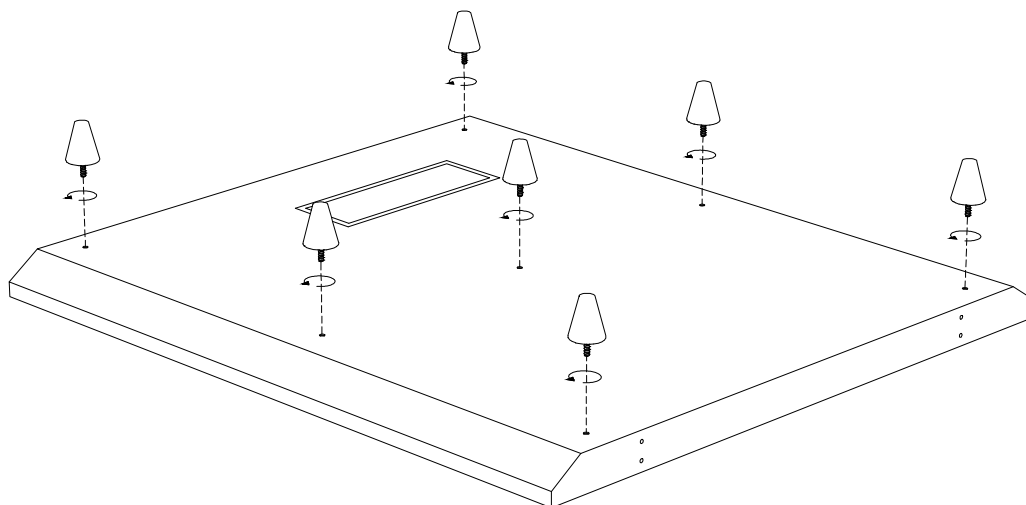

## 3. VIEW WITH LEGS.

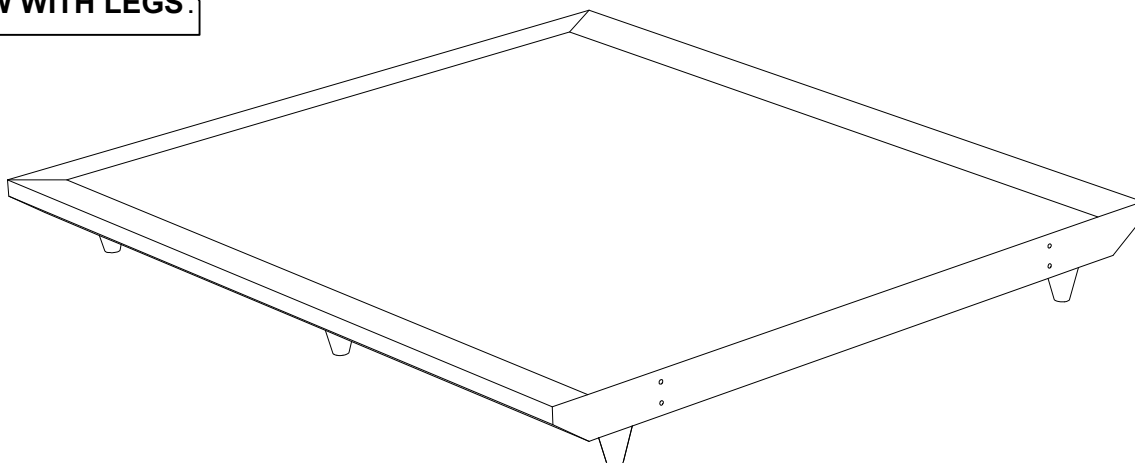

## 4. END VIEW WITH STAR BOLT.

