






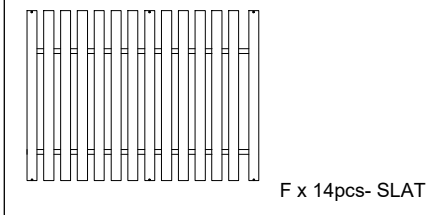
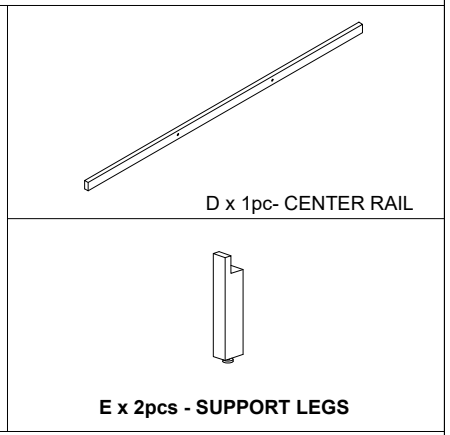
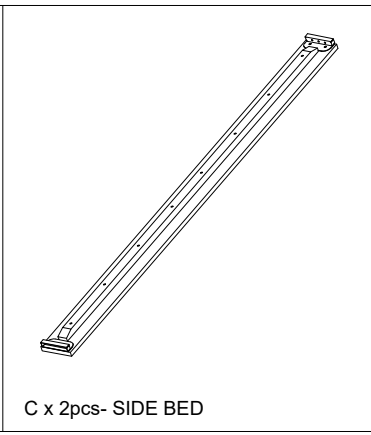
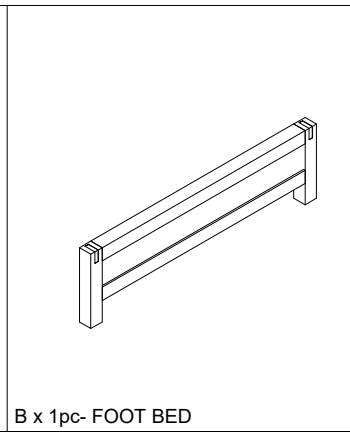
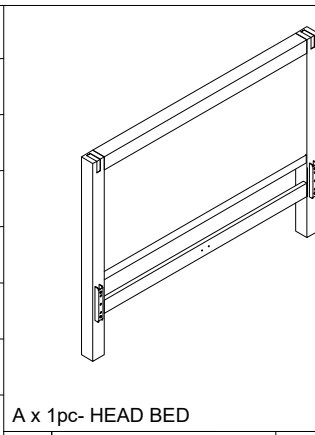
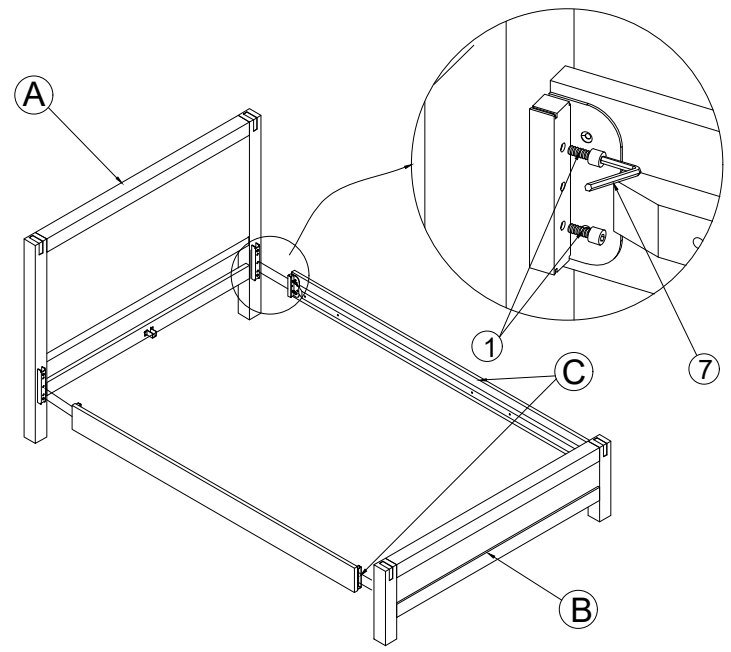
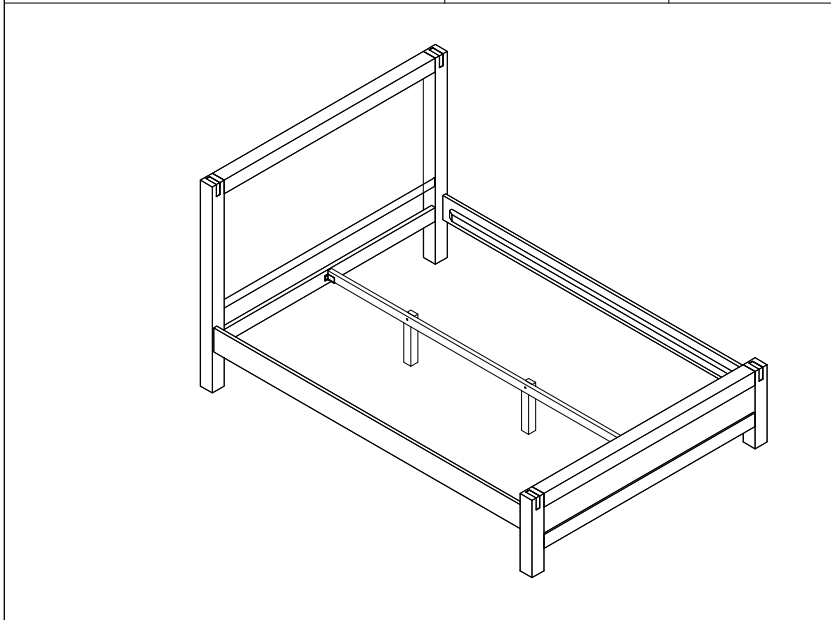


ASSEMBLY INSTRUCTION BRIX BED

No	Name of Hardwere	Q.ty
①	Bolts M6 x 15 	8
②	Bolts M6 x 45 	2
③	Flat Washer M6 x 16 	2
④	Screw M4x30 	6
⑤	Screw M4x15 	8
⑥	Allen Key(K4) 	1
⑦	Allen Key(K5) 	1




STEP1




ASSEMBLY INSTRUCTION

BRIX BED

STEP2

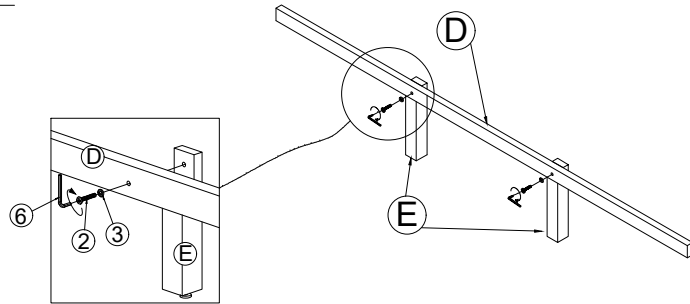

STEP4

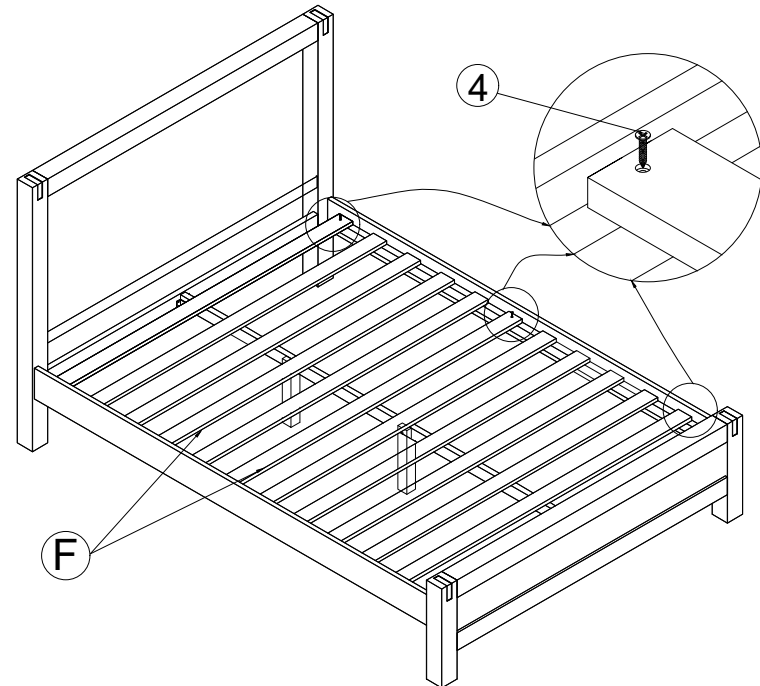

STEP3

