



# BLOOMY DINING CHAIR

ITEM NO. 20-3901AC

## TIPS

- 1 Please review all parts and hardware before disposing of any packaging.
- 2 Check to be sure that all parts and hardware are complete before you start assembly.
- 3 Before beginning assembly, separate each type of screw.
- 4 **Using a screw that is too long will cause damage.**
- 5 Carefully study the screw diagrams below.
- 6 You may receive extra hardware with your unit.
- 7 Place all parts on a clean and smooth surface to avoid the parts from being scratched.
- 8 Keep the product away from heat and humidity.
- 9 Light blue stains and natural wood knots on the product are not considered defects.
- 10 Before start assembly, please categorize the hardware.


Required :  
10 minutes

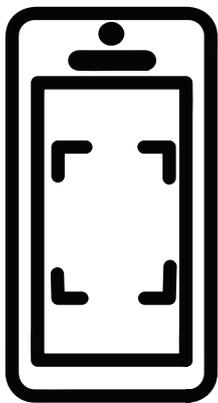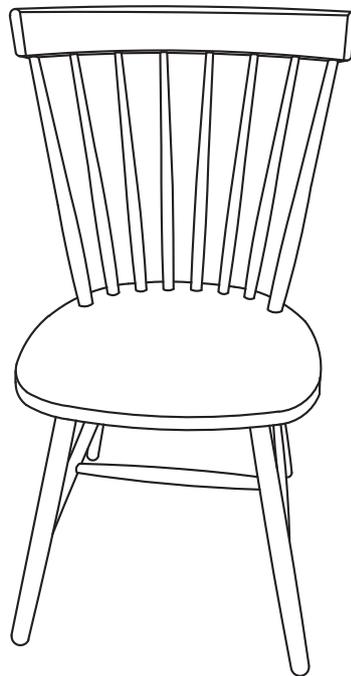

SCAN ME



For Step-By Step Real  
Photo Assembly Instructions.

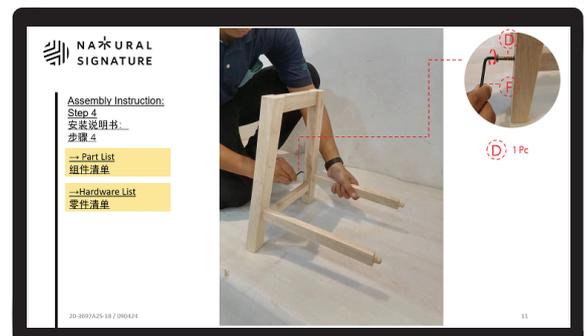

# BLOOMY DINING CHAIR

ITEM NO. 20-3901AC



## PART LIST

**A** Chair seat with backrest  
1Pc



**B** Leg Frame (Left)  
1Pc



**C** Leg Frame (Right)  
1Pc



**D** Center Stretcher  
1Pc




## HARDWARE LIST \*Before start assembly, please categorize the hardware.

**E** JCBC screw M6 x 50mm  
2Pcs



**F** JCBC/W screw M7 x 40mm  
6Pcs



**G** Spring Washer 1/4"  
6Pcs



**H** Flat Washer 1/4"  
6Pcs



**I** Barrel Nut M6 x 13mm  
2Pcs



**J** Wood Button 13.5mm  
2Pcs




**K** Allen Key M4  
1Pc



## ASSEMBLY INSTRUCTIONS

**I** STEP 1

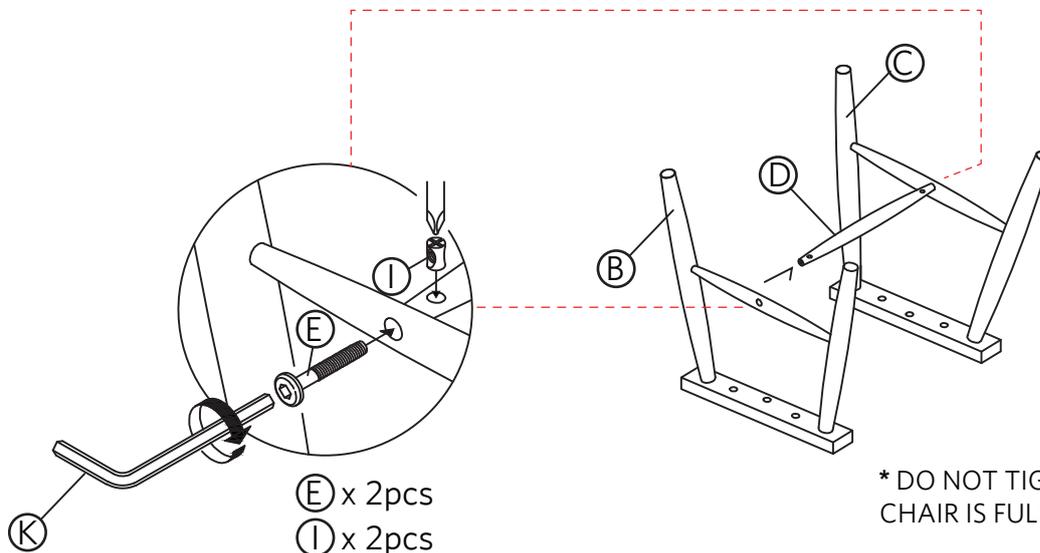


# BLOOMY DINING CHAIR


ITEM NO. 20-3901AC

## ASSEMBLY INSTRUCTIONS


### 2 STEP 2

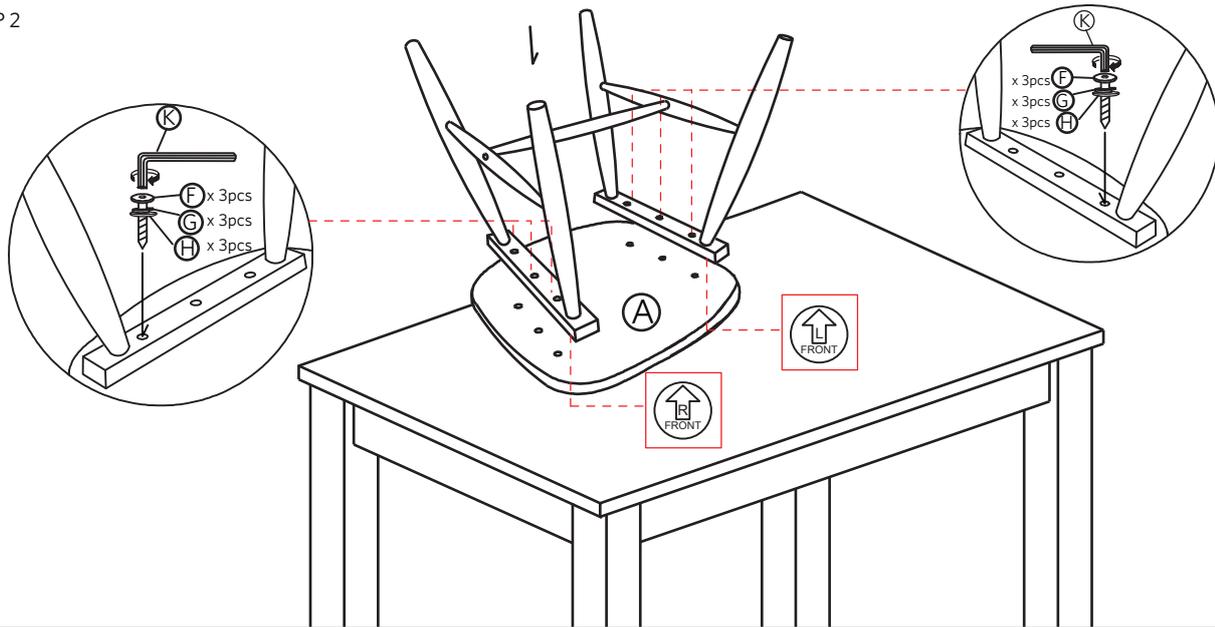

### 3 STEP 3

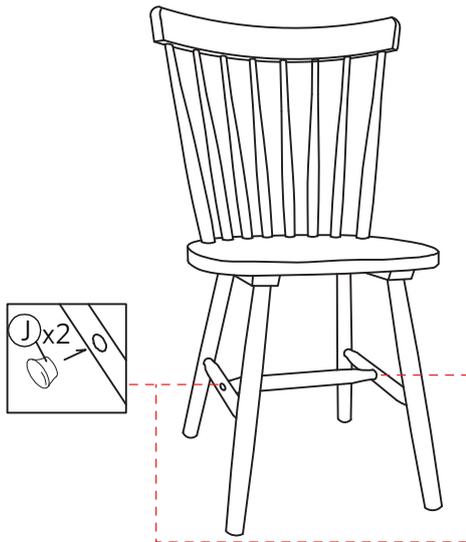

### 4 STEP 4

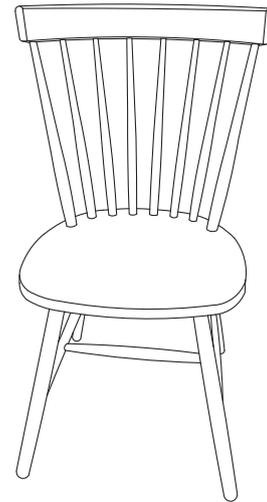


# SUBWAY 1350 RECTANGULAR TABLE

ITEM NO. 20-3877T





Required :  
15 minutes

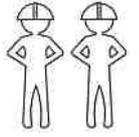


## TIPS


- 1 Please review all parts and hardware before disposing of any packaging.
- 2 Check to be sure that all parts and hardware are complete before you start assembly.
- 3 Before beginning assembly, separate each type of screw.
- 4 **Using a screw that is too long will cause damage.**
- 5 Carefully study the screw diagrams below.
- 6 You may receive extra hardware with your unit.
- 7 Place all parts on a clean and smooth surface to avoid the parts from being scratched.
- 8 Keep the product away from heat and humidity.
- 9 Light blue stains and natural wood knots on the product are not considered defects.
- 10 Before start assembly, please categorize the hardware.

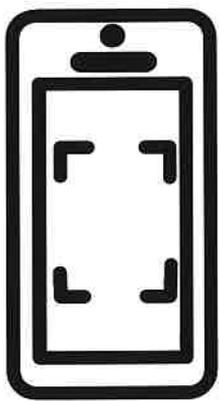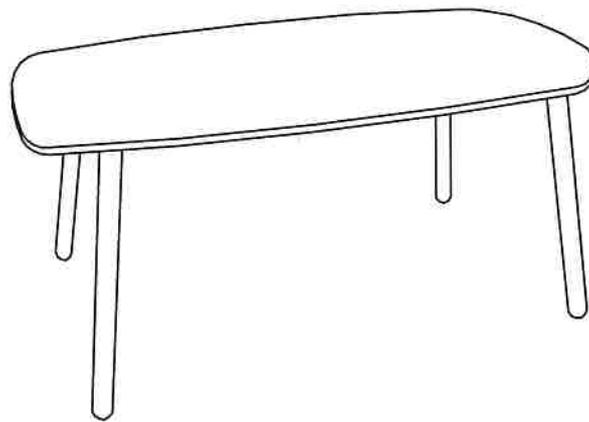

SCAN ME

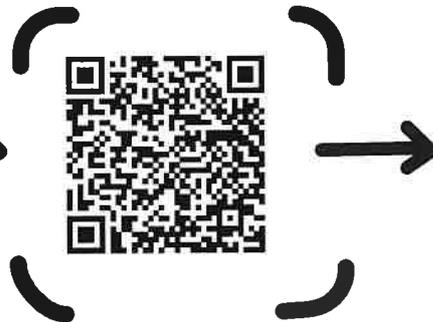

For Step-By Step Real  
Photo Assembly Instructions.

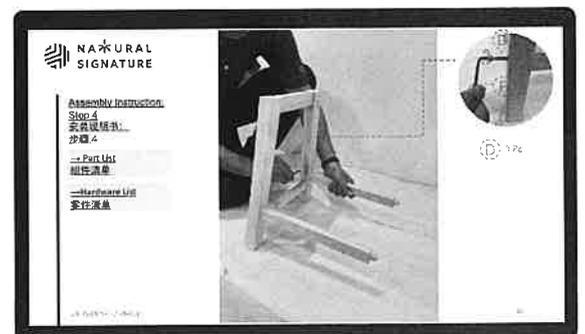

# SUBWAY 1350 RECTANGULAR TABLE

ITEM NO. 20-3877T



## PART LIST

**A** Table Top  
1Pc



**B** Leg  
4Pcs



## HARDWARE LIST \*Before start assembly, please categorize the hardware.

**C** JCBB M8 X 85MM  
8Pcs



**D** SPRING WASHER 5/16"  
8Pcs



**E** FLAT WASHER 5/16" X 22MM  
8Pcs




**F** ALLEN KEY M5  
1Pc




## ASSEMBLY INSTRUCTIONS

**1** STEP 1

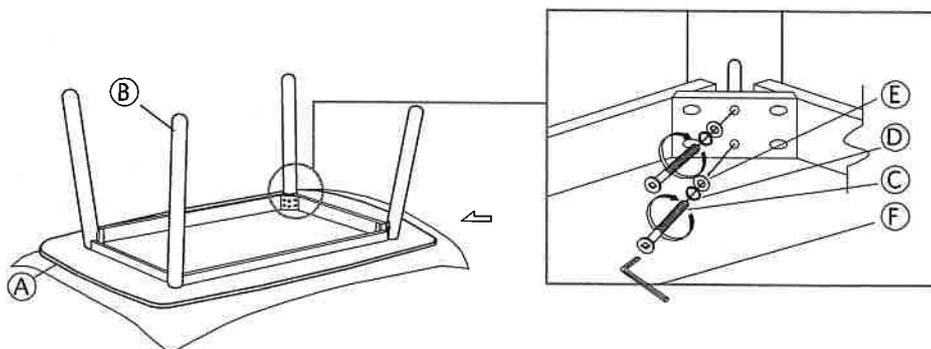

**2** STEP 2

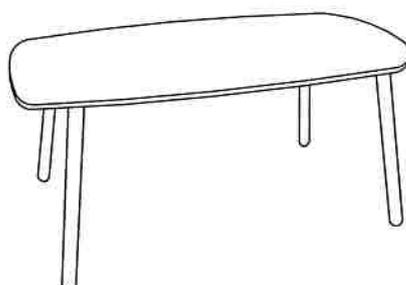

FULLY SET-UP