


ASSEMBLY INSTRUCTION

LV402.B01A - QUEEN BED WITH STORAGE CUSHION HB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

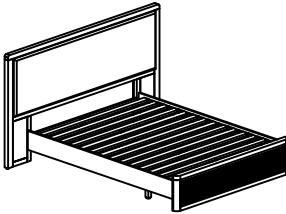

ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly



WARNING !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part.
6. ALL SLATS MUST BE INDIVIDUALLY SCREWED INTO SIDERAILS TO ENSURE STRUCTURAL INTEGRITY OF YOUR BED

No.	Component	Q'ty
①	Head board	1
②	Foot board	1
③	Side rails	2


No.	Component	Q'ty
④	Slat support	1
⑤	Center slat support	2
⑥	Slats	14

No.	Hardware list	Q'ty
①	Bolt M6x10	12
②	Screws M4x35	28
③	Bolts M8x50	2
④	Allen key K5	1
⑤	Allen key K4	1


Step 1

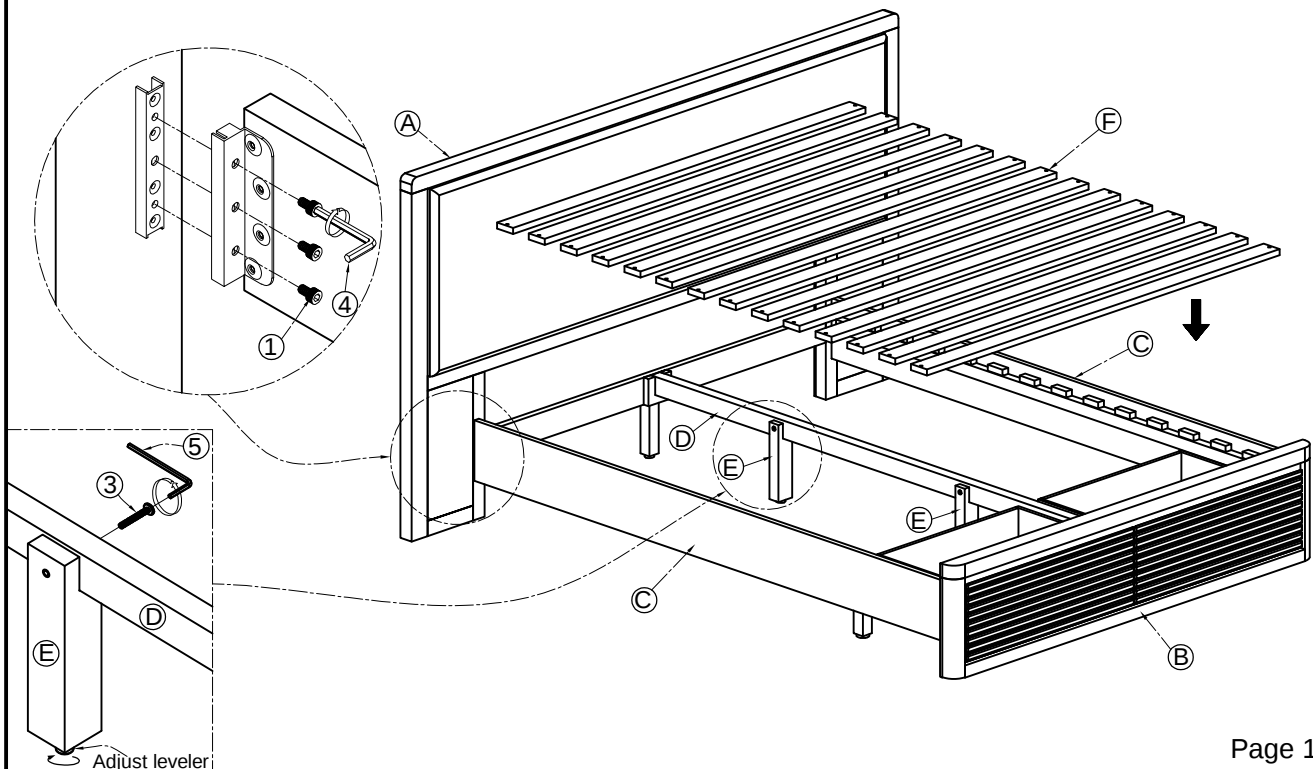

Step 2

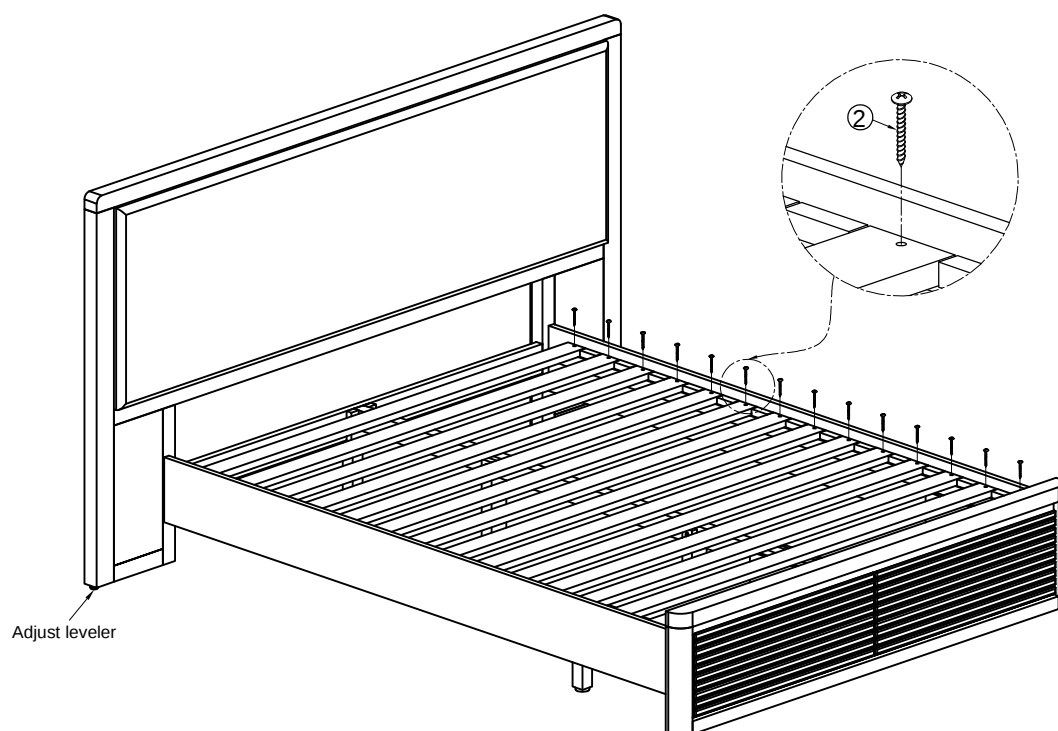

Step 3

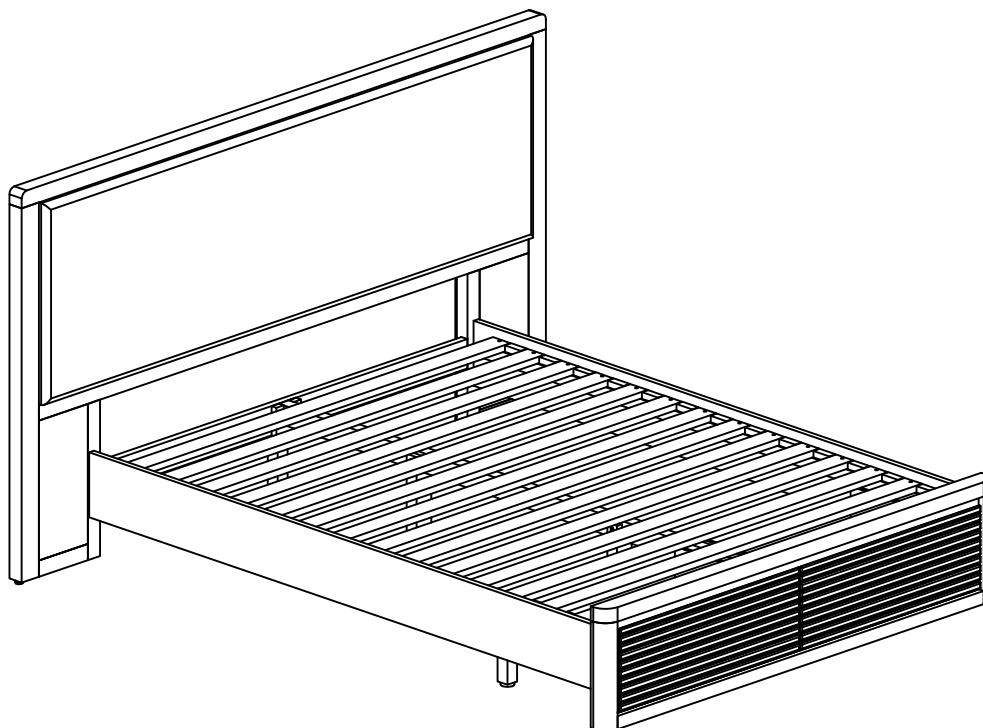


Finish

ASSEMBLY INSTRUCTION

LV402 - B51 TALLBOY 4 DRAWERS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

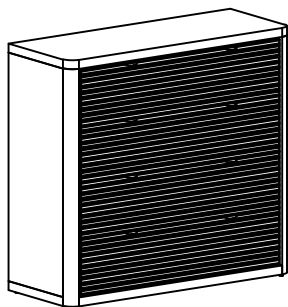

ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.

Please sort out all parts before you begin to assemble the item.

This is to make sure you always use the correct part .

6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .


Toppling furniture can cause serious injuries and death.

This product has not been fitted with an anchor strap.



To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

No.	Hardware list		Q'ty
①		Anti-tip kits	2
②		Screws M4 x 20	4

No.	Hardware list		Q'ty
③		Screws M4 x 35	4
④		Wall plugs	4

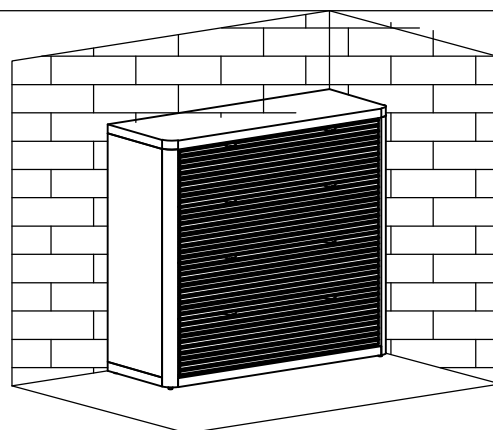

Step 1

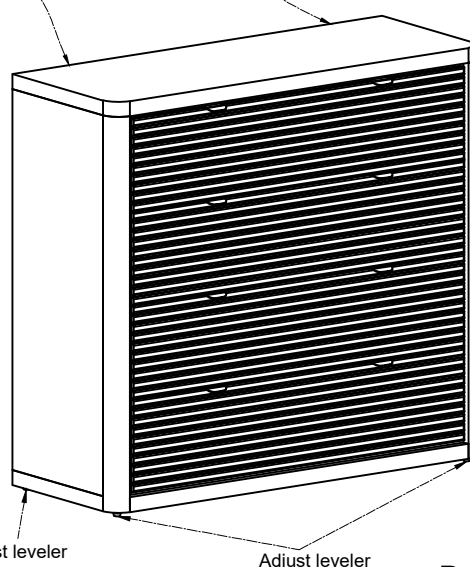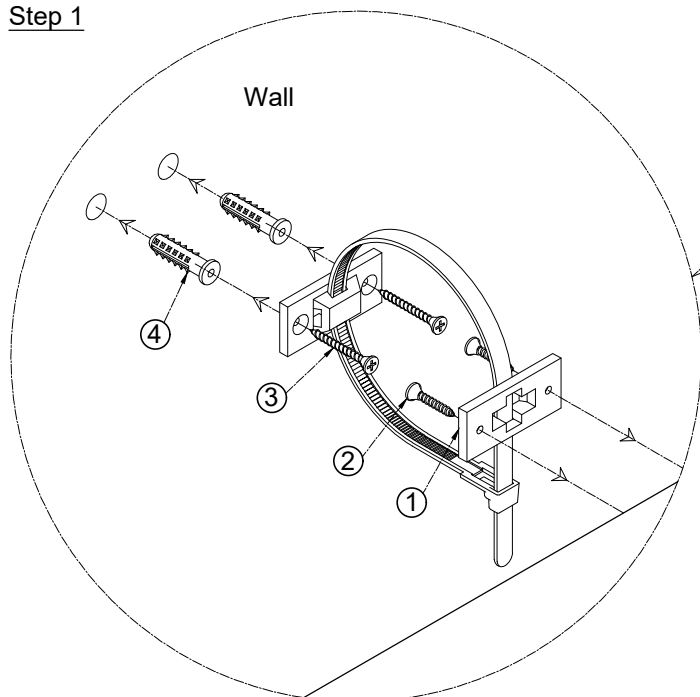

ASSEMBLY INSTRUCTION

LV402.B41 BEDSIDE 2 DRAWERS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly




WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part .
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .

Toppling furniture can cause serious injuries and death.

This product has not been fitted with an anchor strap.




To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

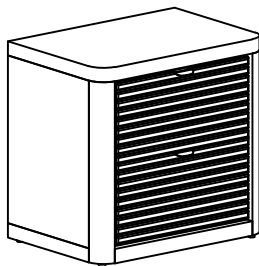

No.	Hardware list	Q'ty
①	 Anti-tip kits	2
②	 Screws M4 x 20	4

No.	Hardware list	Q'ty
③	 Screws M4 x 35	4
④	 Wall plugs	4


Step 1

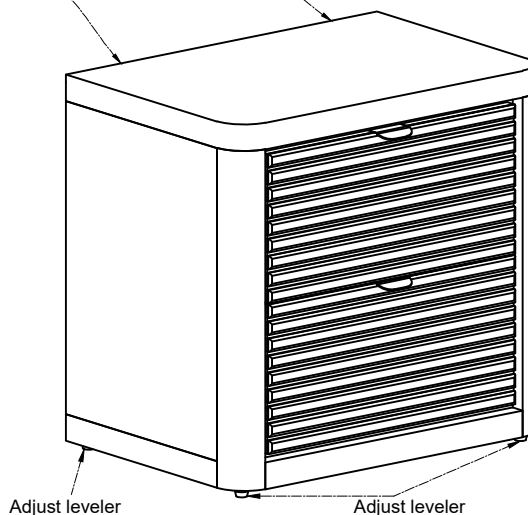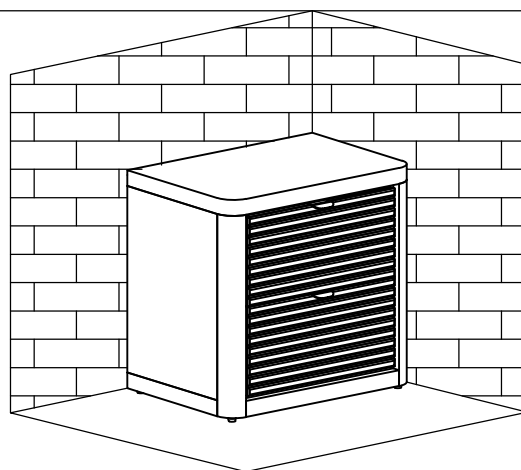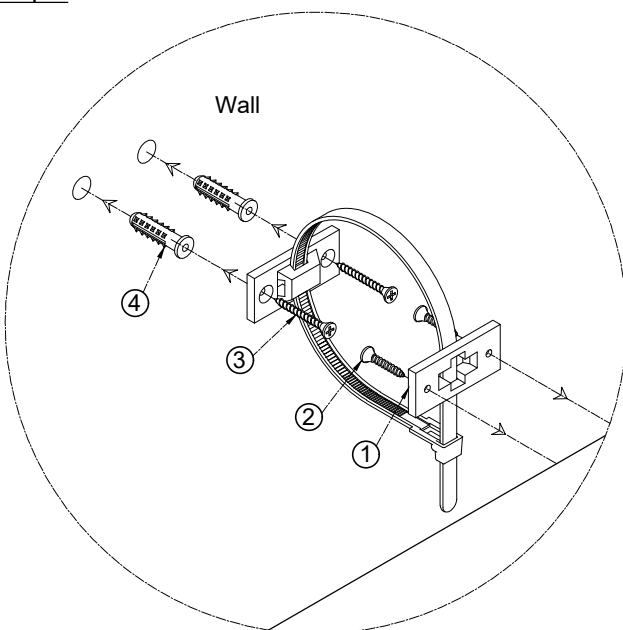

ASSEMBLY INSTRUCTION

LV402.B61 (DRESSER 6 DRWS) & LV402.B71 (MIRROR)

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

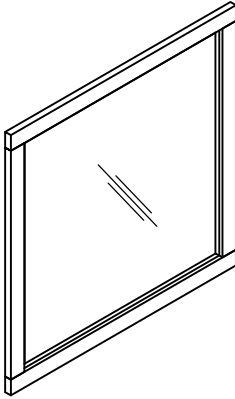

ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part .
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .

Toppling furniture can cause serious injuries and death.

This product has not been fitted with an anchor strap.

To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

No.	Component	Q'ty
①	 Mirror	1
②	 Support Rails	2

No.	Hardware list	Q'ty
①	 Bolt M8x40	8
②	 Flat Washers M8x19mm	8

No.	Hardware list	Q'ty
③	 Allen key K4	1

