






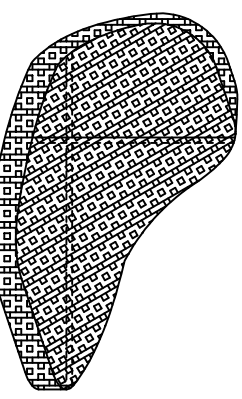

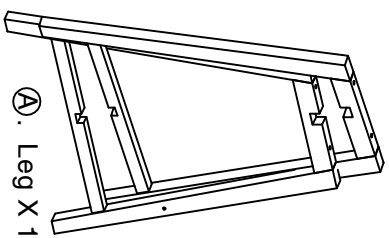

ASSEMBLY INSTRUCTIONS


HUC23349

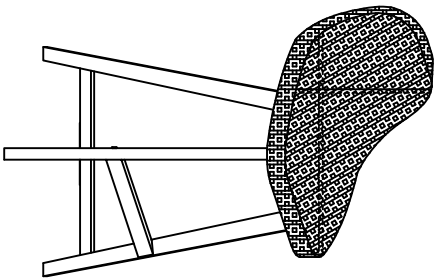


These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.

 <p>1 Bolt M6 x 60 = 4Pcs</p>	 <p>2 Screw M6 x 40 = 2pcs</p>	 <p>3 Screw M4 x 15 = 8pcs</p>
 <p>4 Bracket = 1 Pce</p>	 <p>5 Screwdriver x 1</p>	 <p>6 Allen Key 4 x 2</p>


I

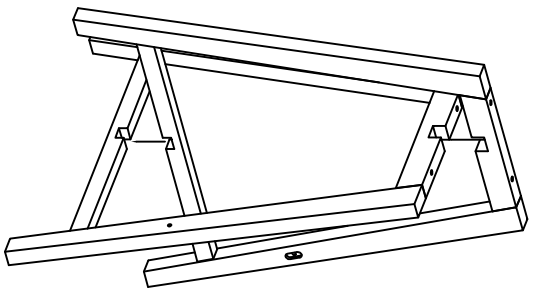

II

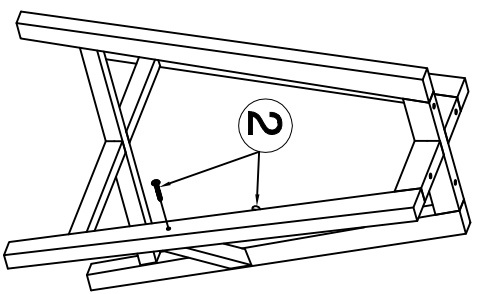

III

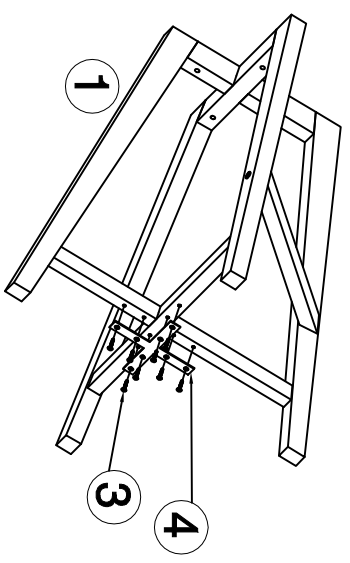

IV

