



ASSEMBLY INSTRUCTIONS


HUC28725

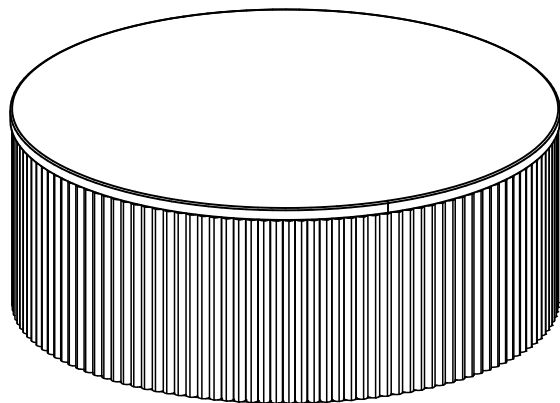

Components:

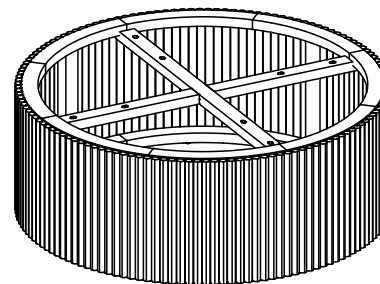


A. LEG FRAME X 1

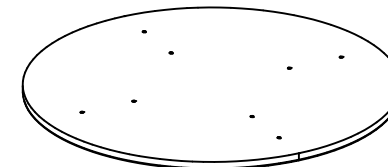

B. CEMENT TOP X 1


These instructions must be used to ease the assembly of your furniture.
Please ensure that you have all the components before assembly.
Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.



① BOLT M6 x 60 = 8 pcs




② WASHERS = 8 pcs




③ Allen Key 4 = 1 pce

Step 1:

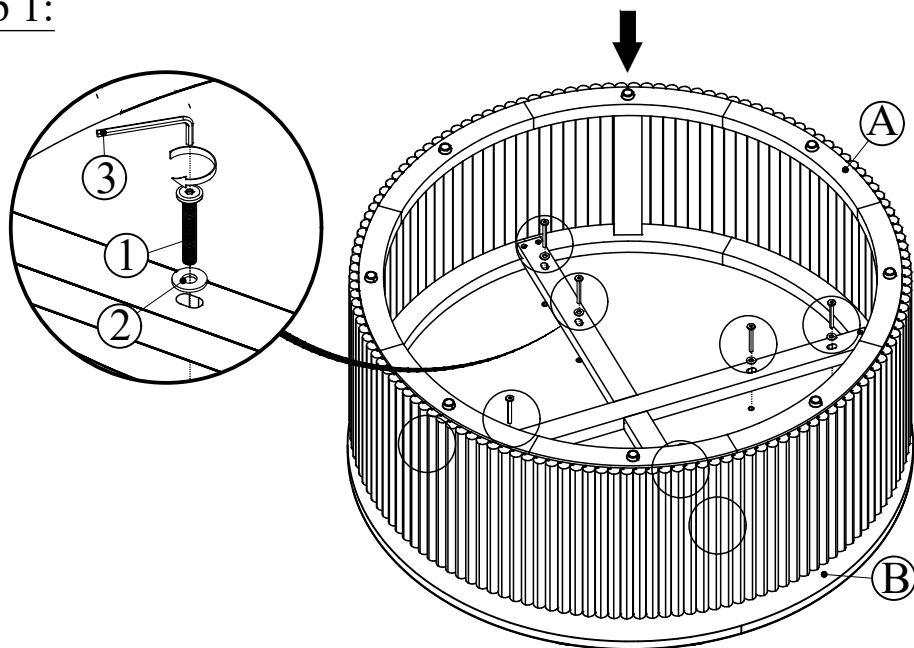

Step 2:

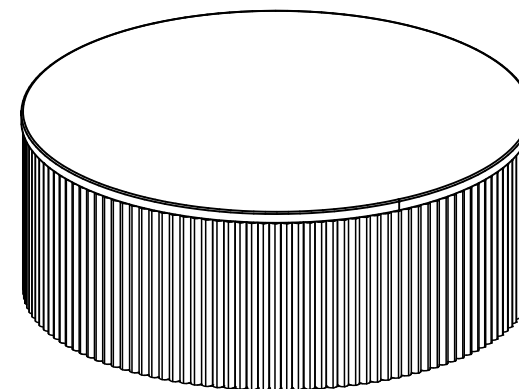

Finished

"Please DO NOT fully tighten all screw and bolts until the entire item is completely assembled"