


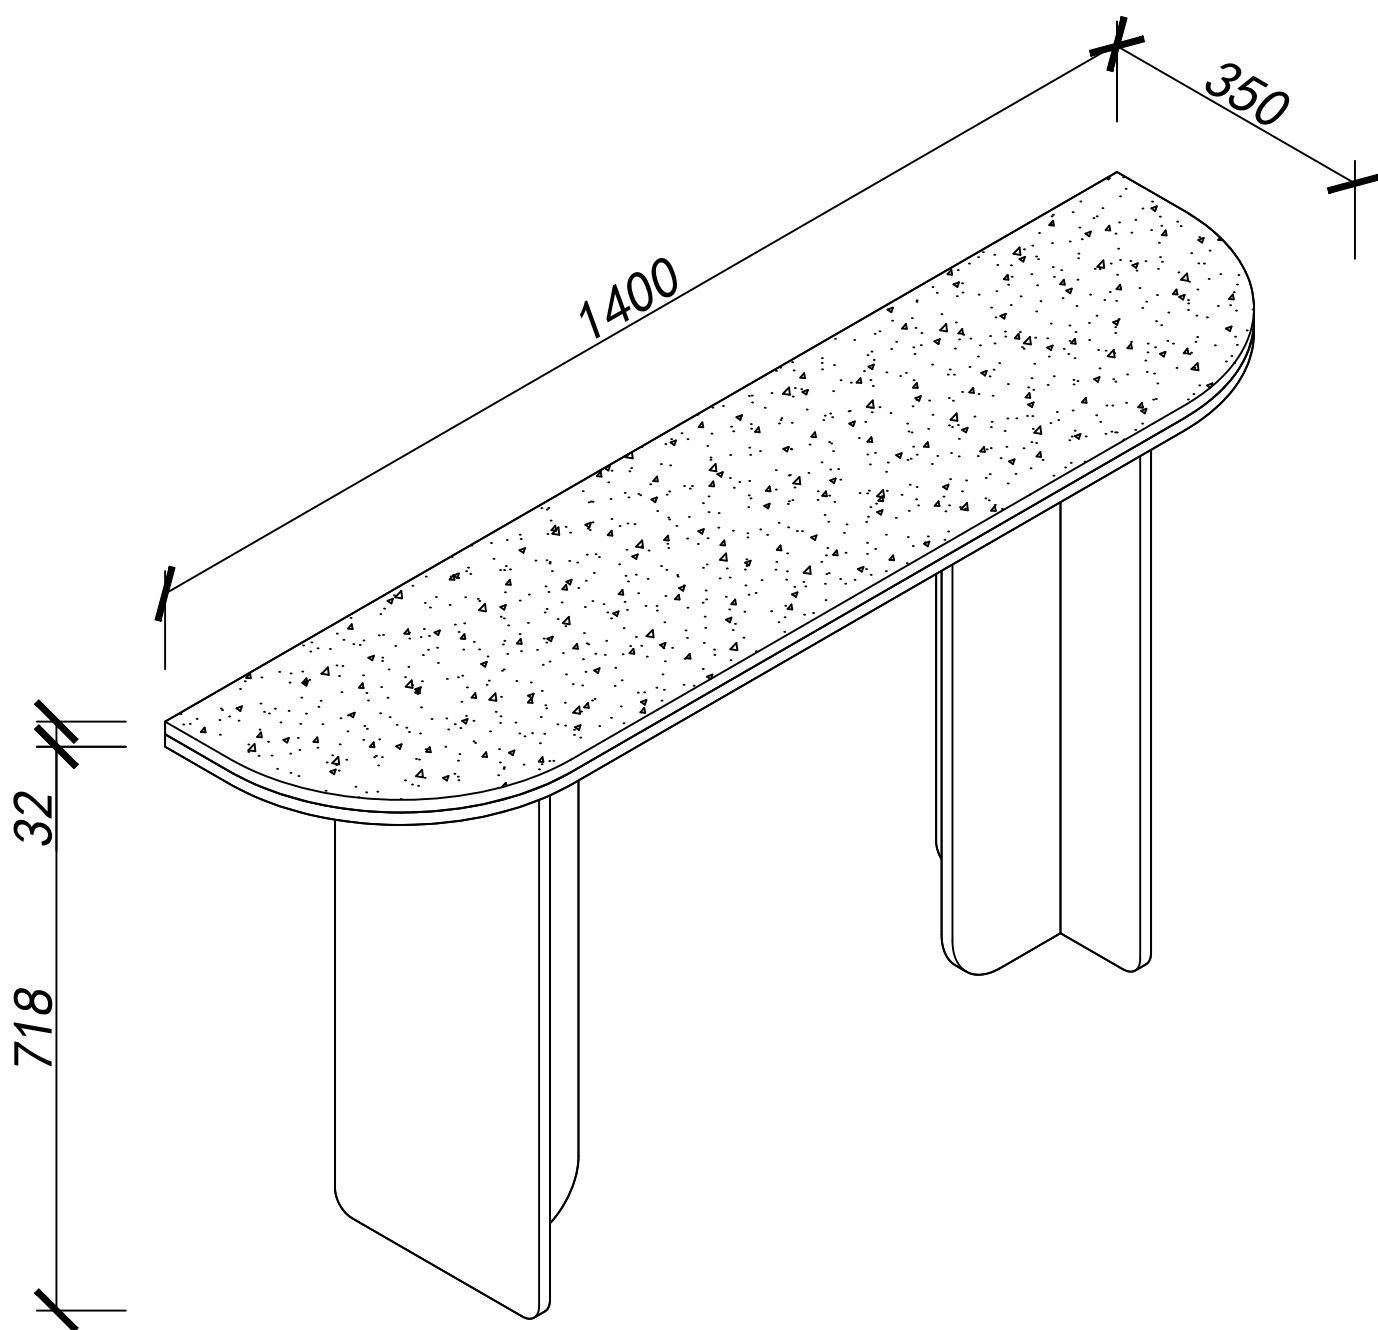
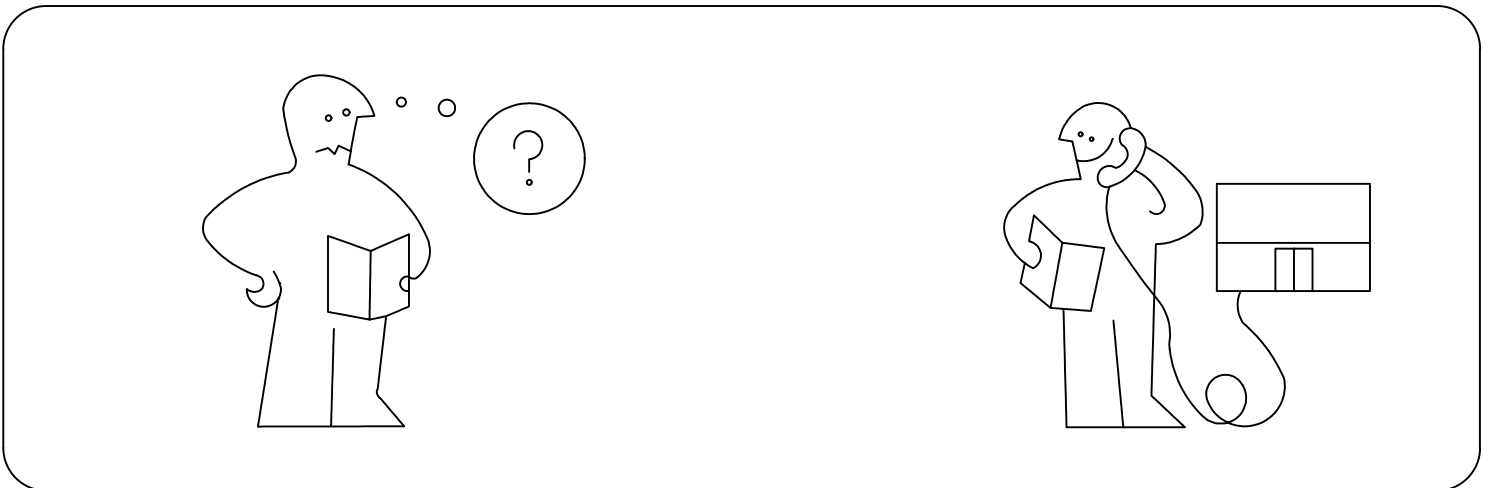


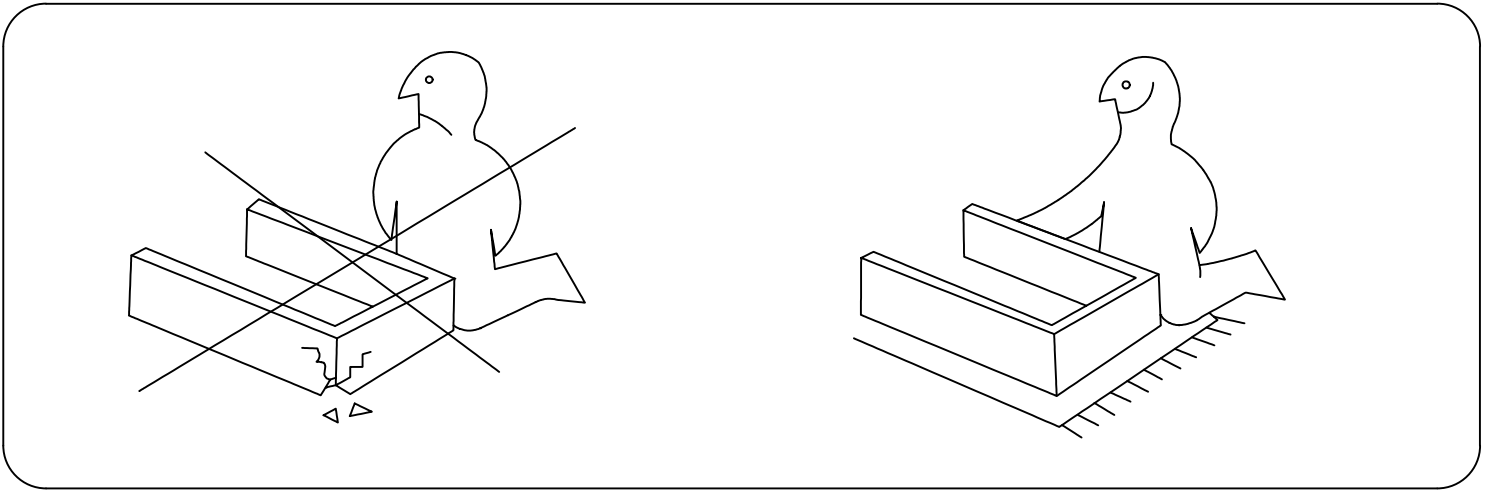


Assembly Instruction

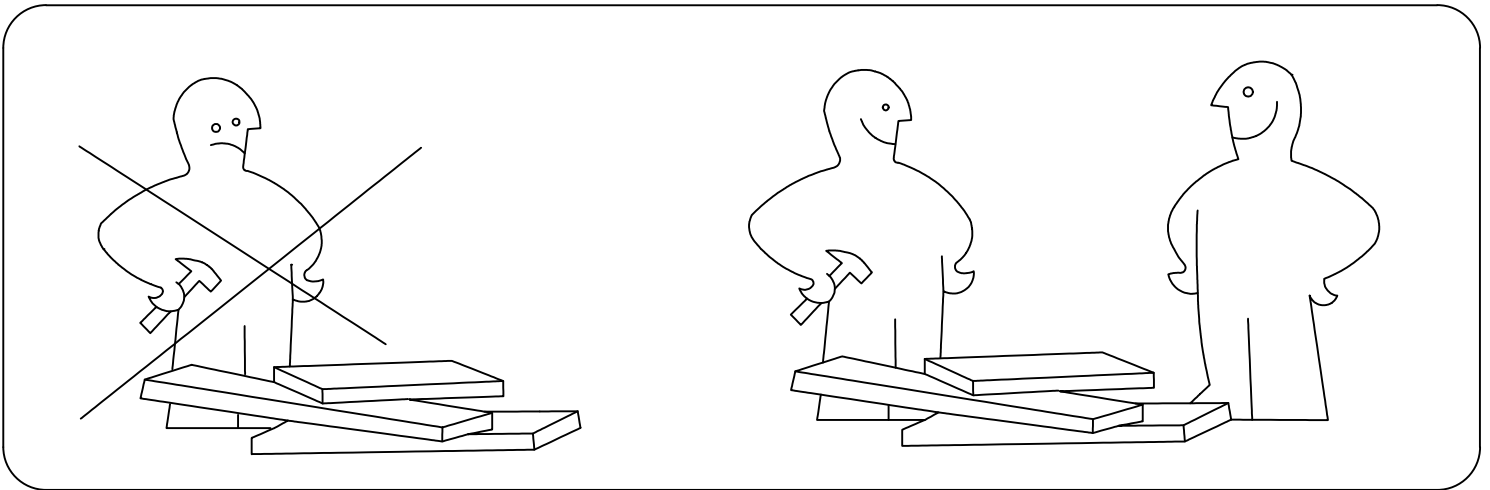


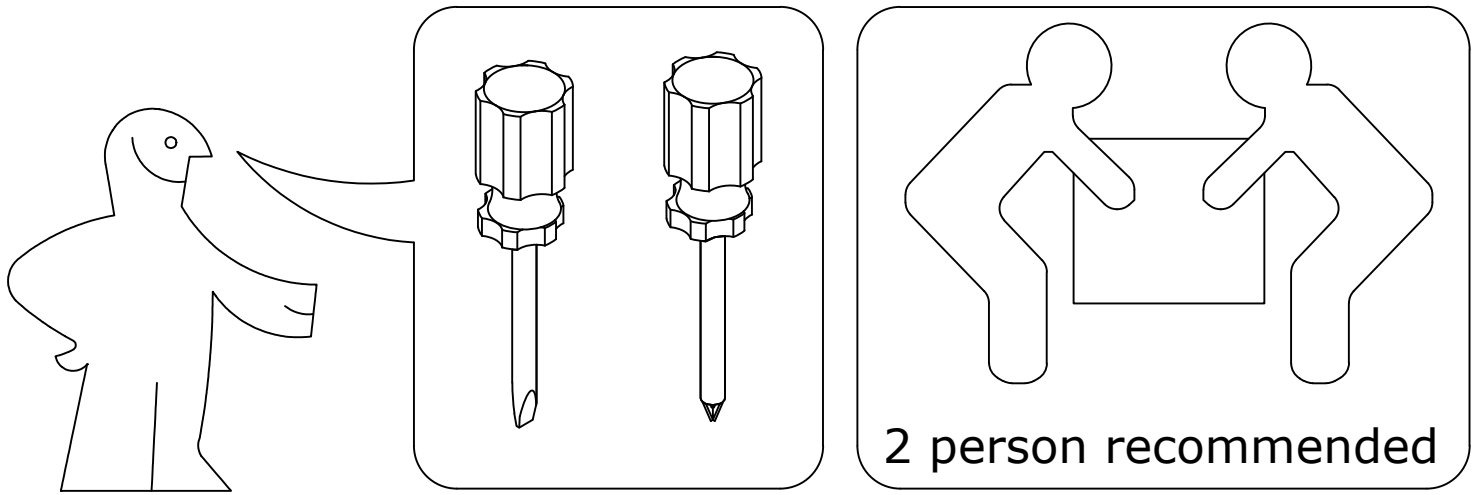

Panel No	Panel Sizes	Quantity
1	1400*350*16	1
2	1399*349*16	1
3	713*300*16	1
4	713*300*16	1
5	713*159*16	1
6	713*159*16	1

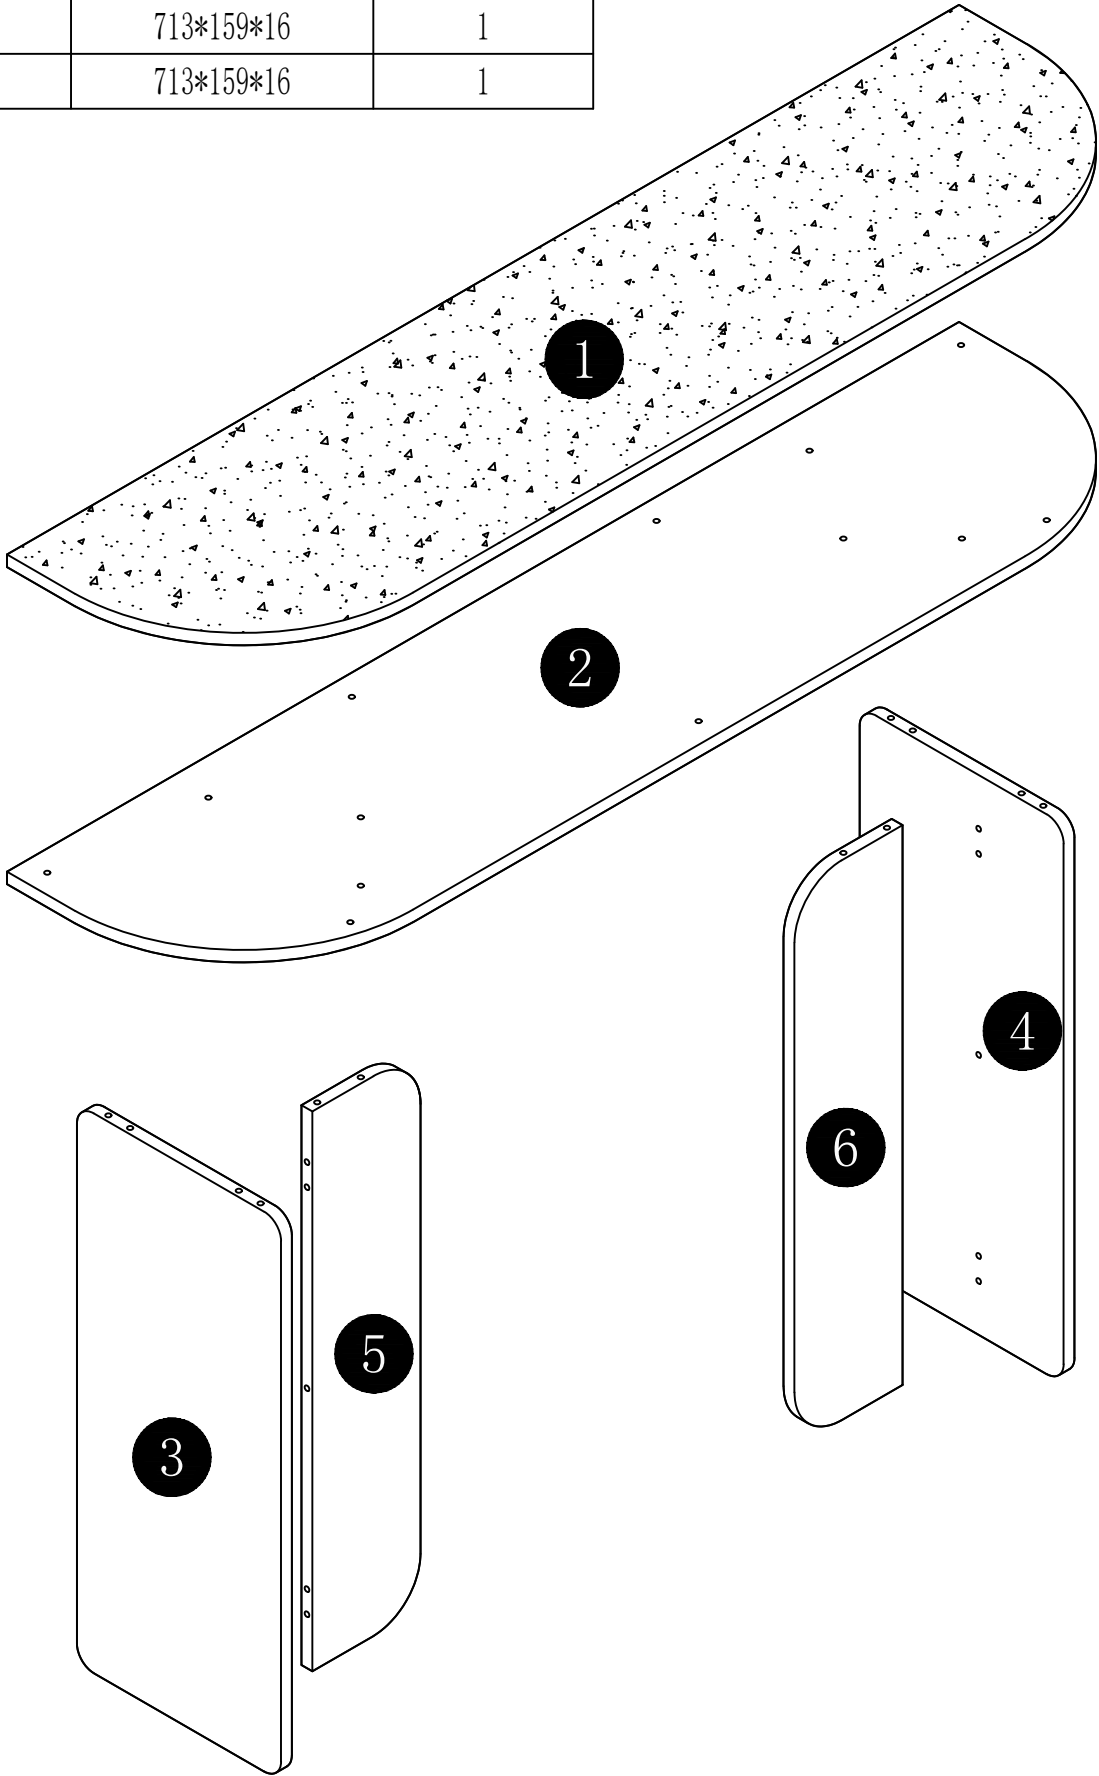


Fittings




M6*40

A=6



Φ 8*30

B=10

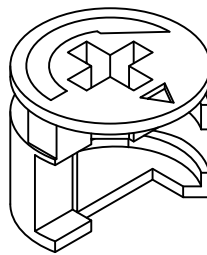


Φ 15*12

C=6




Φ 21

D=13

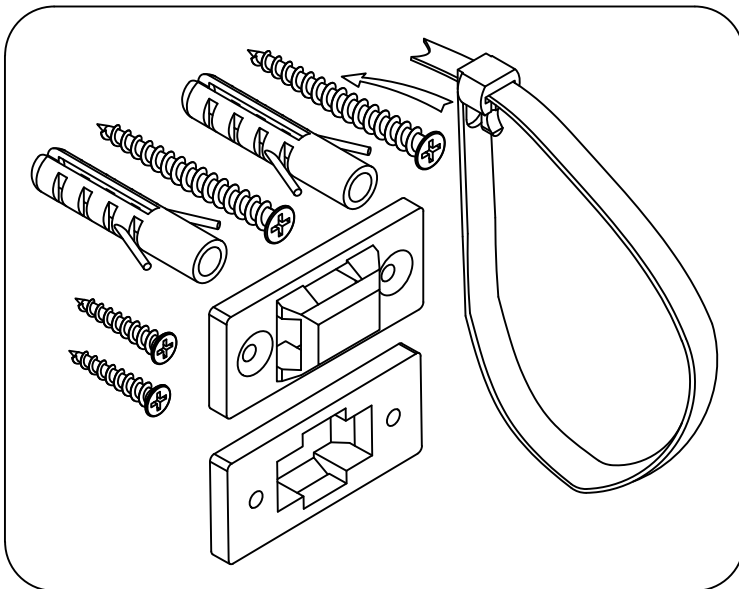


F=1

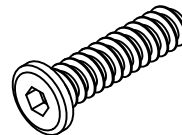

M6*25

G=7

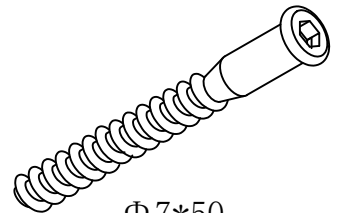


Φ 7*50

Q=6




H=1


STEP 1

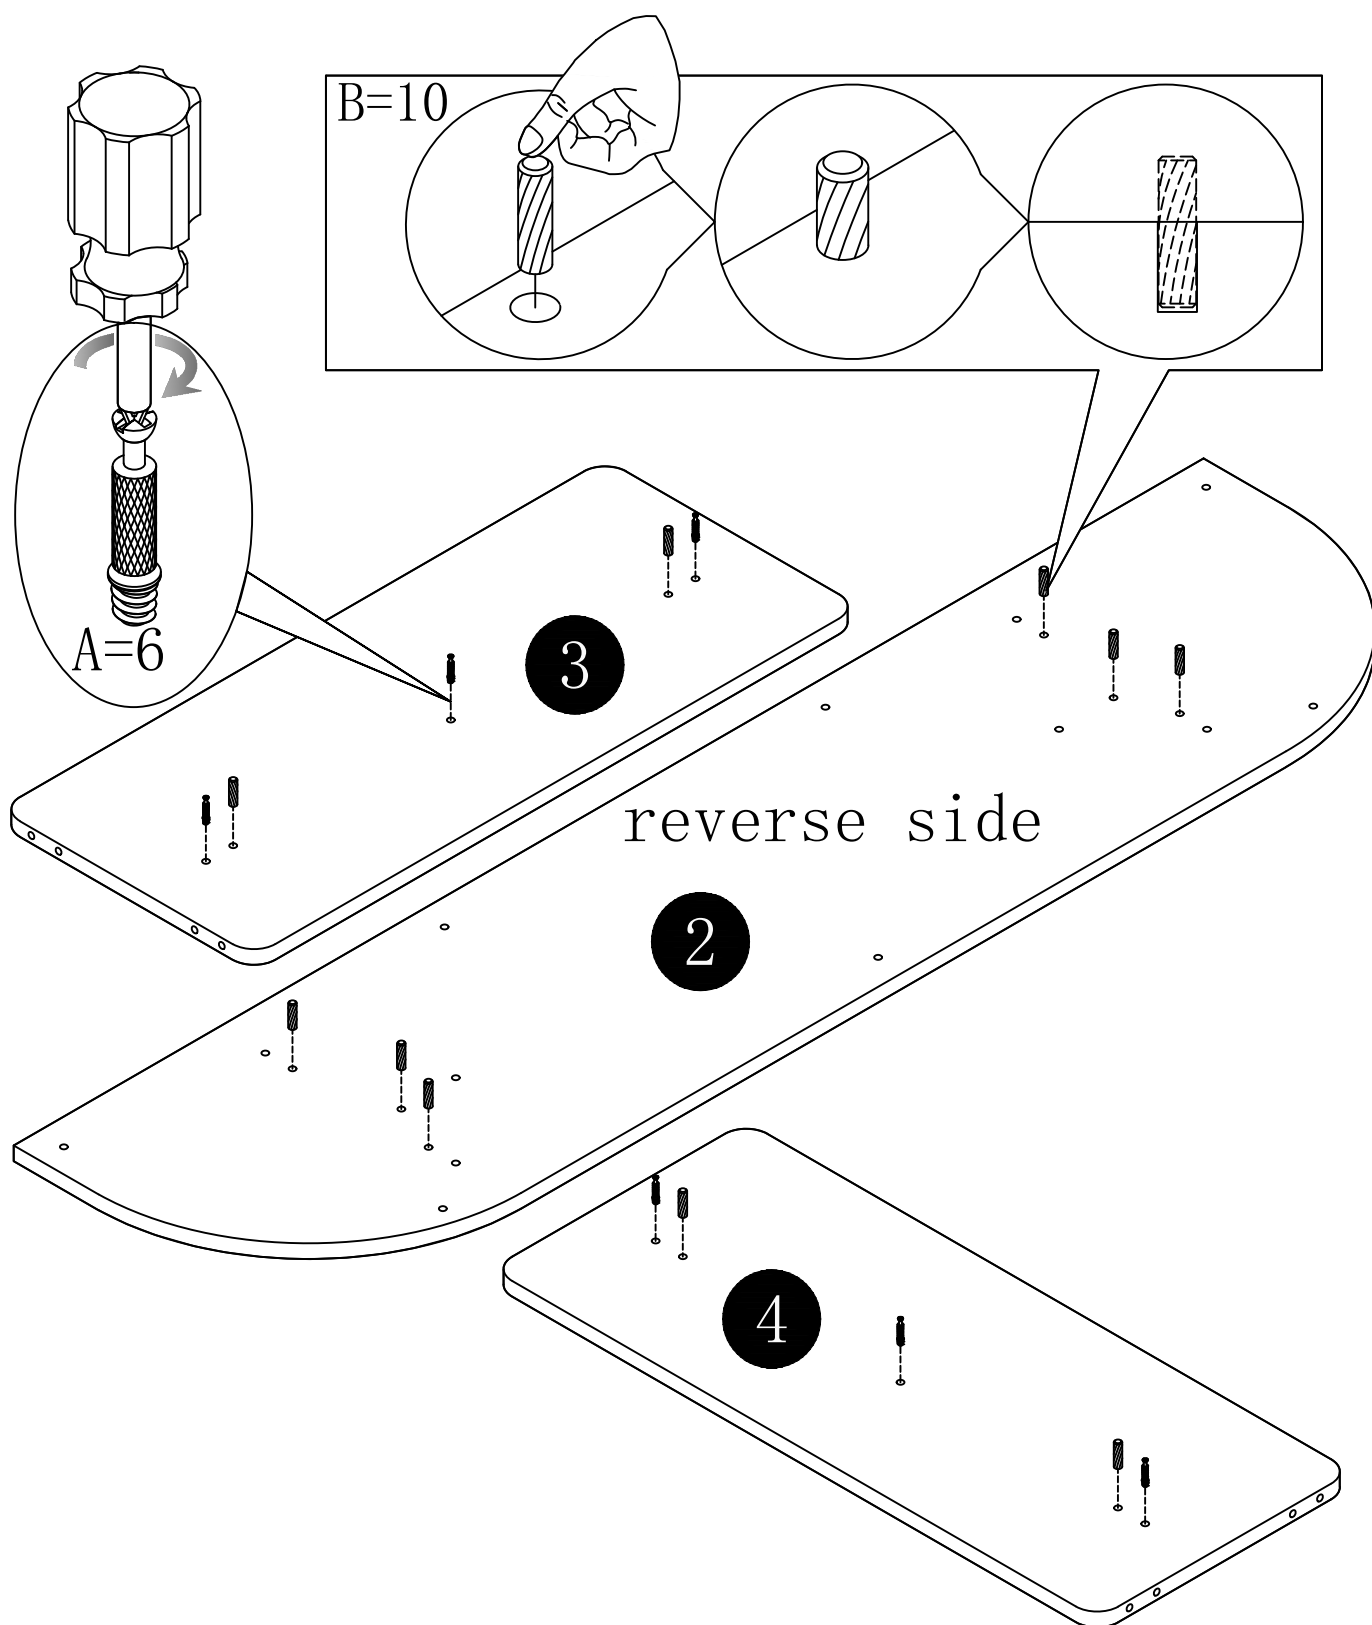


STEP 2

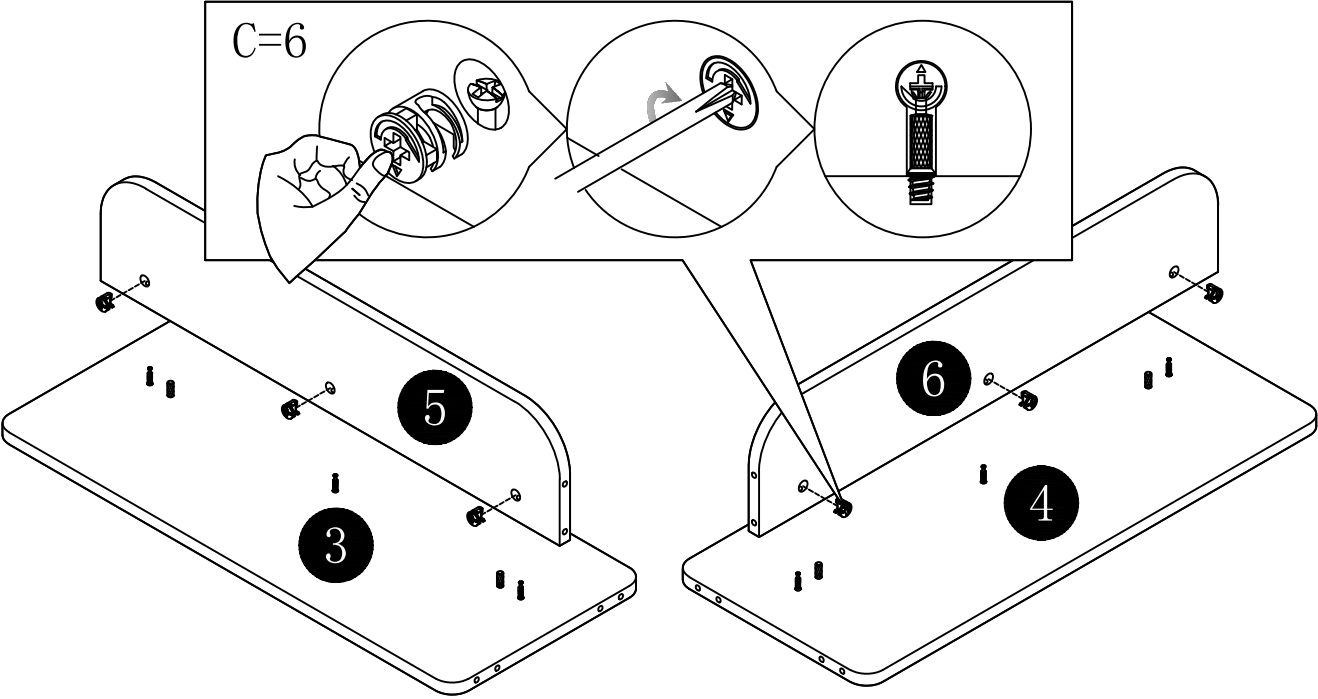


STEP 3

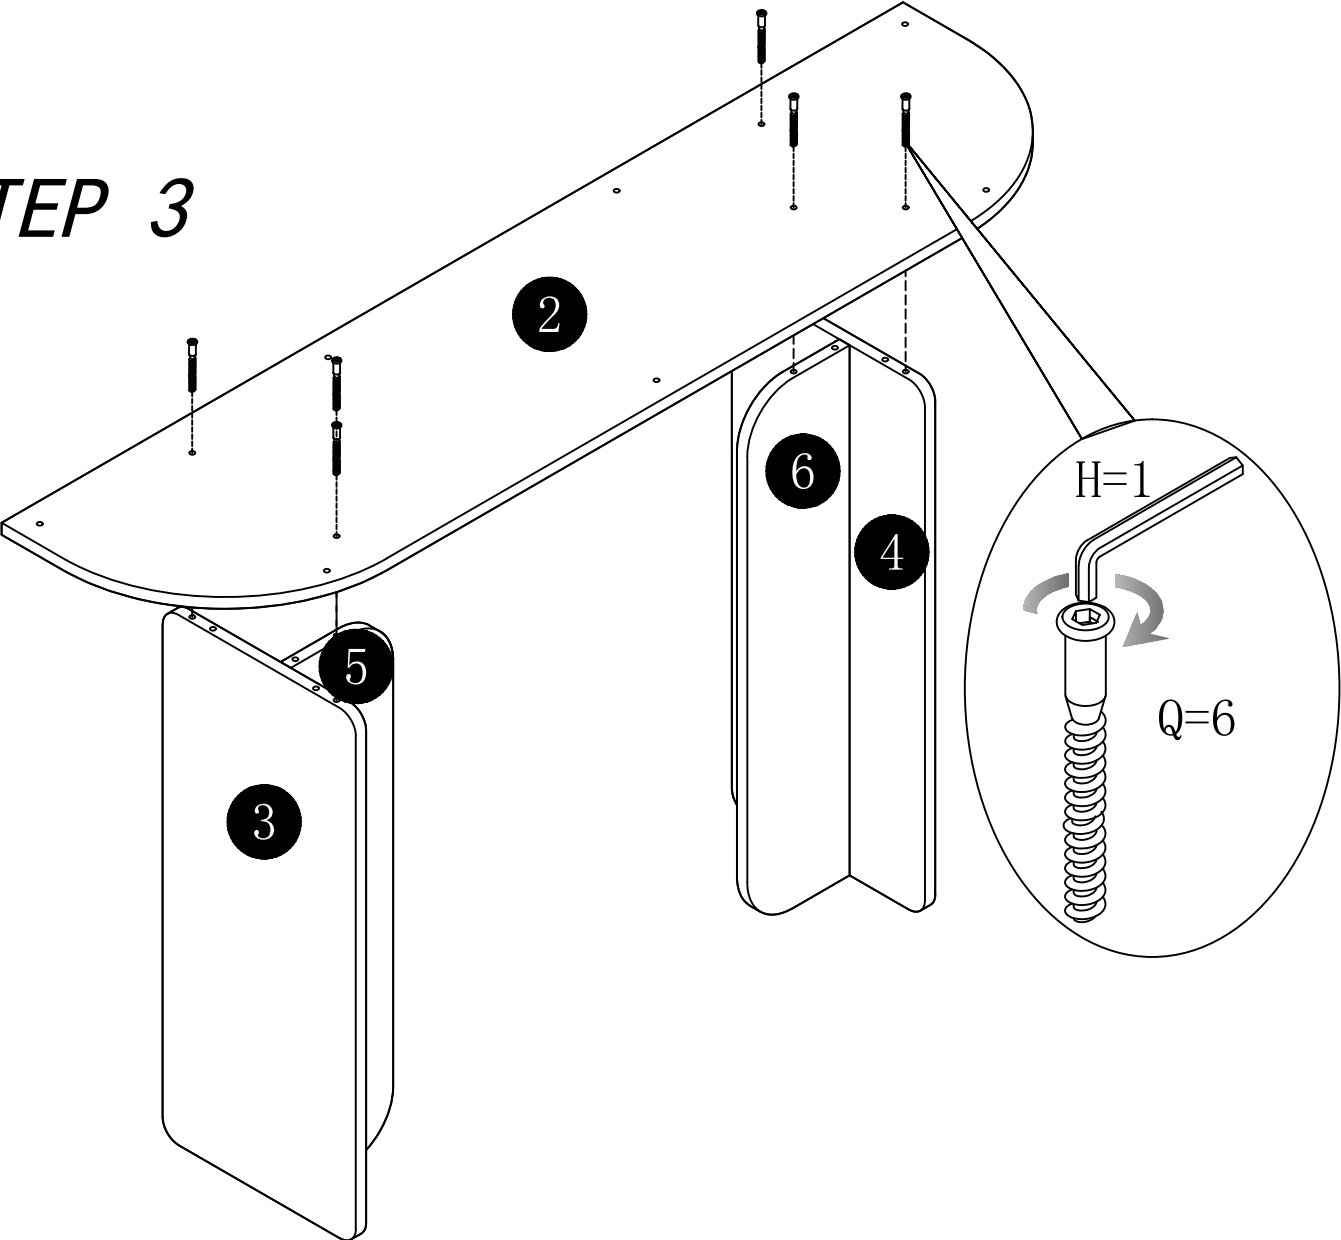


STEP 4

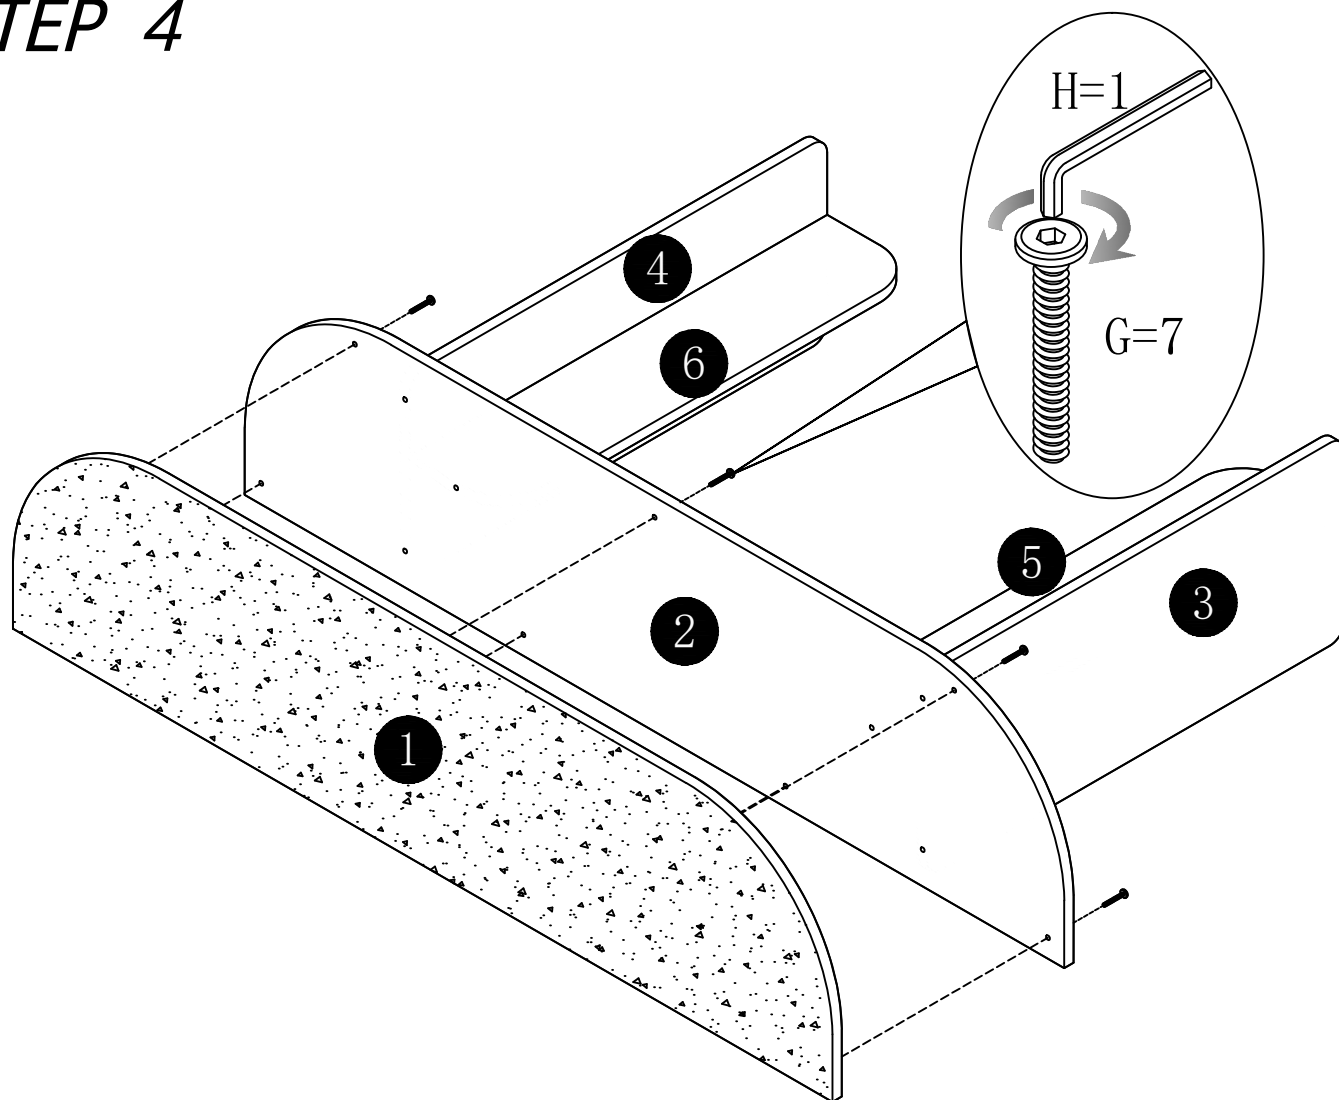


STEP 5

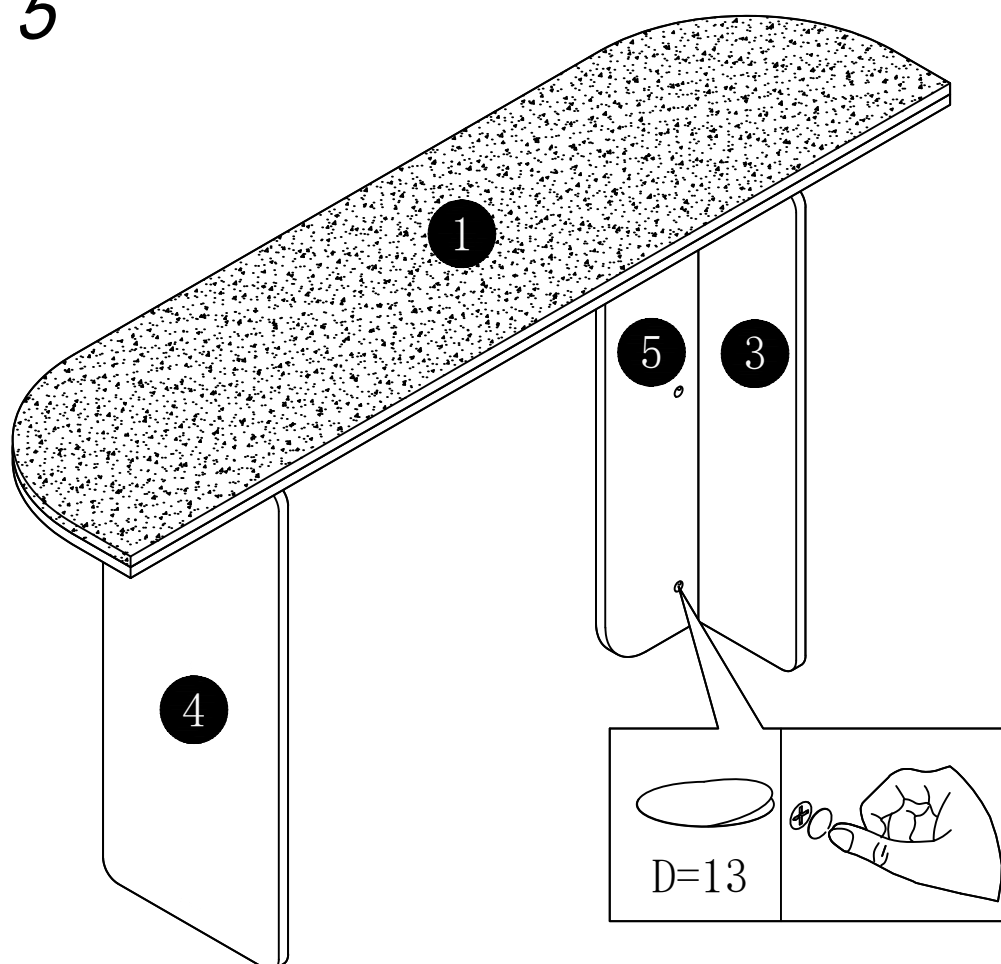

STEP 6

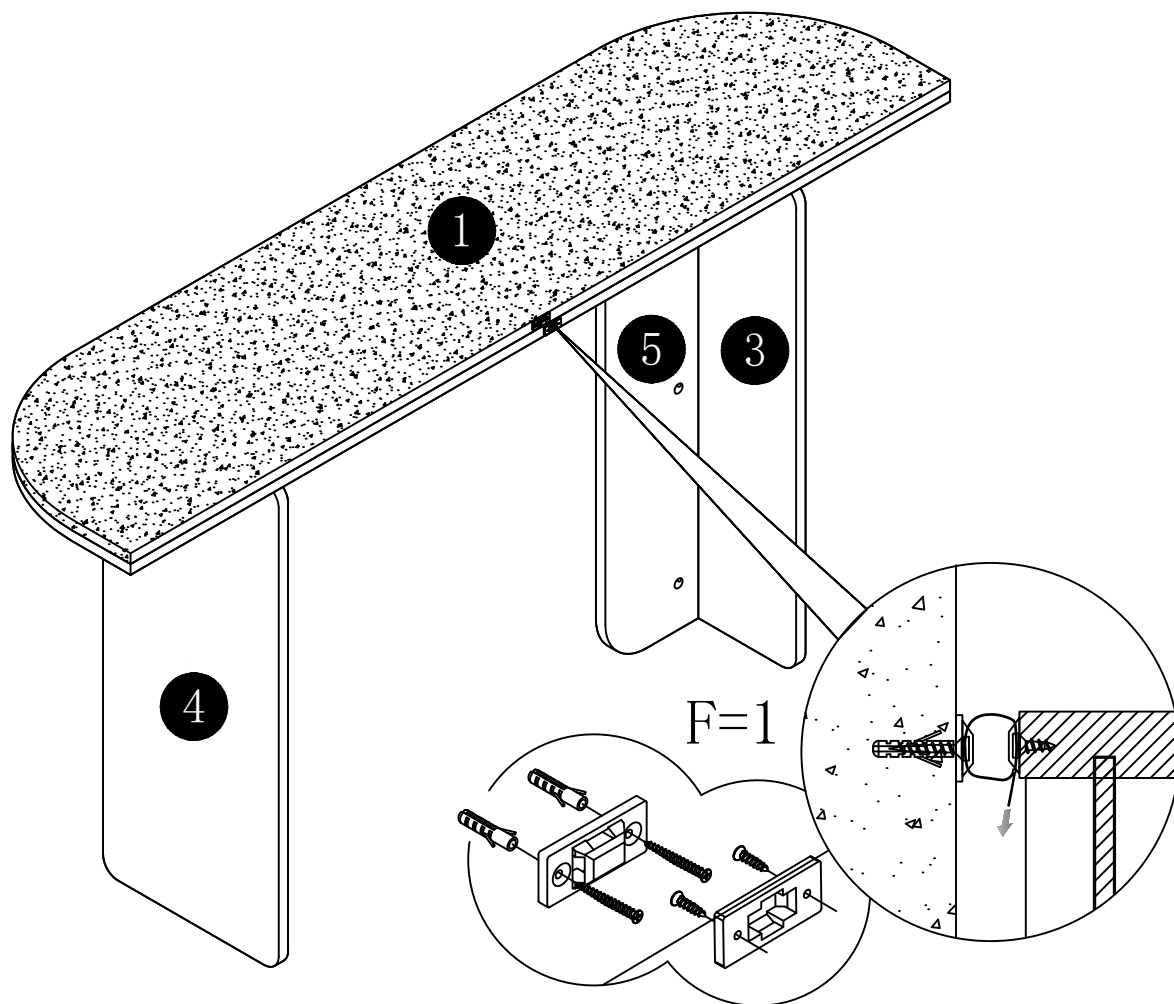

STEP 7

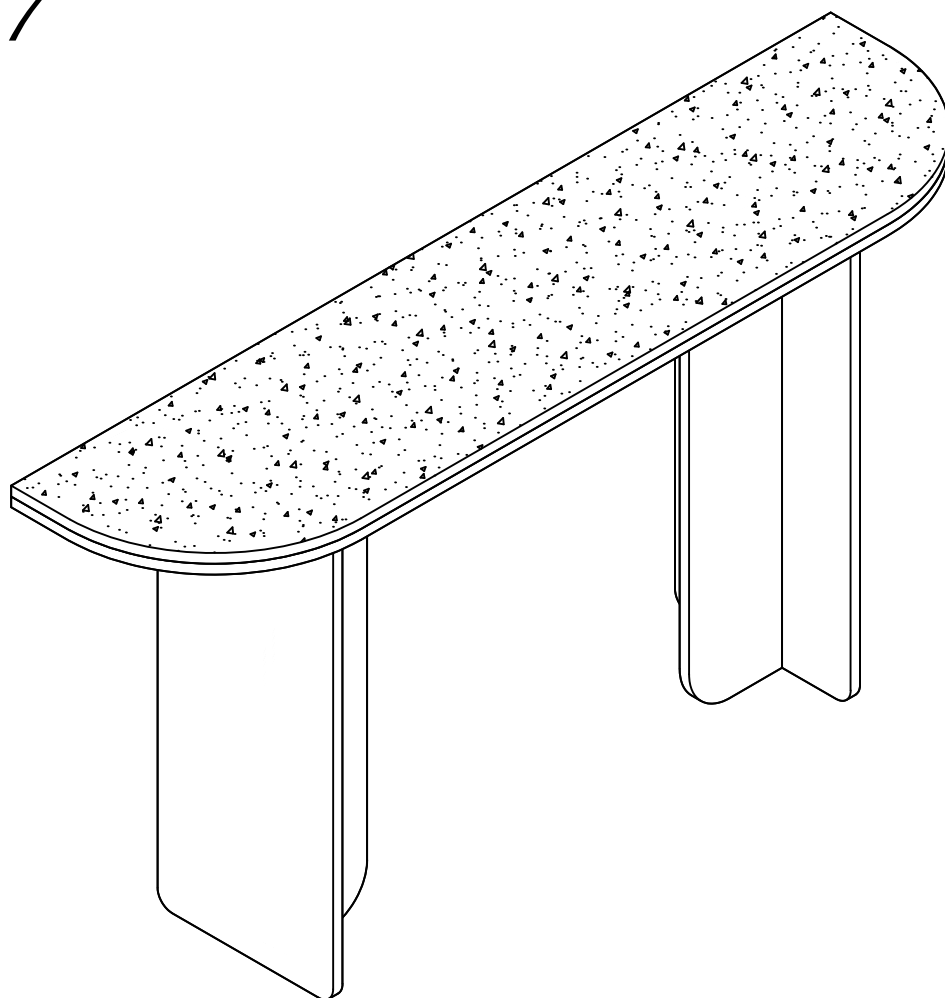

Finish