


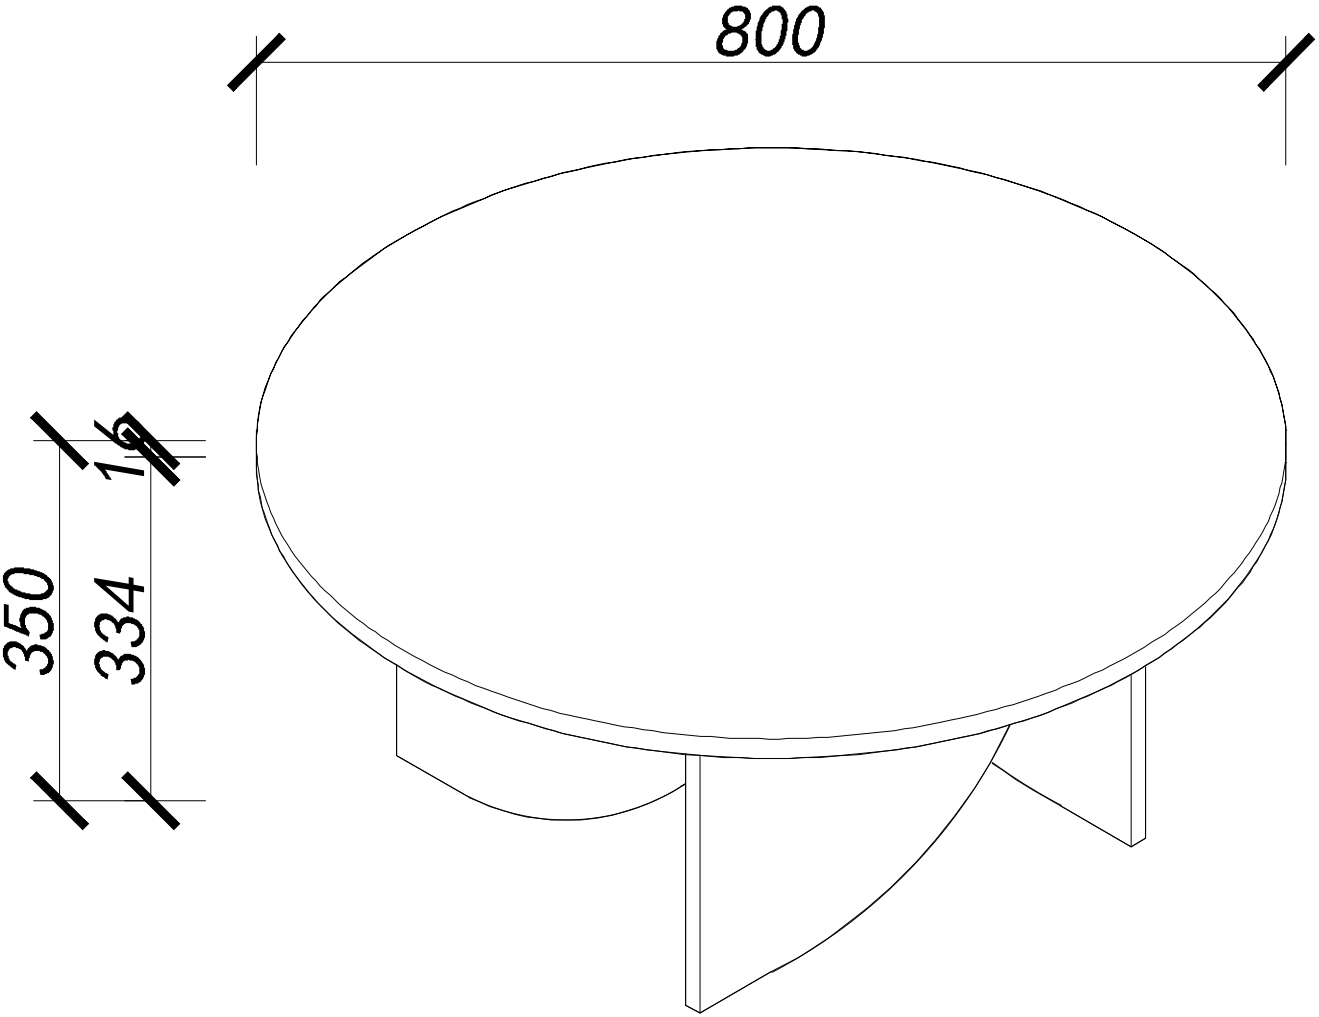
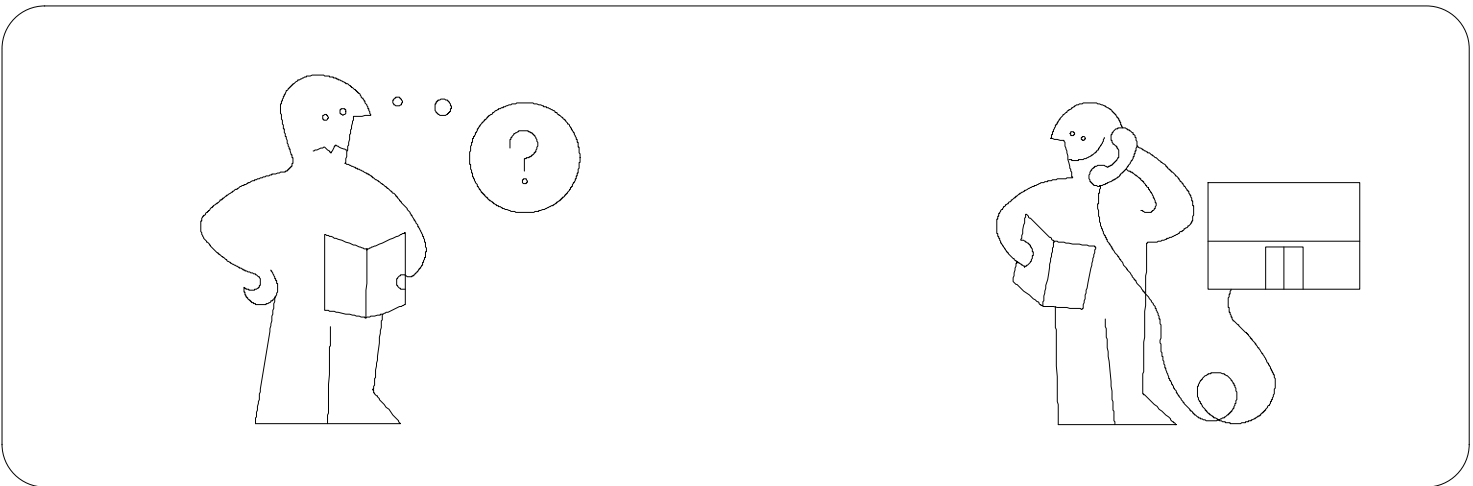
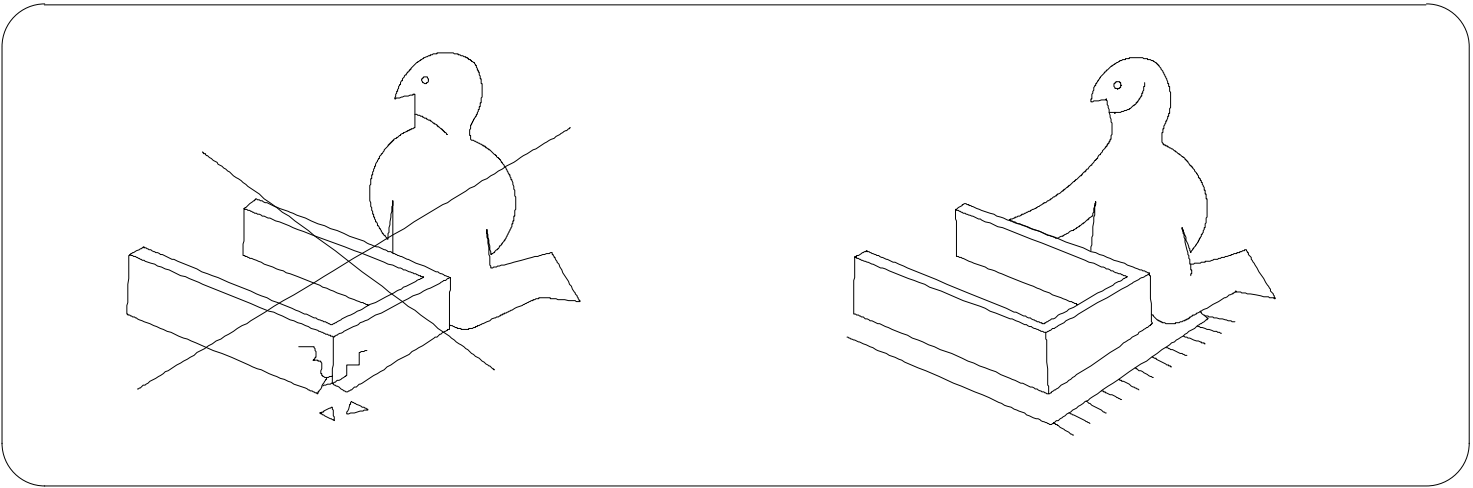


Assembly Instruction

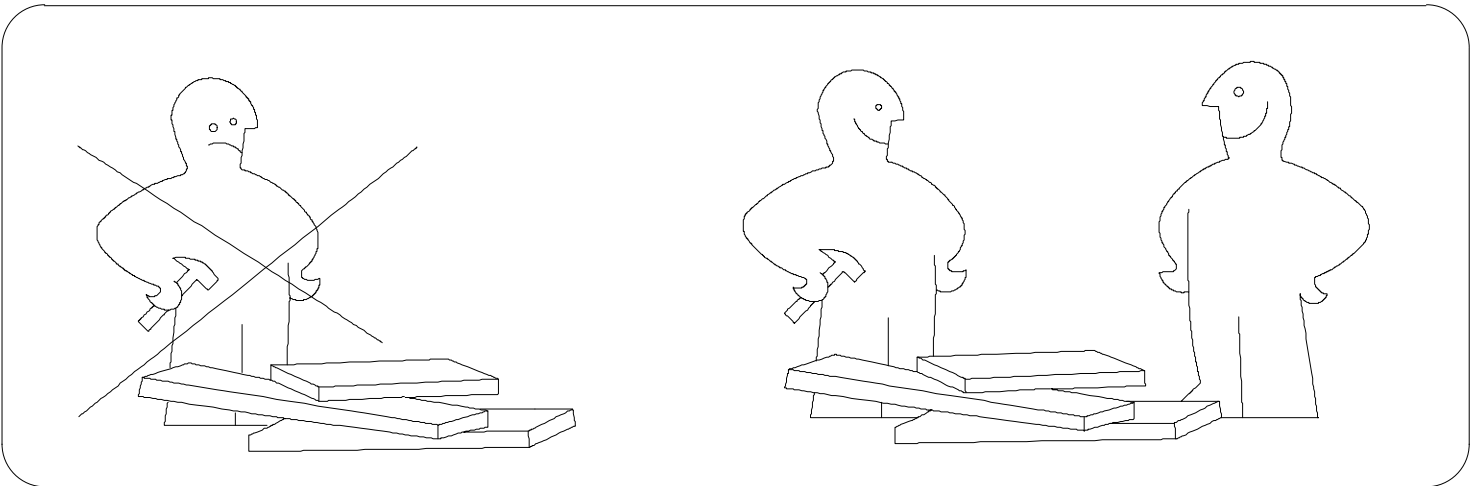


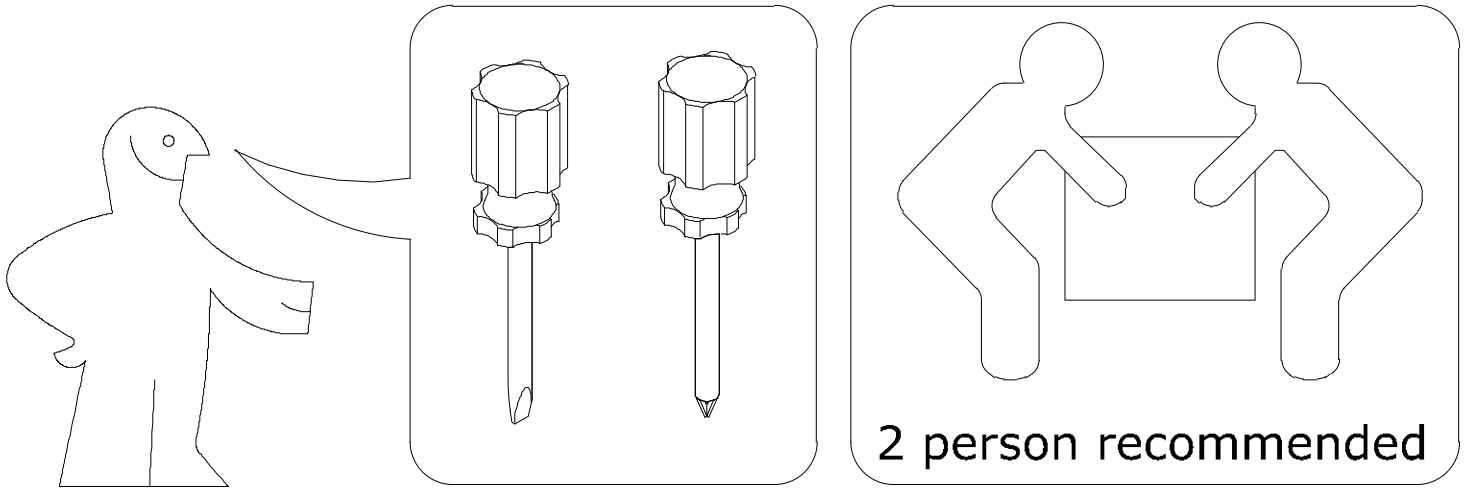

Panel No	Panel Sizes	Quantity
1	800*800*16	1
2	334*404*16	4

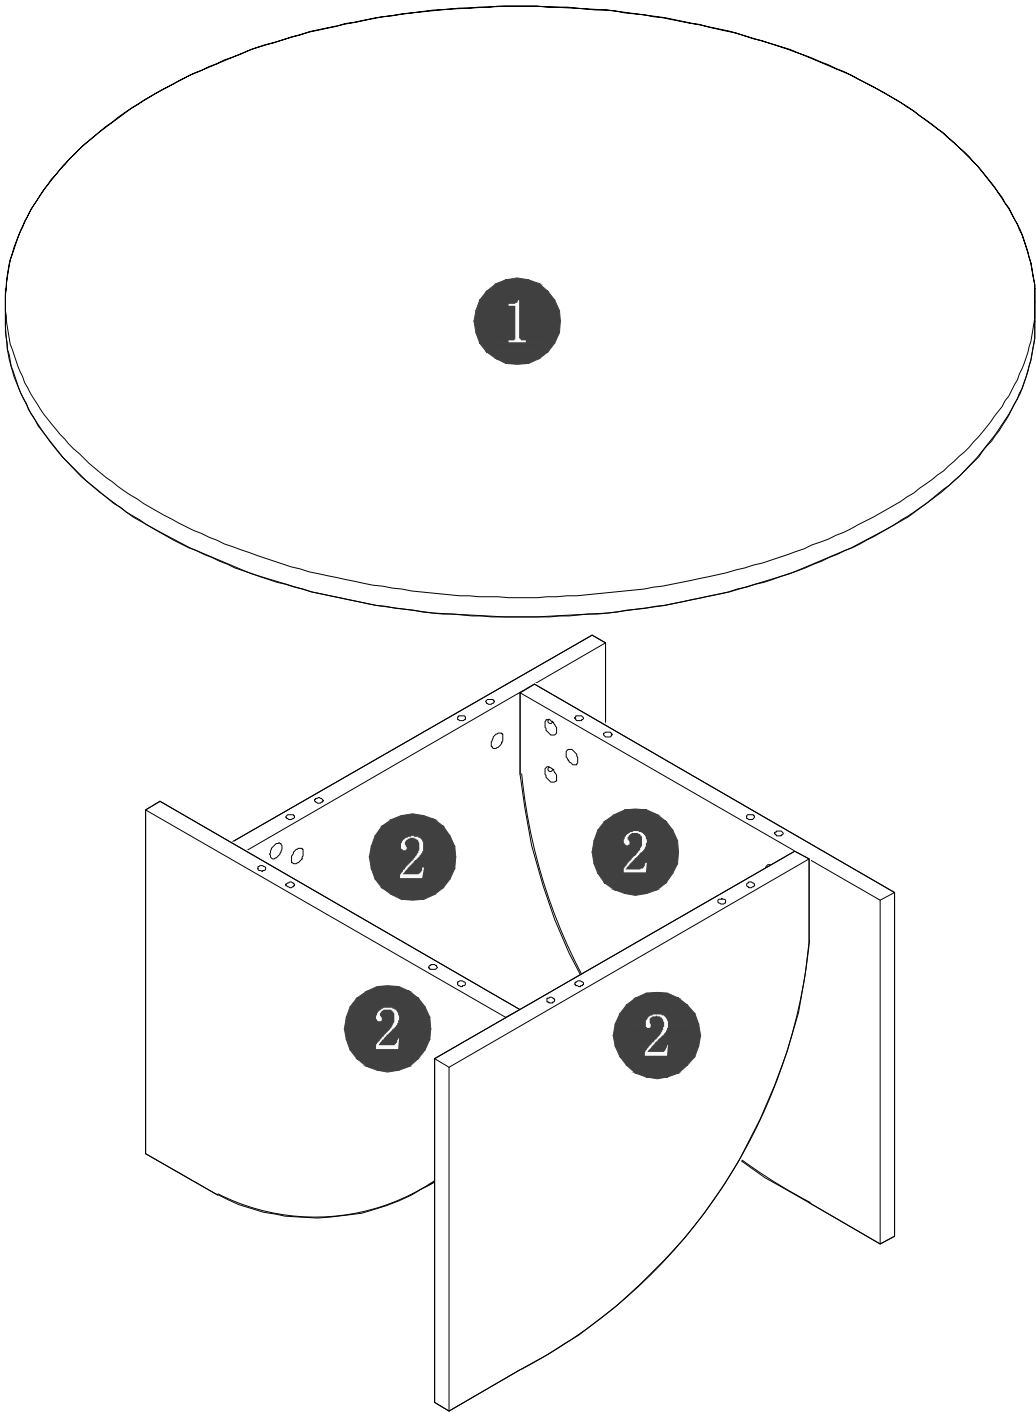


Fittings




M6*40

A=16



$\Phi 8*30$

B=12

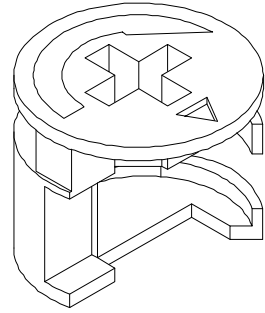

$\Phi 15*12$





C=16




$\Phi 21$

D=16



STEP 1

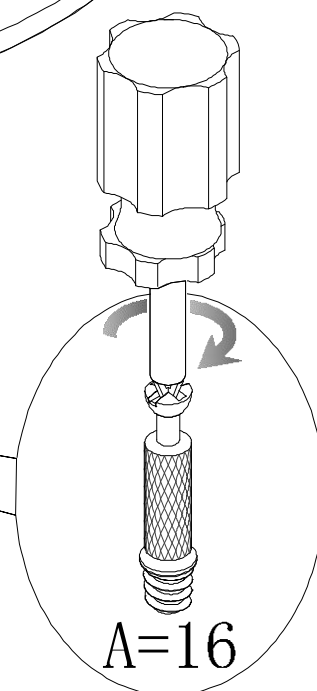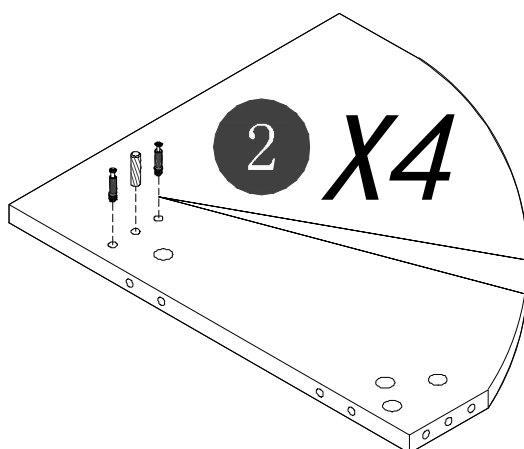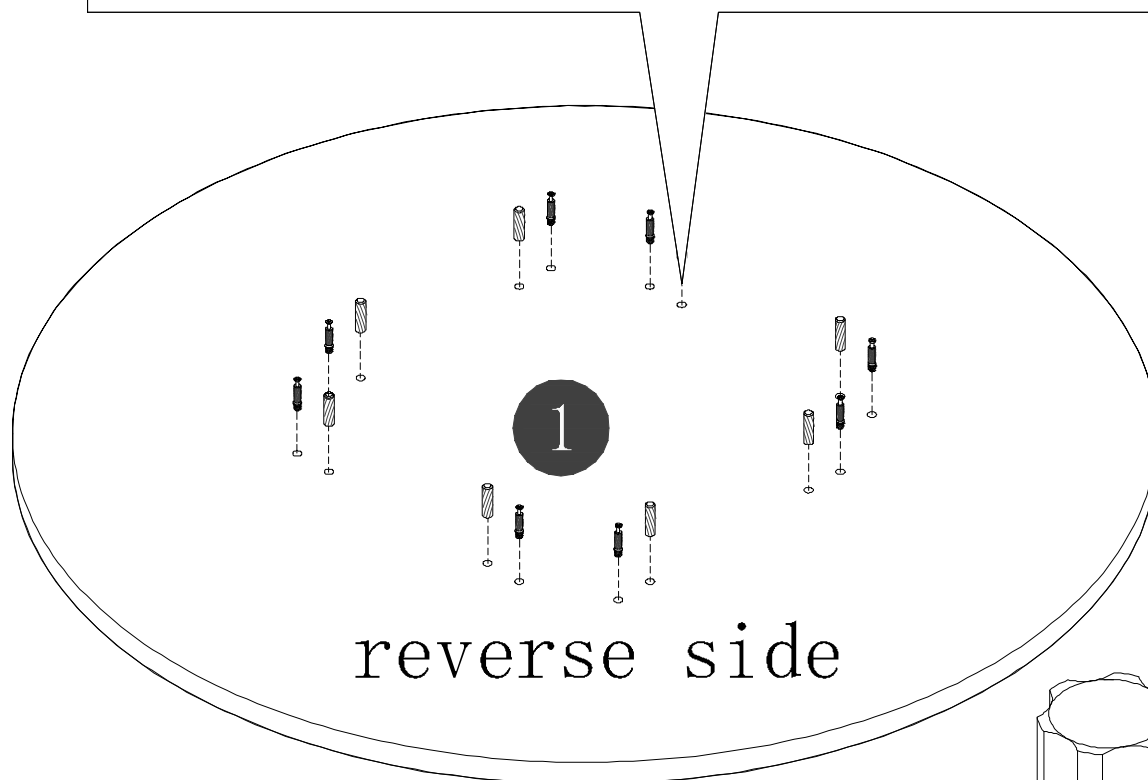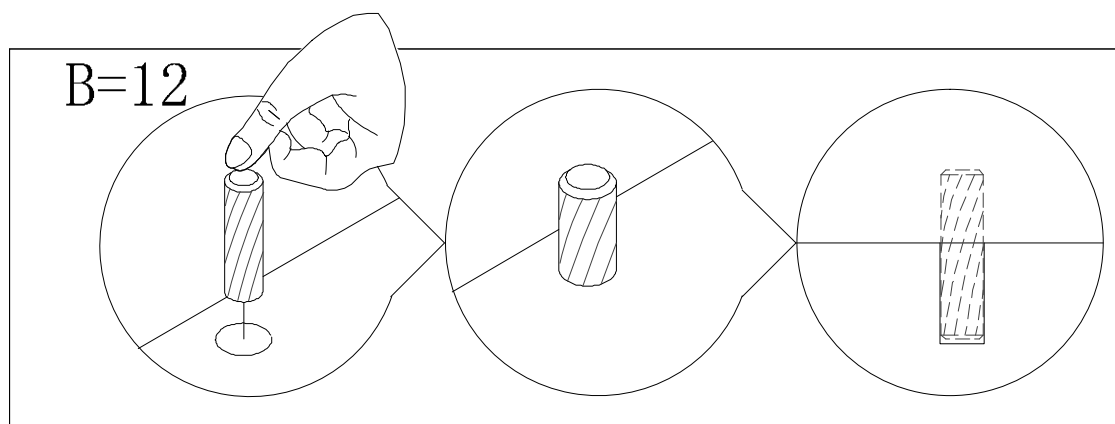


STEP 2

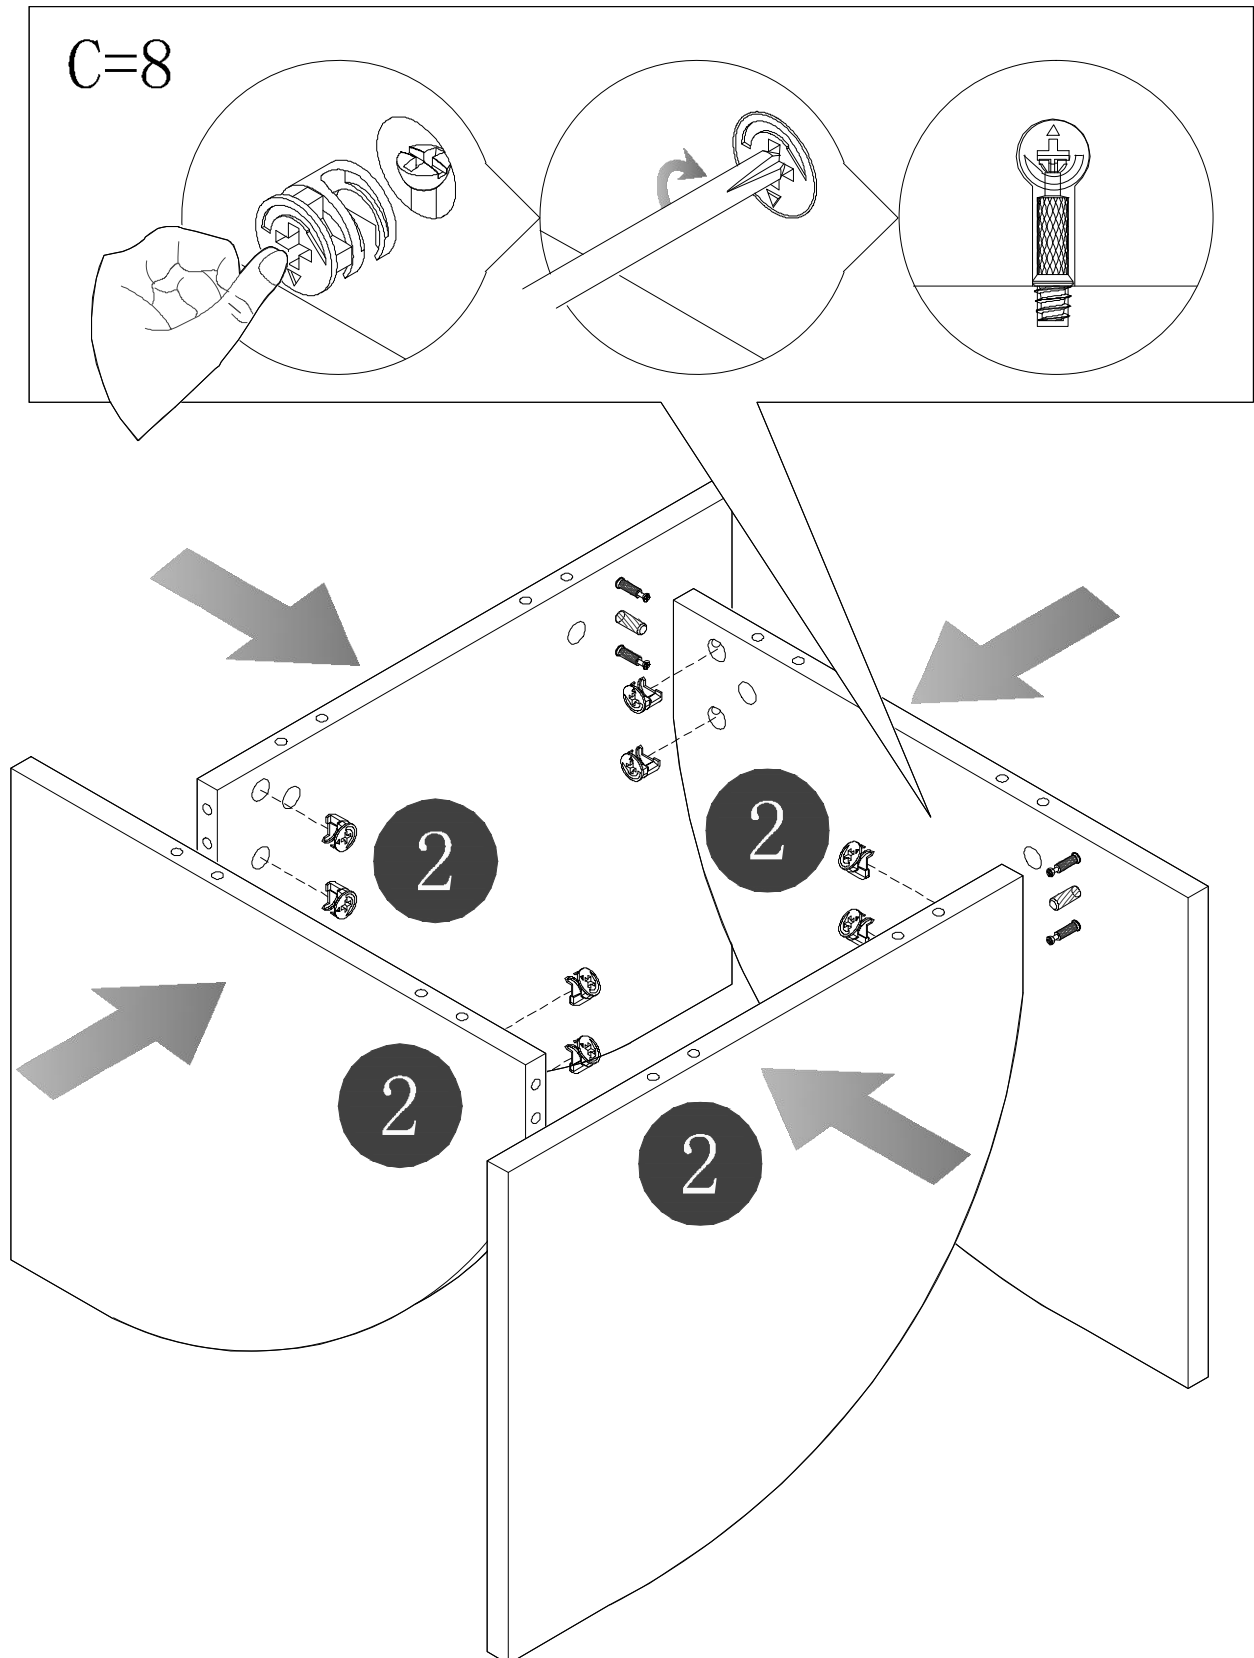

STEP 3

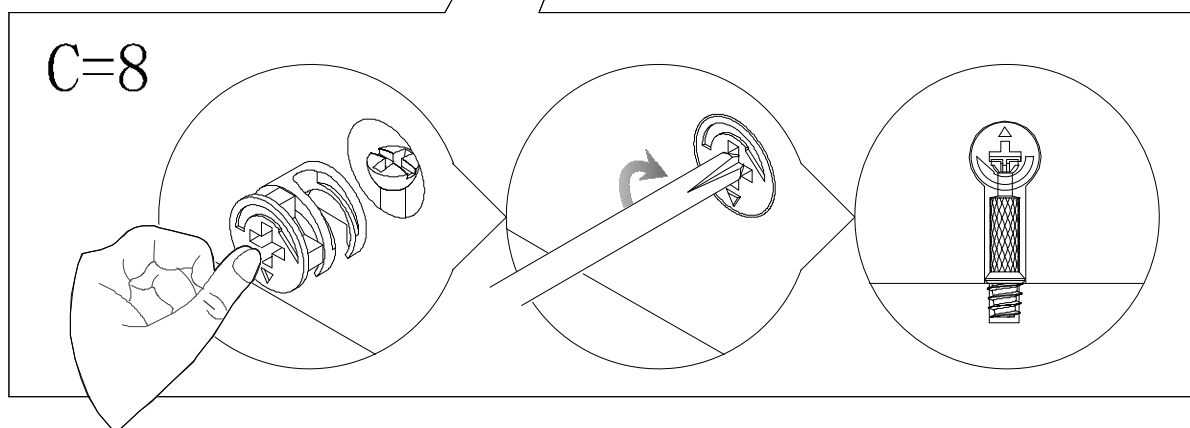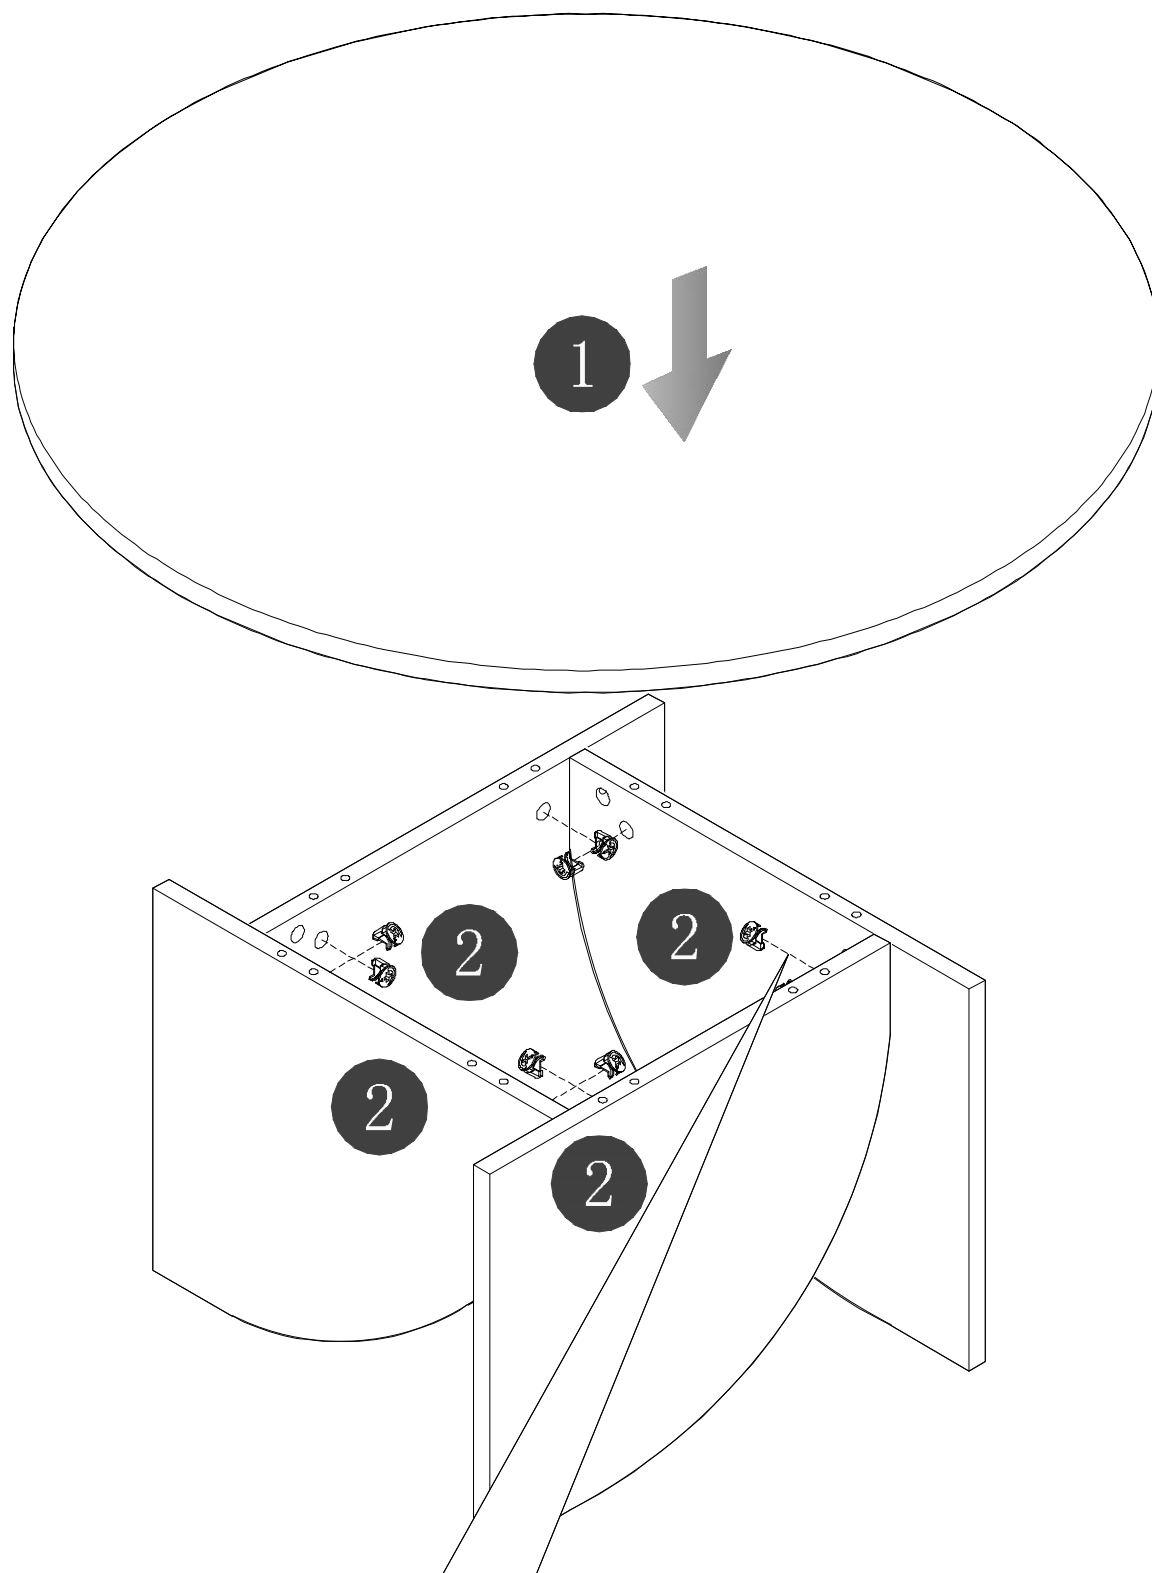


STEP 4

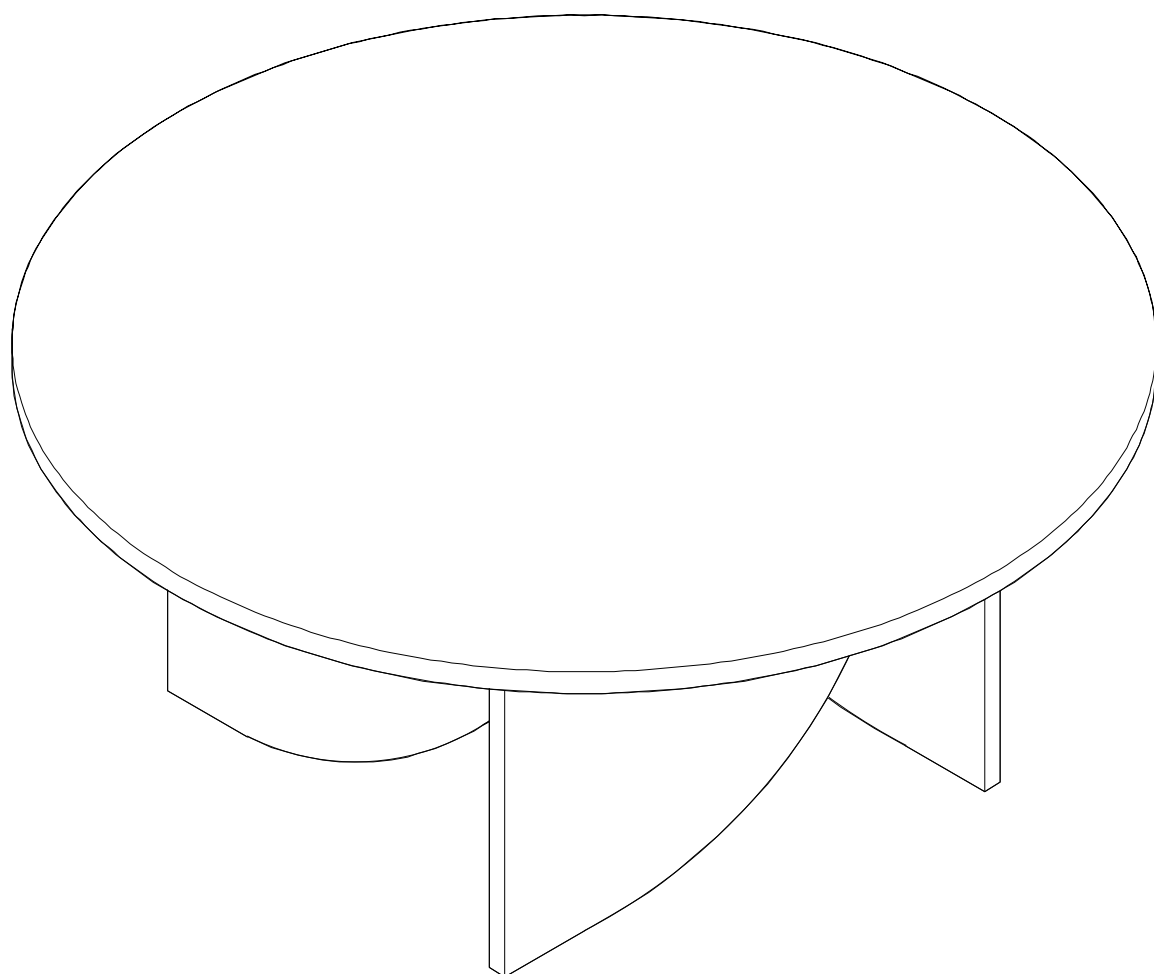

Finish

布达茶几W80邮购包装

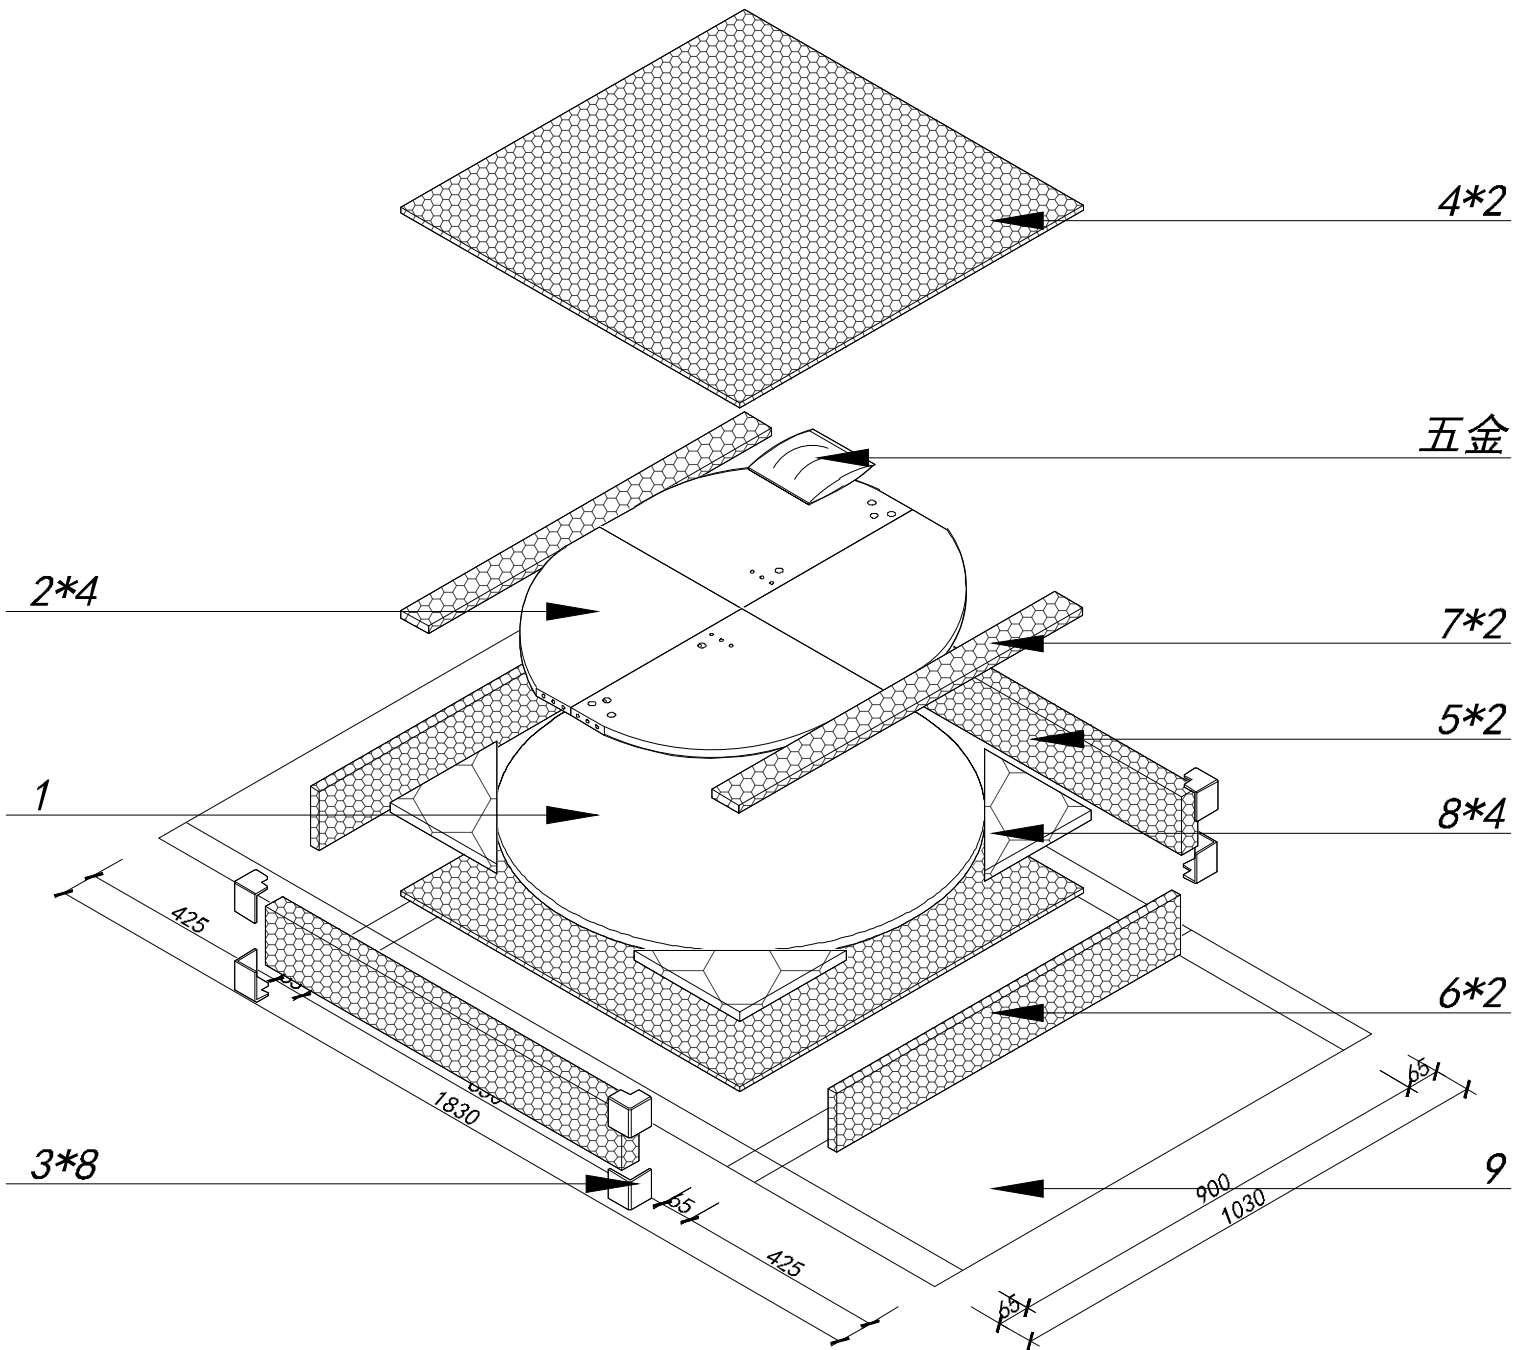

Panel No		Panel Sizes	Quantity
3	护角	50*50*50	8
4	泡沫	810*800*10	2
5	泡沫	840*55*40	2
6	泡沫	810*55*20	2
7	泡沫	810*65*15	2
8	三角泡沫	241*237*15	4
9	纸盒	内径900*850*65	1