


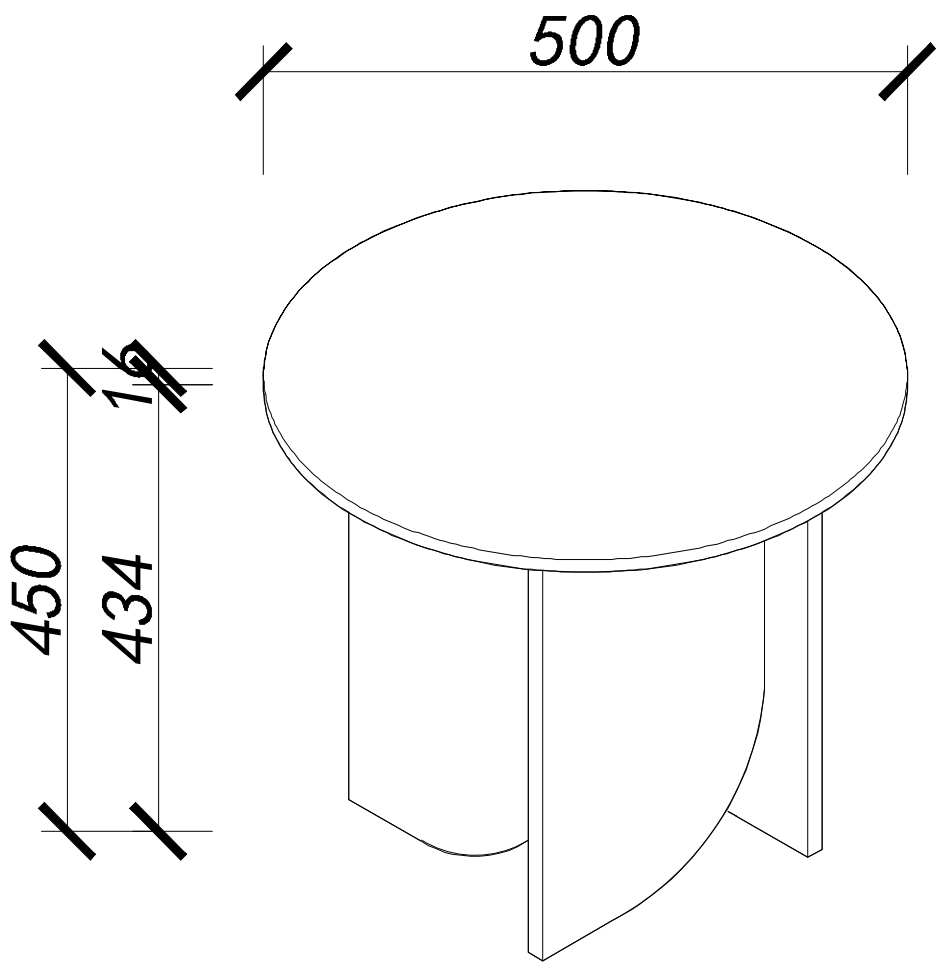
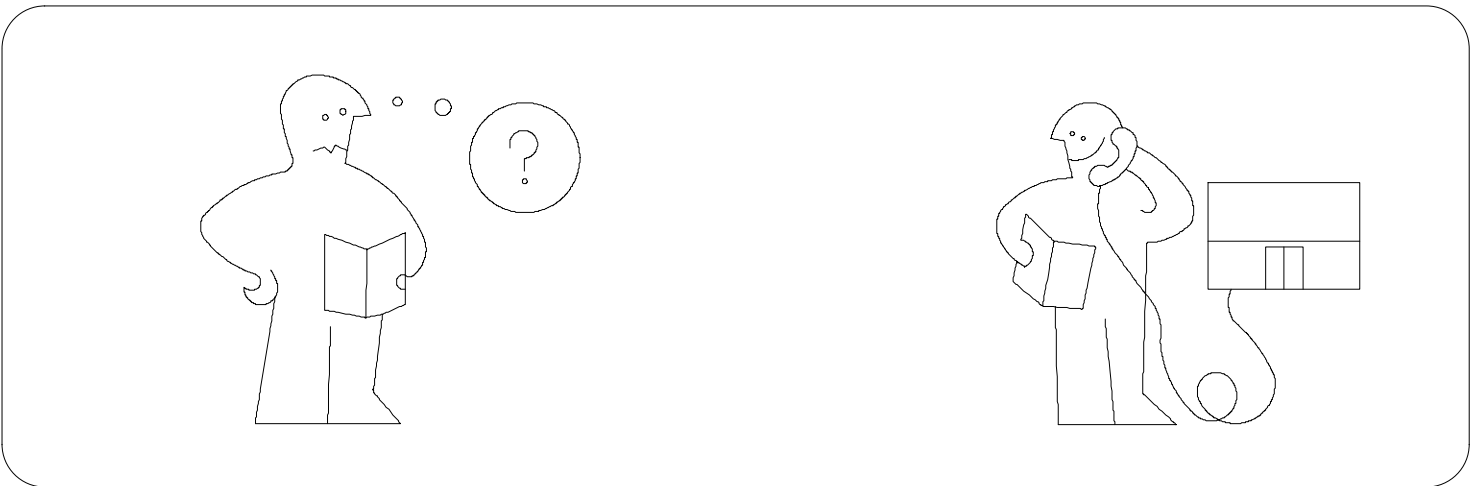
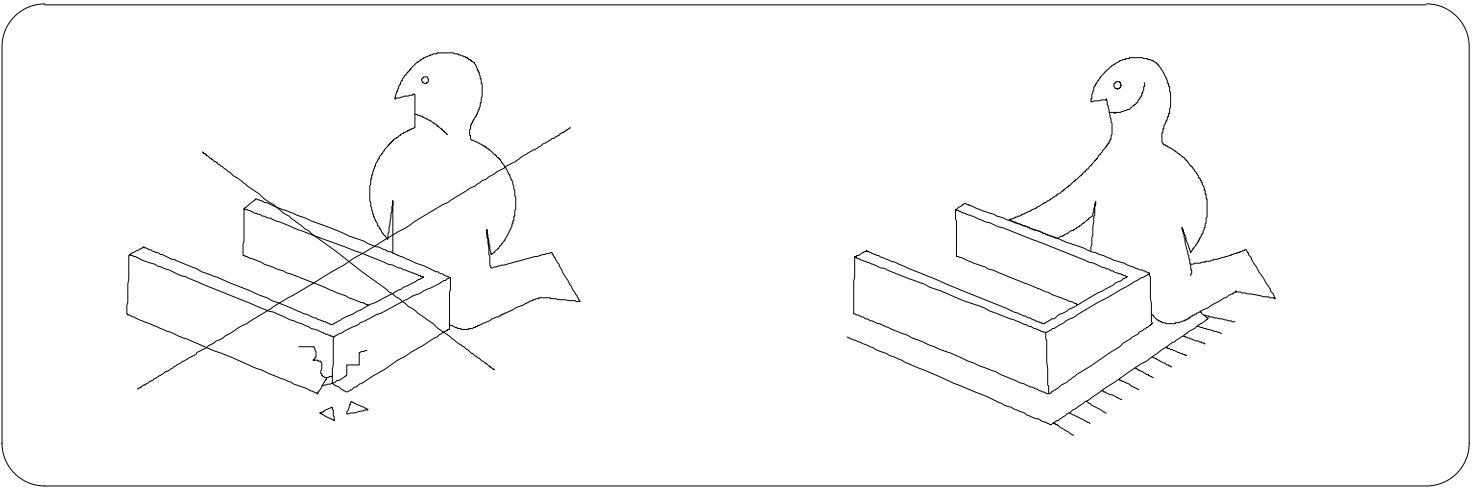
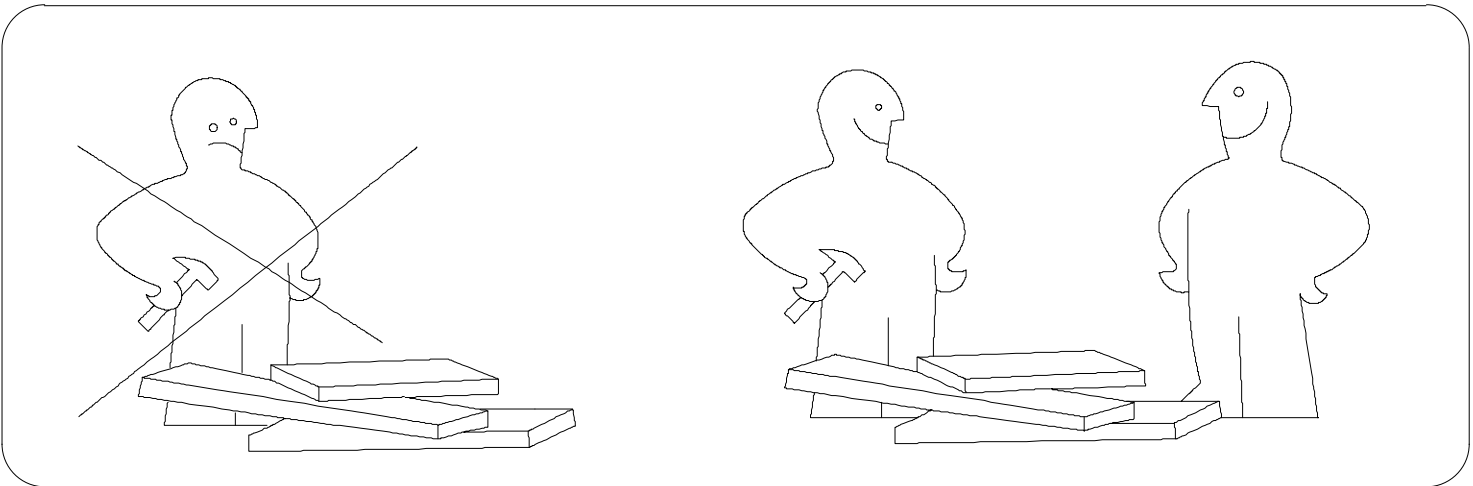


Assembly Instruction

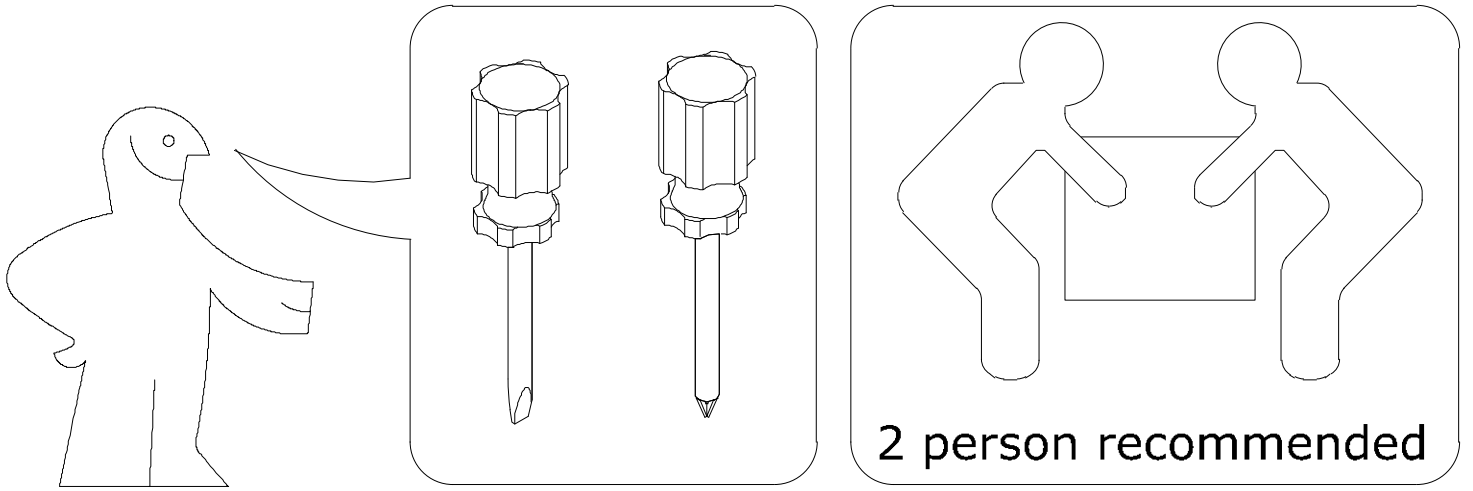


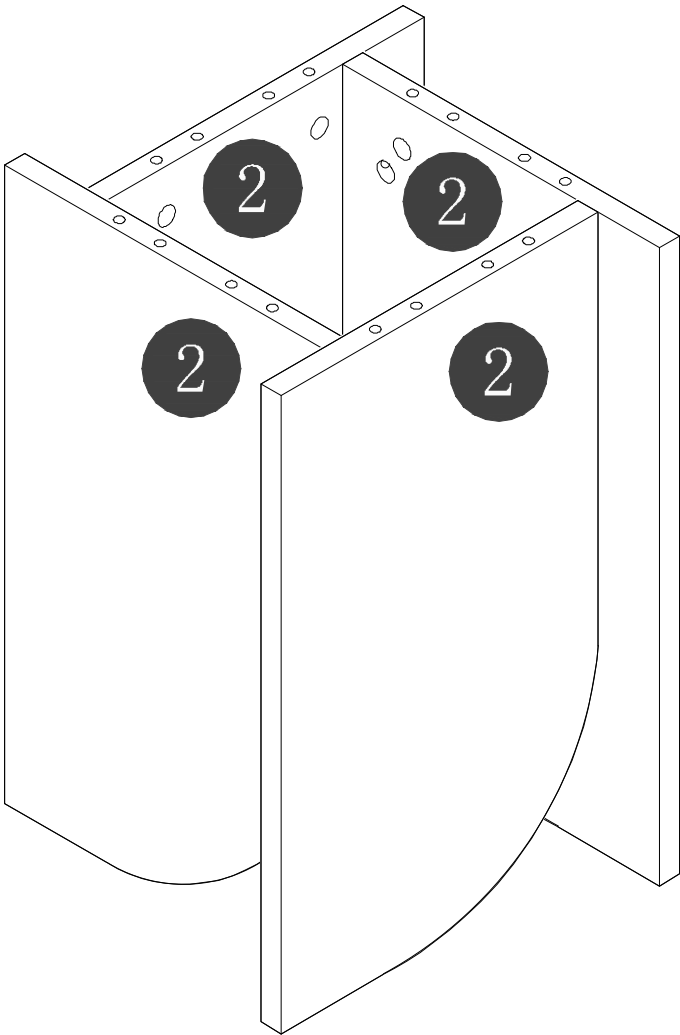

Panel No	Panel Sizes	Quantity
1	500*500*16	1
2	434*249*16	4

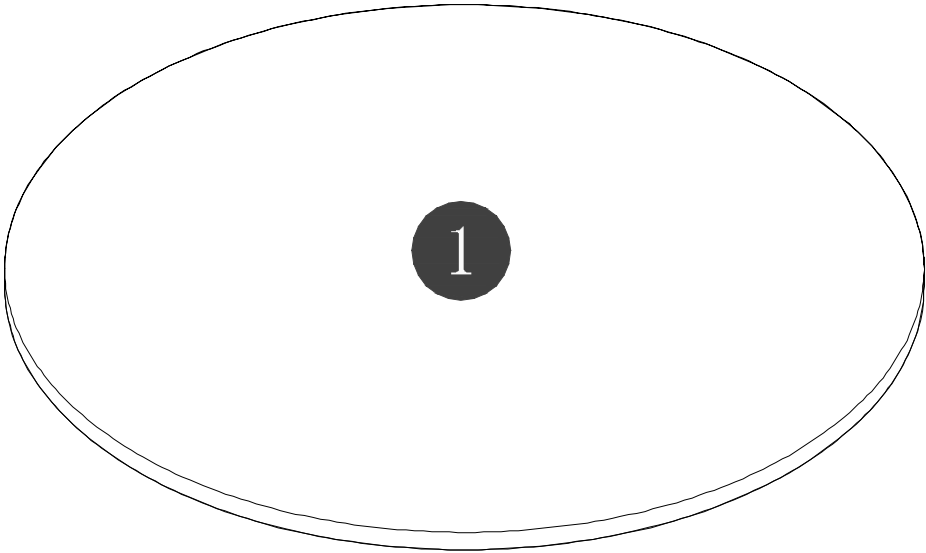


Fittings




M6*40

A=16



$\Phi 8*30$

B=16

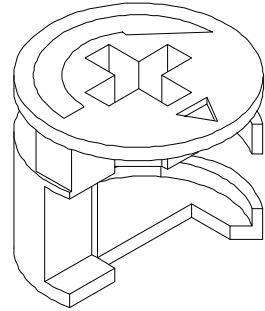

$\Phi 15*12$





C=16




$\Phi 21$

D=16



STEP 1

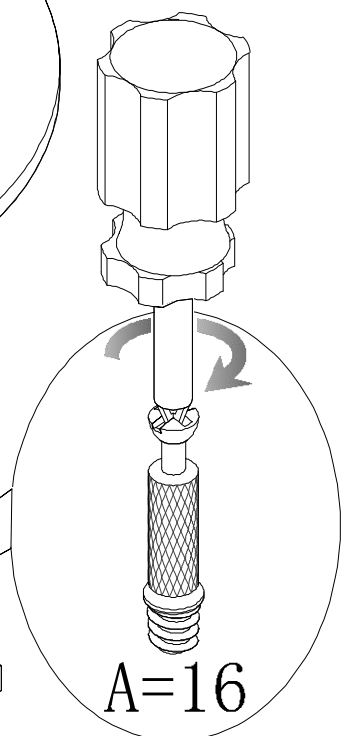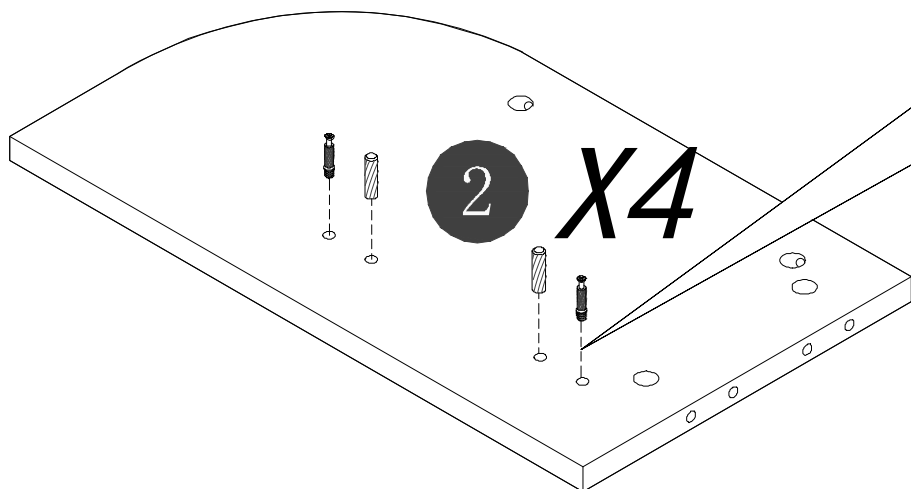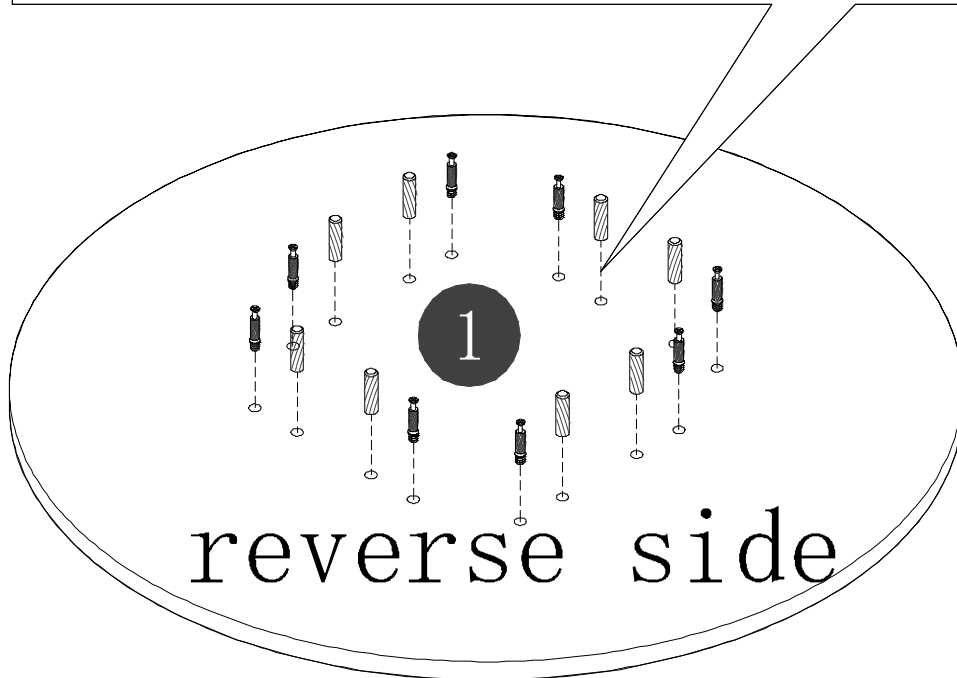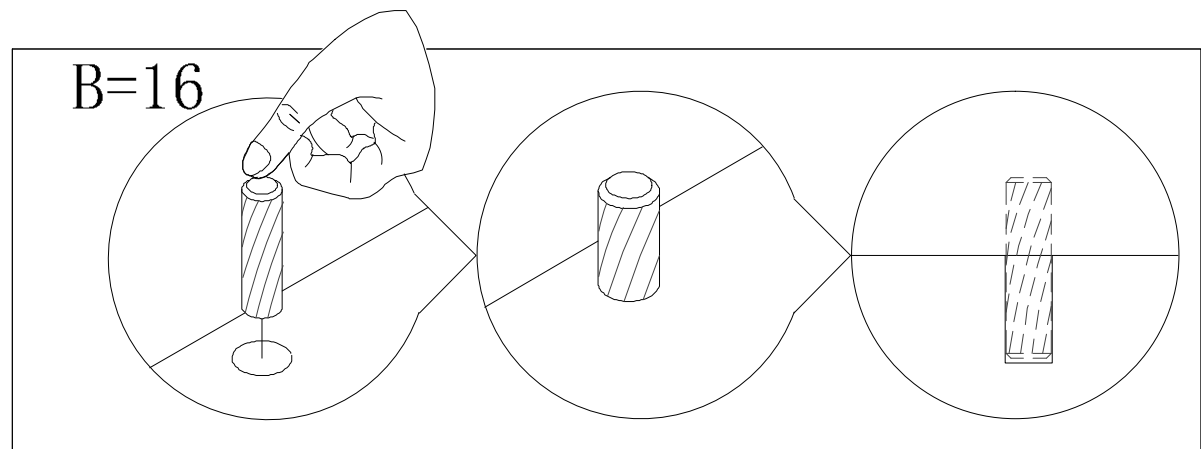


STEP 2

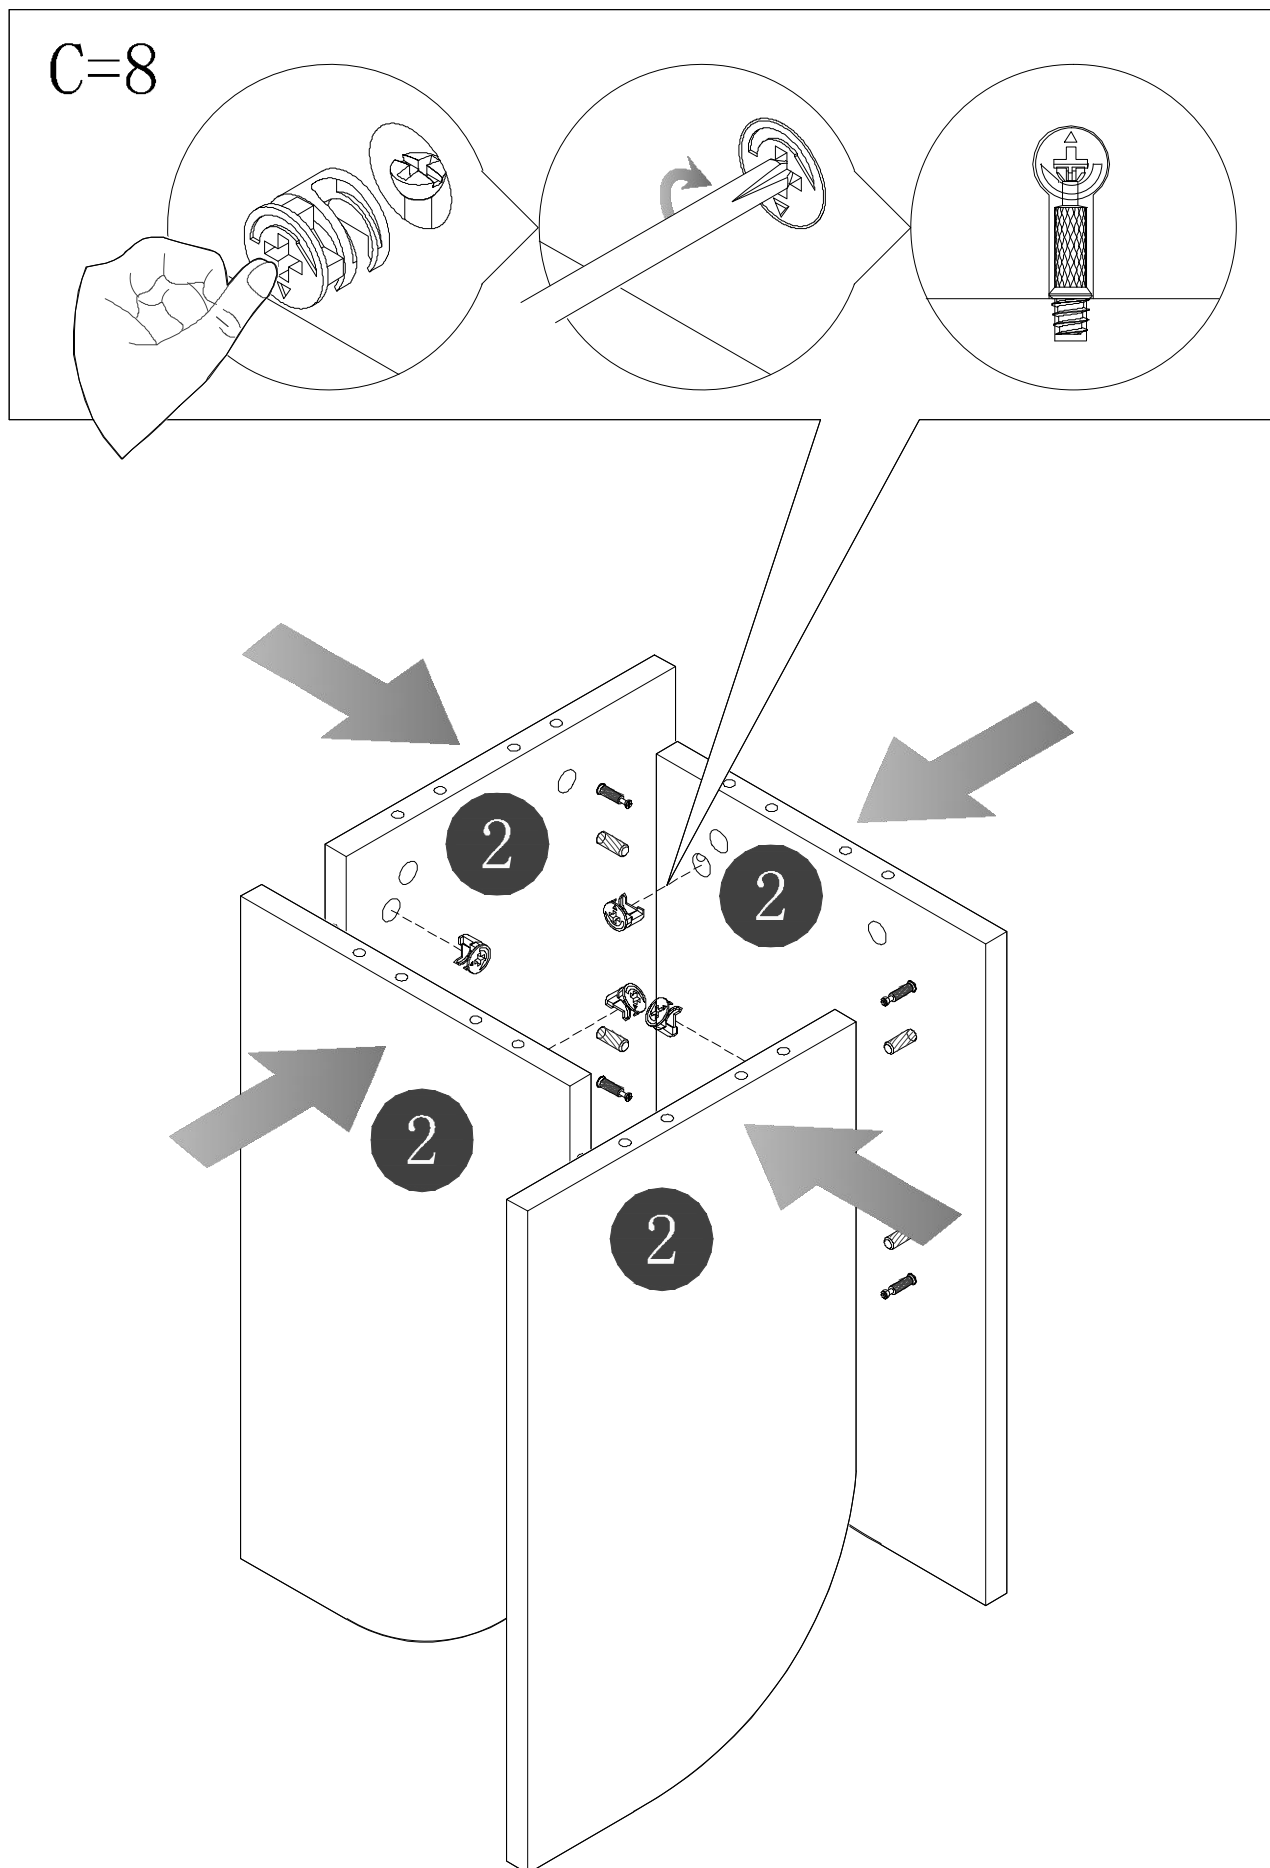

STEP 3

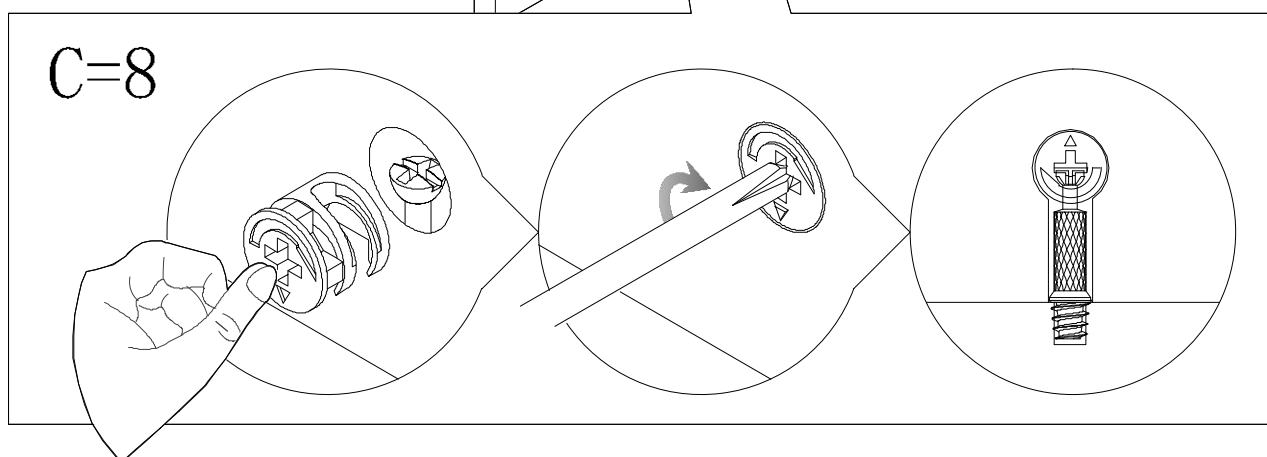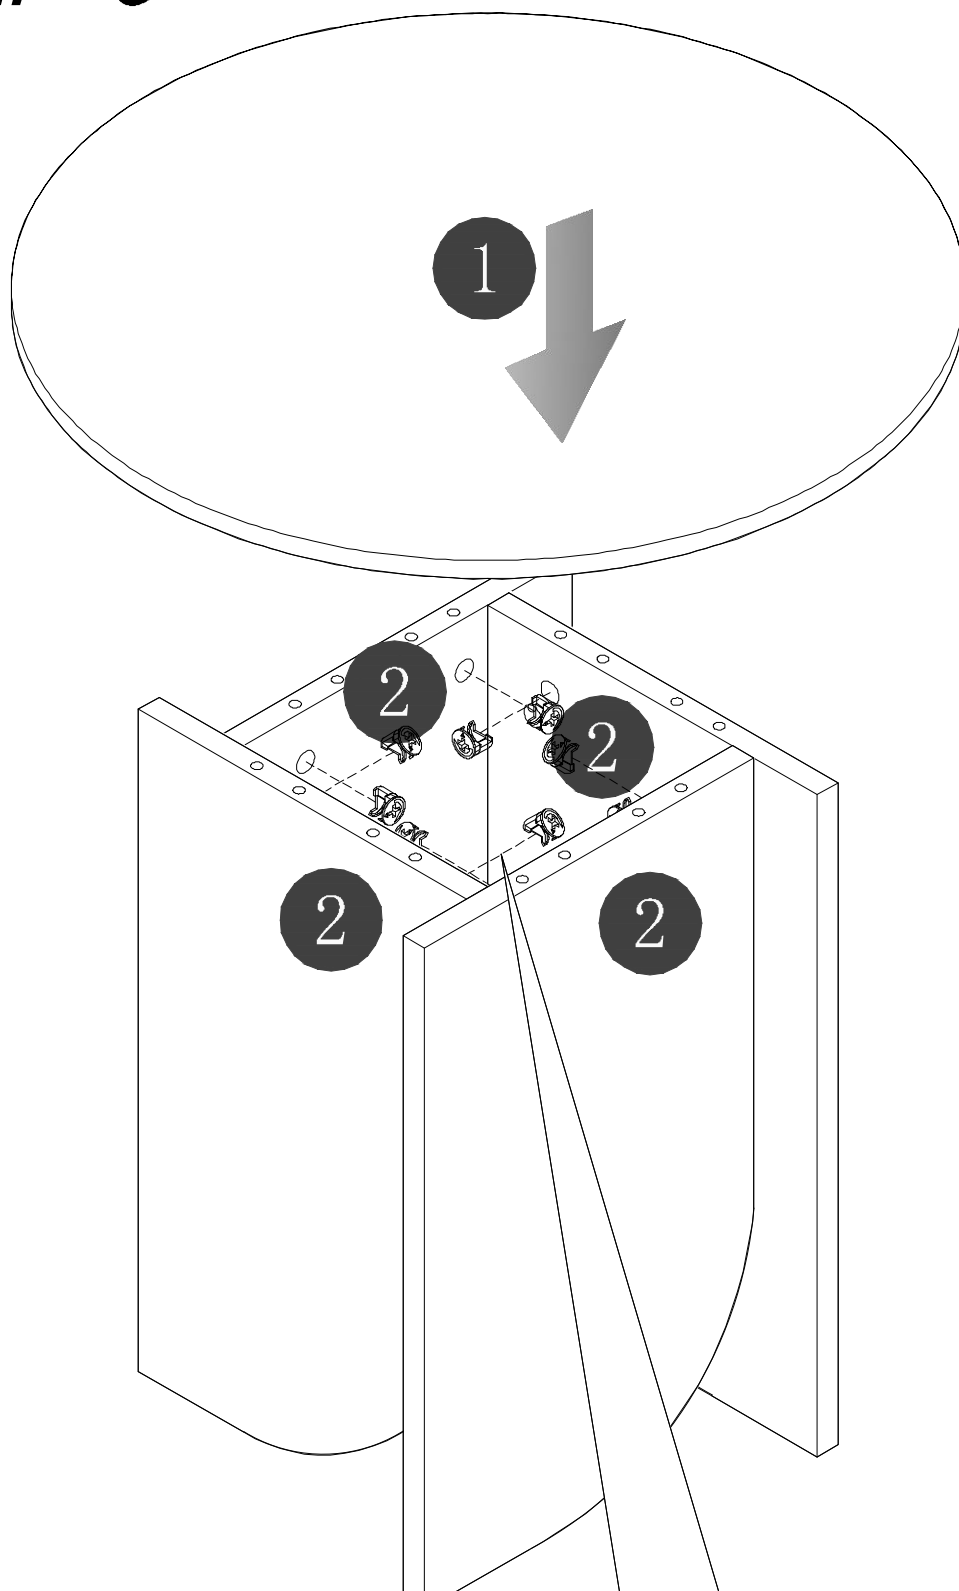


STEP 4

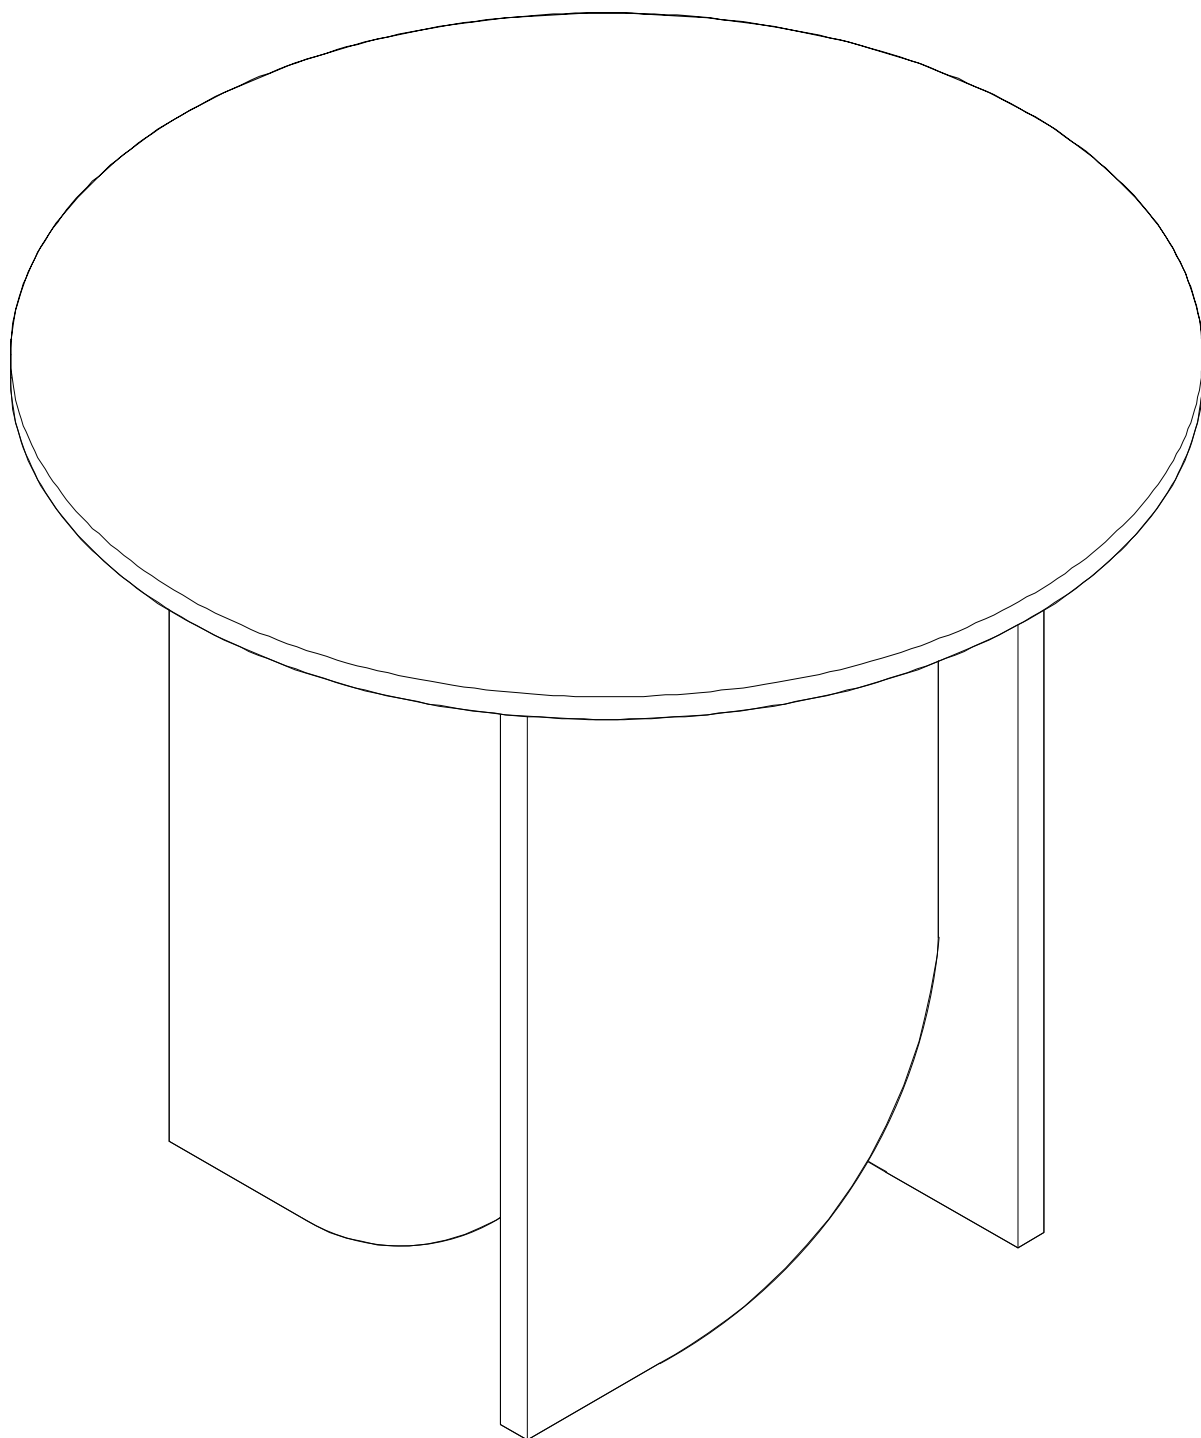

Finish

布达茶几W50邮购包装

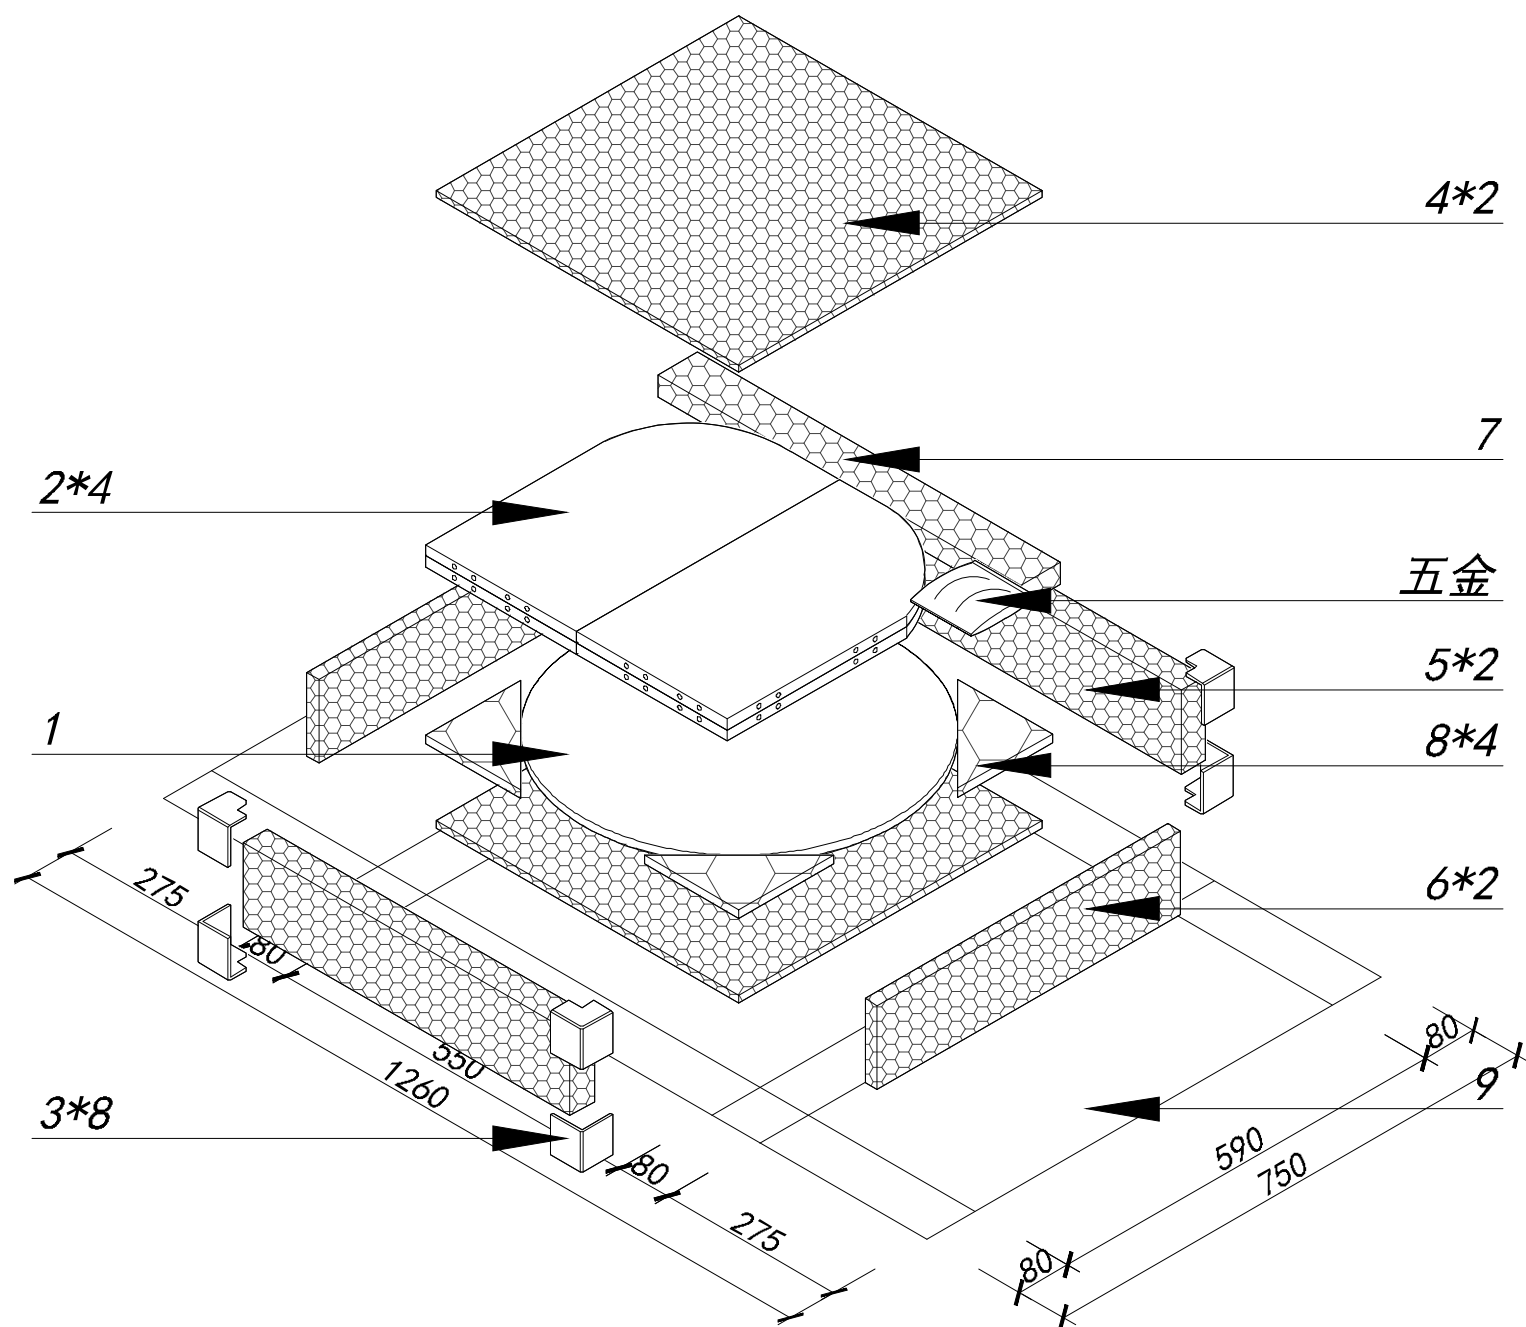

Panel No		Panel Sizes	Quantity
3	护角	50*50*50	8
4	泡沫	500*500*10	2
5	泡沫	540*70*40	2
6	泡沫	500*70*20	2
7	泡沫	500*65*30	1
8	三角泡沫	146*146*15	4
9	纸盒	内径590*550*80	1