


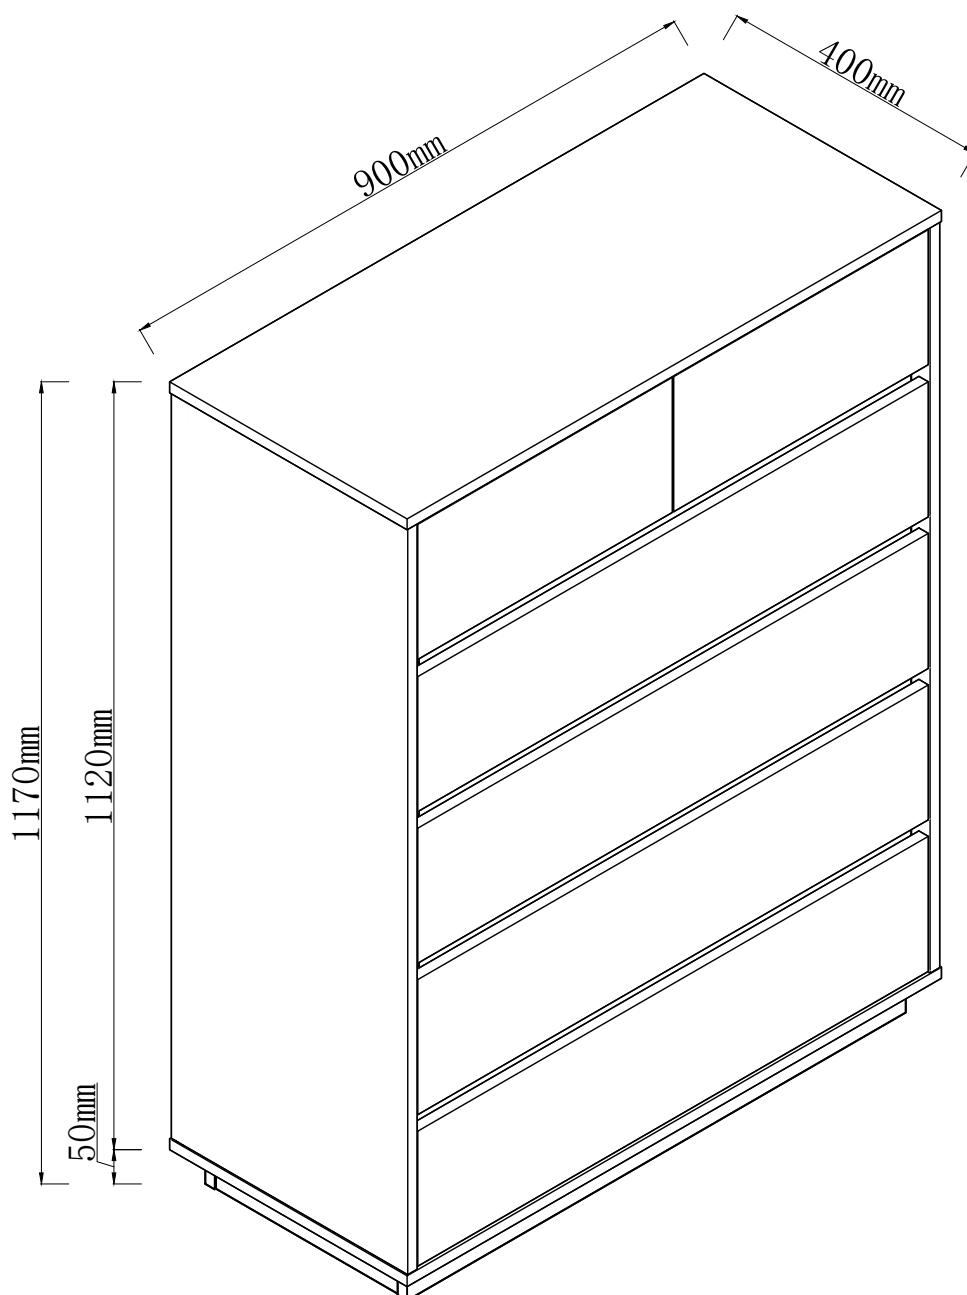
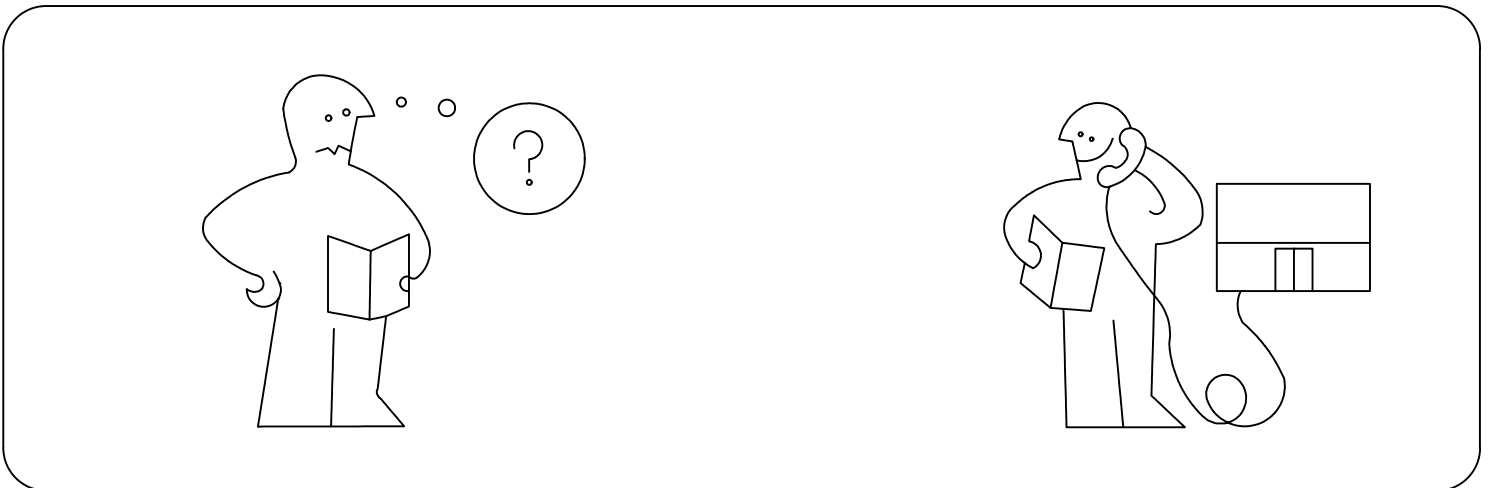


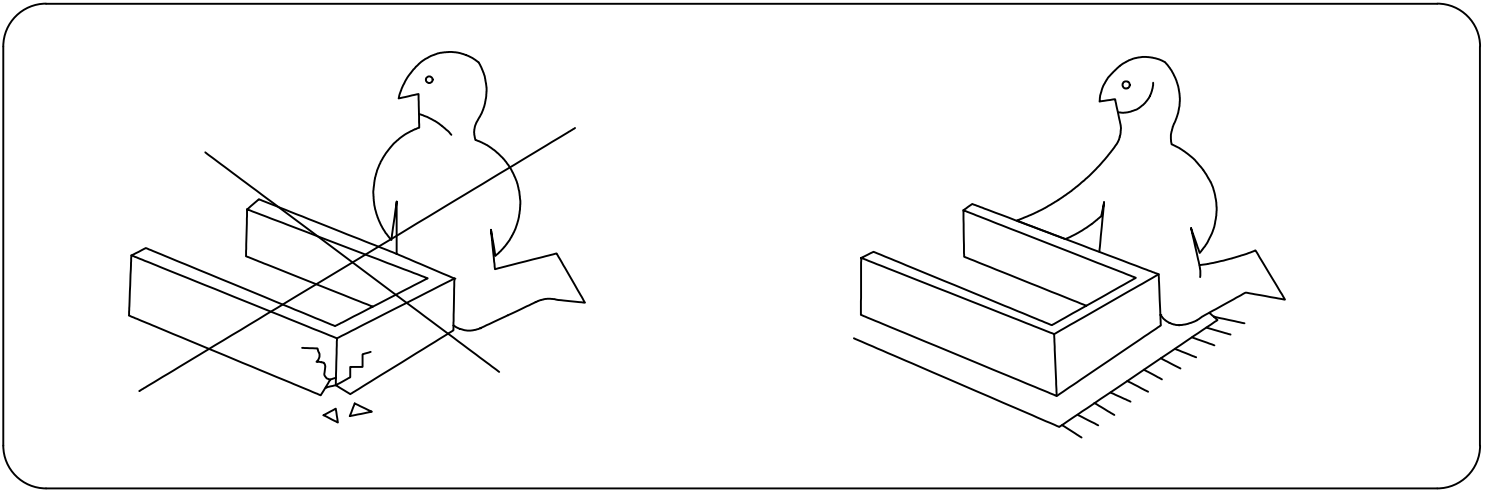


Assembly Instruction

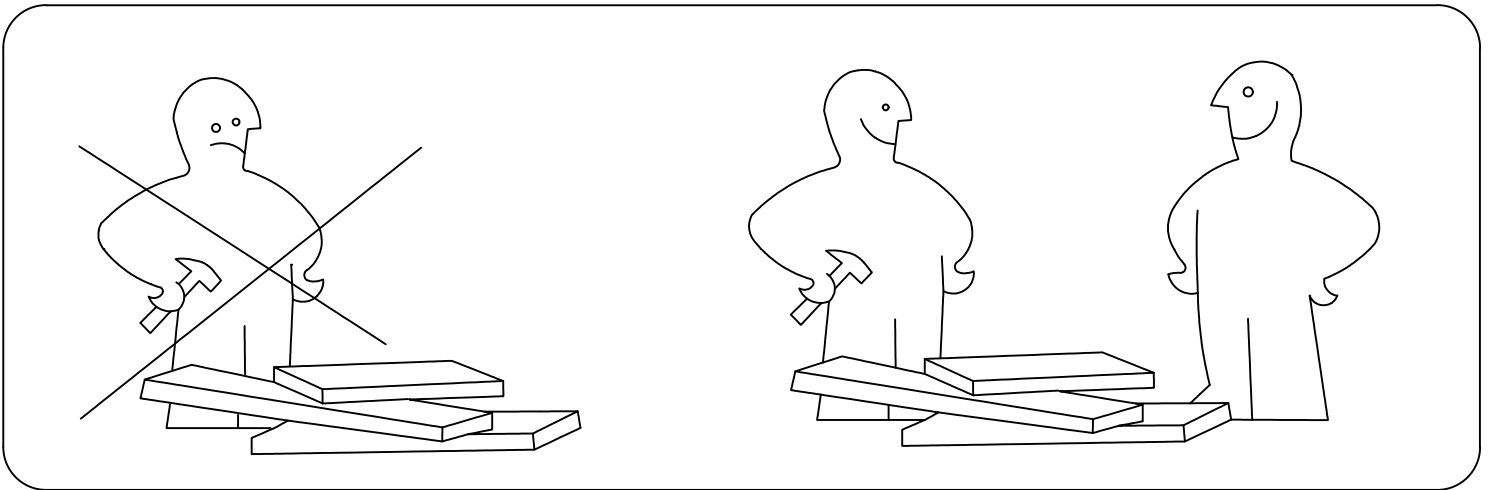

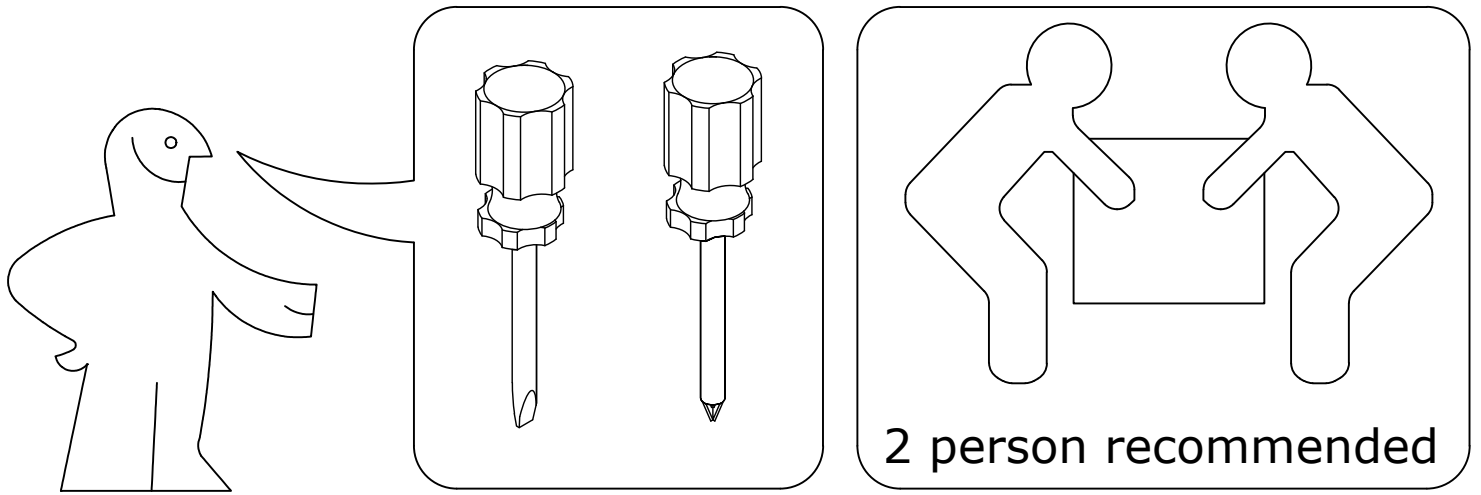

Panel No	Panel Sizes	Quantity
1	900*400*16	1
2	900*400*16	1
3	1088*398*16	1
4	1088*398*16	1
5	196*357*16	1
6	864*59*16	1
7	864*60*16	4
8	1088*100*16	1
9	1098*392*5	2
10	840*50*16	2

Panel No	Panel Sizes	Quantity
11	308*50*16	2
12	429*197*16	1
13	429*197*16	1
14	860*197*16	4
15	350*120*12	6
16	350*120*12	6
17	379*120*12	2
18	819*120*12	4
19	389*348*5	2
20	829*348*5	4
21	337*100*12	4

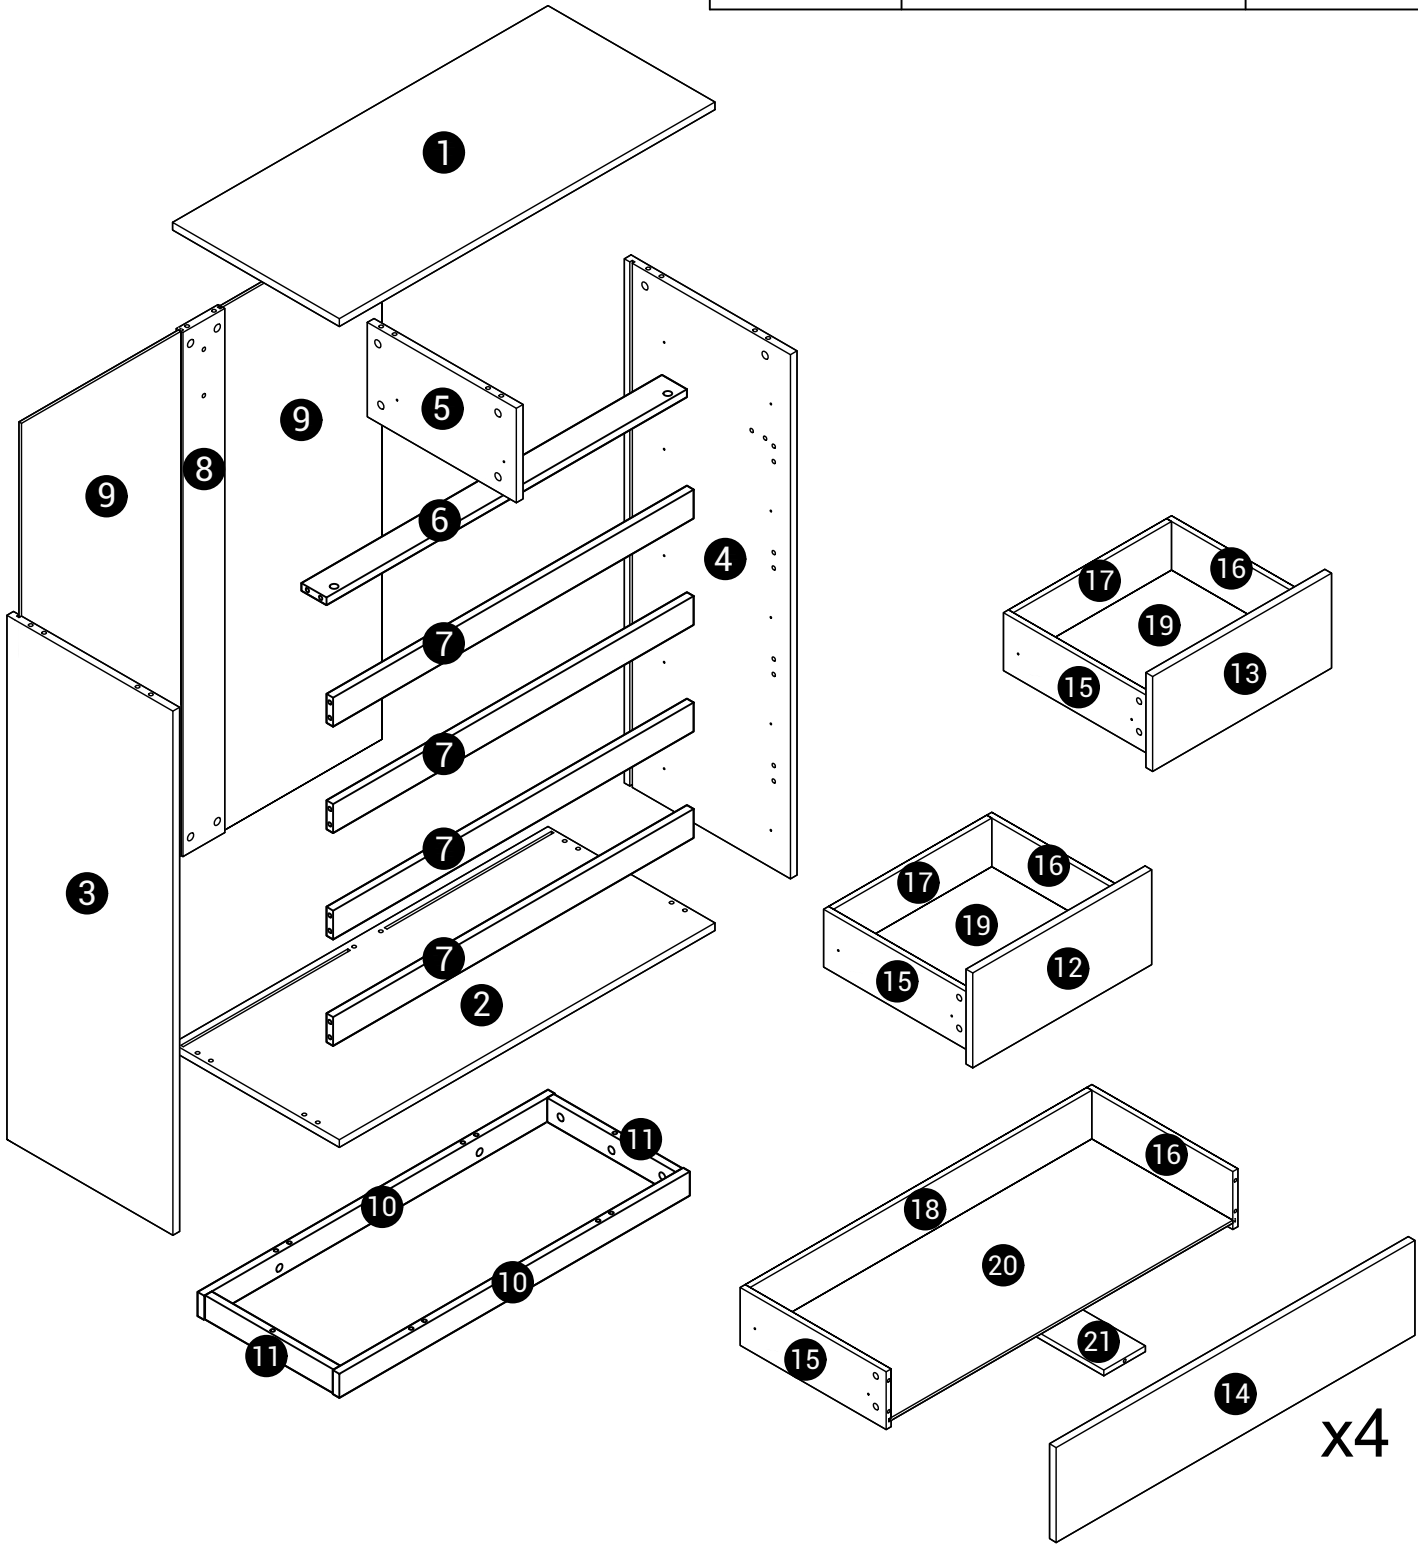

Fittings



A=32



B=26




C=32




D=88



E=12

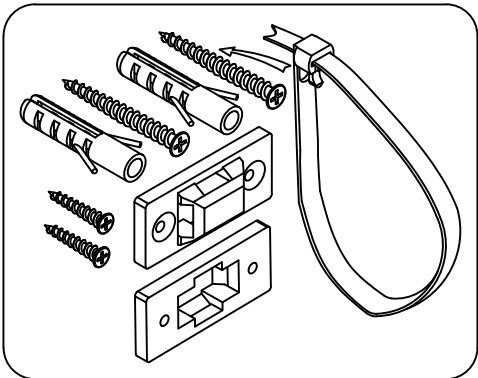

F=1

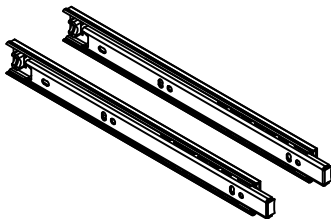

N=6



H=1



O=56




P=56



M3.5*12


V1=48

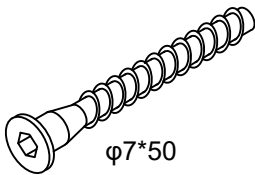



$\phi 7 \times 50$

Q=4

STEP 1


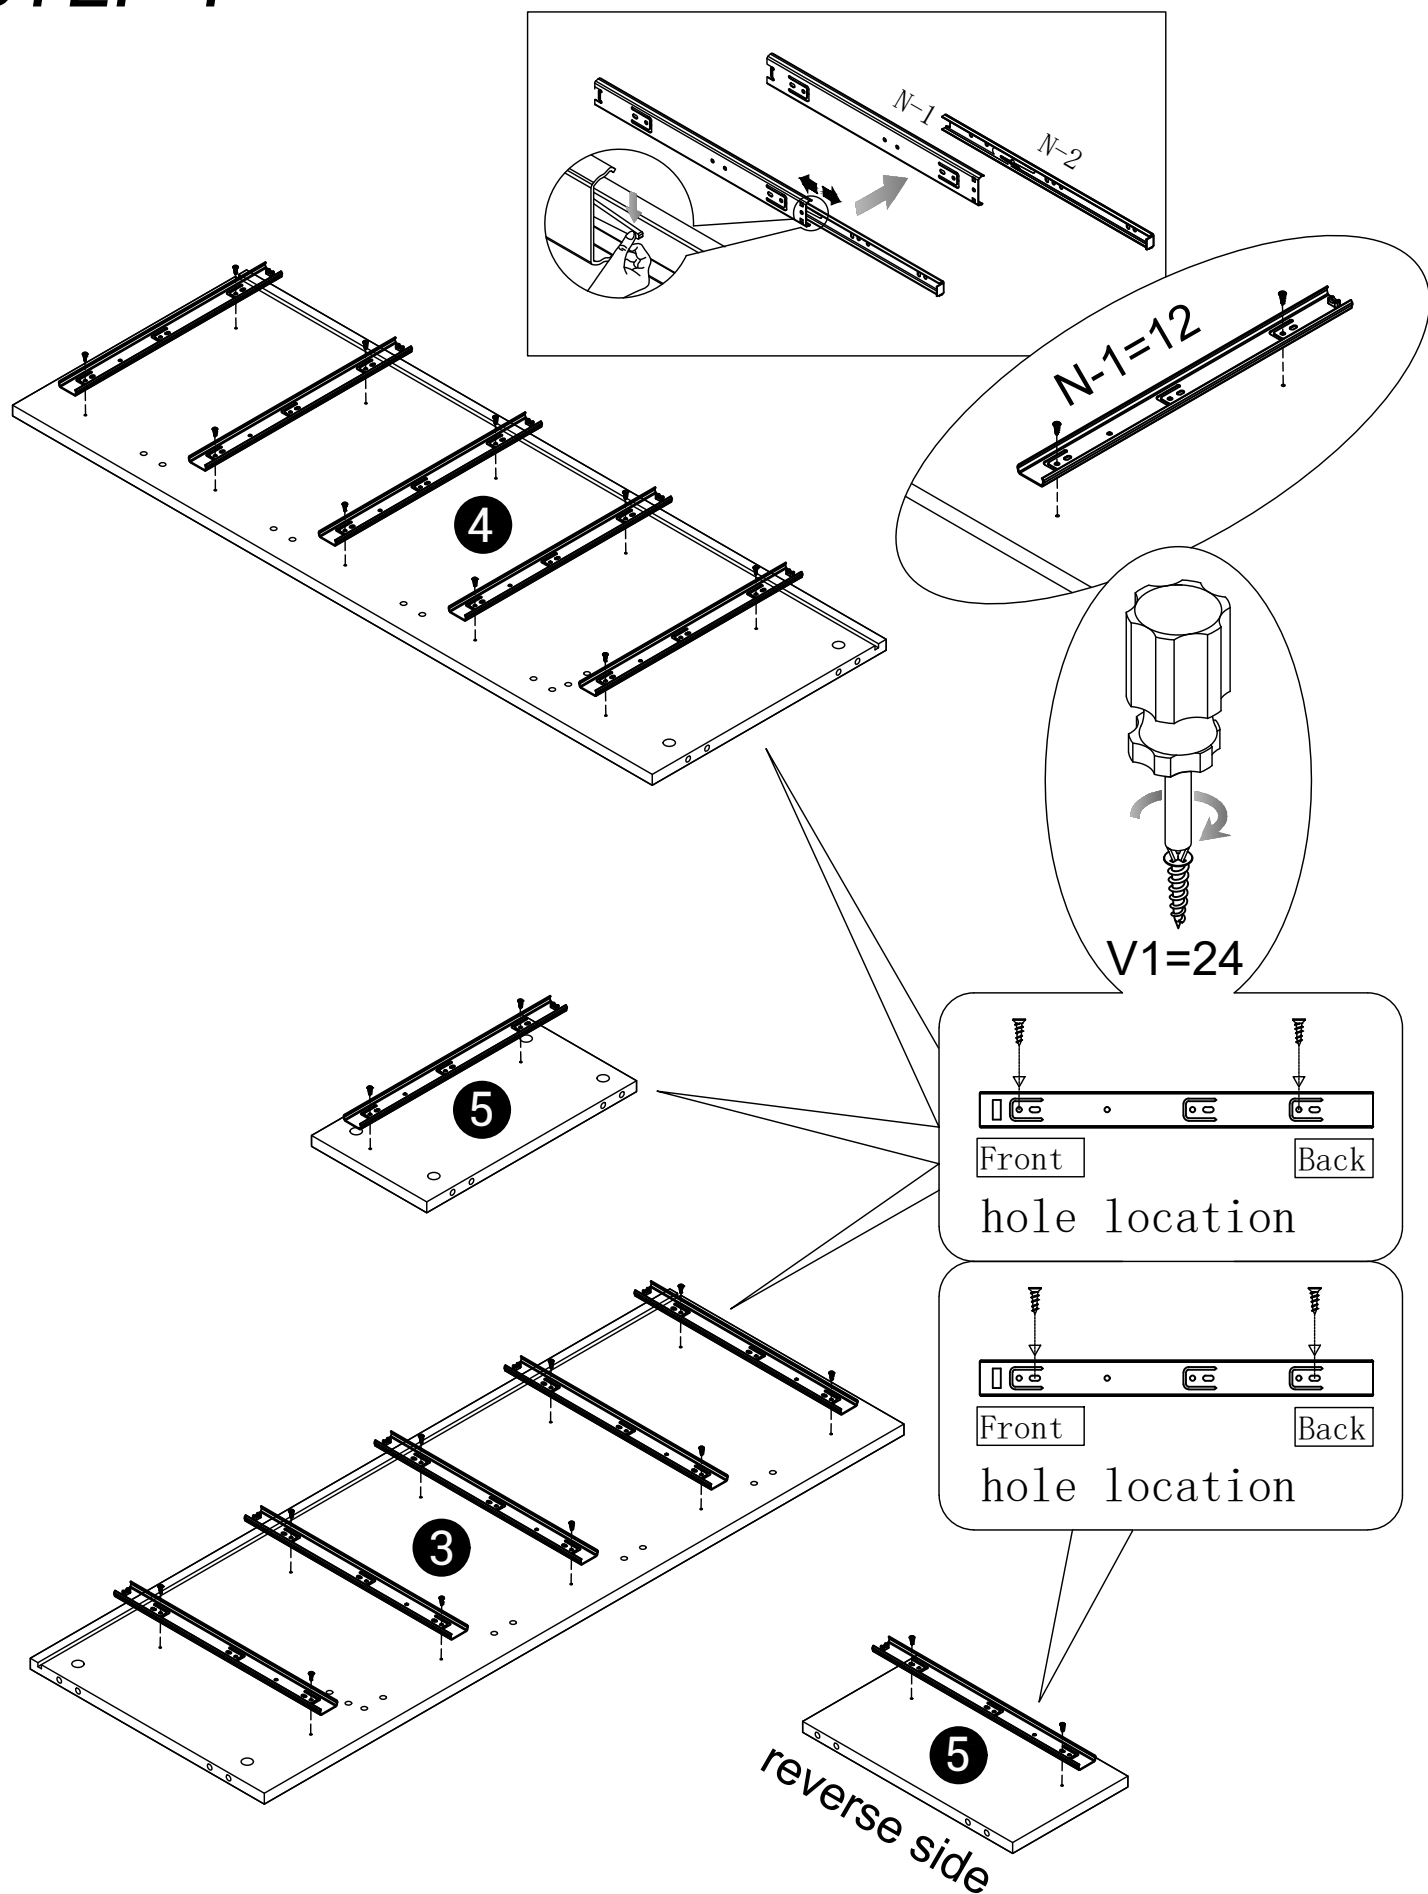


STEP 2

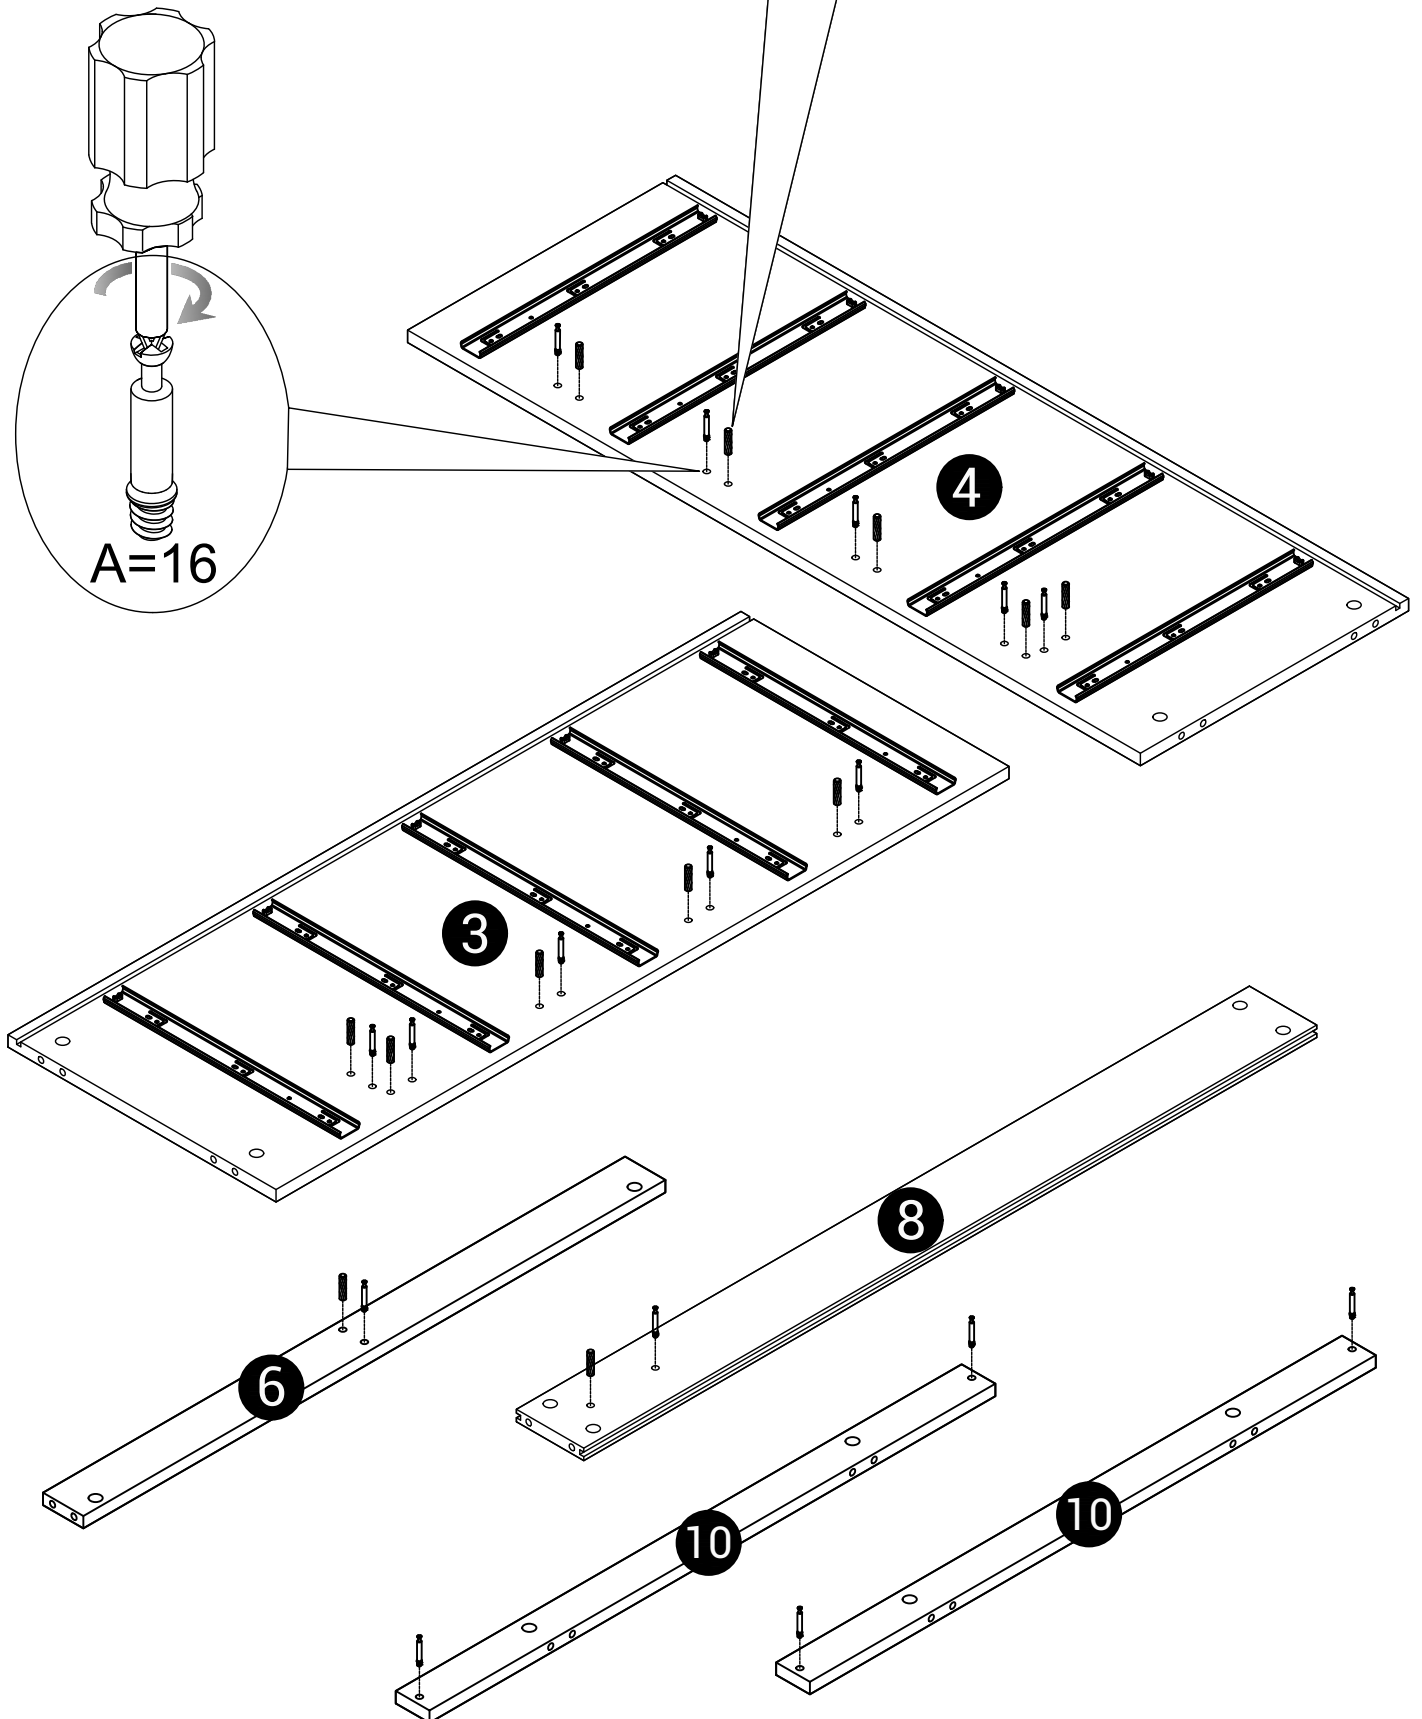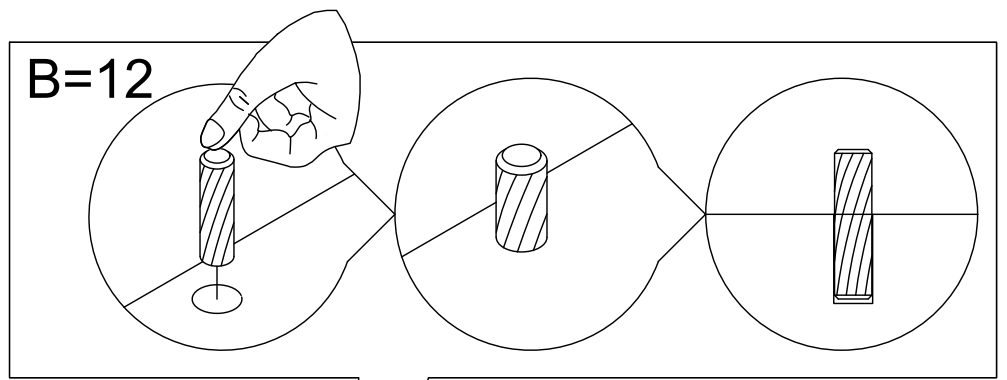


STEP 3


B=14

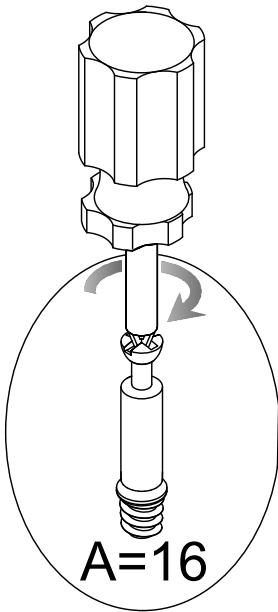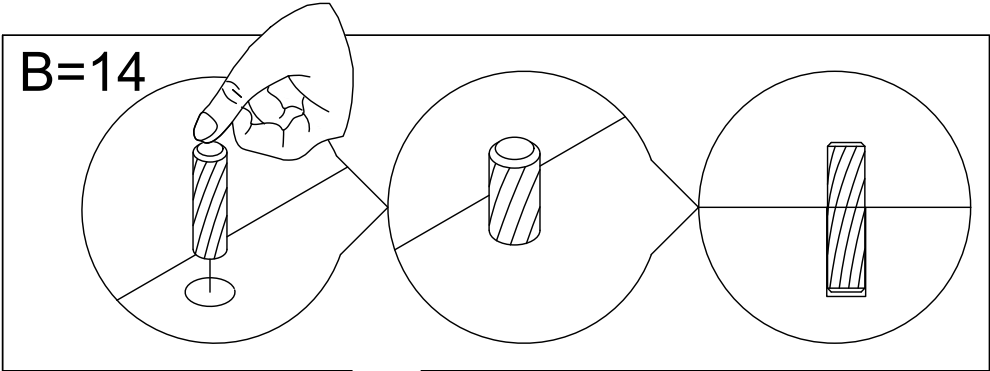


A=16

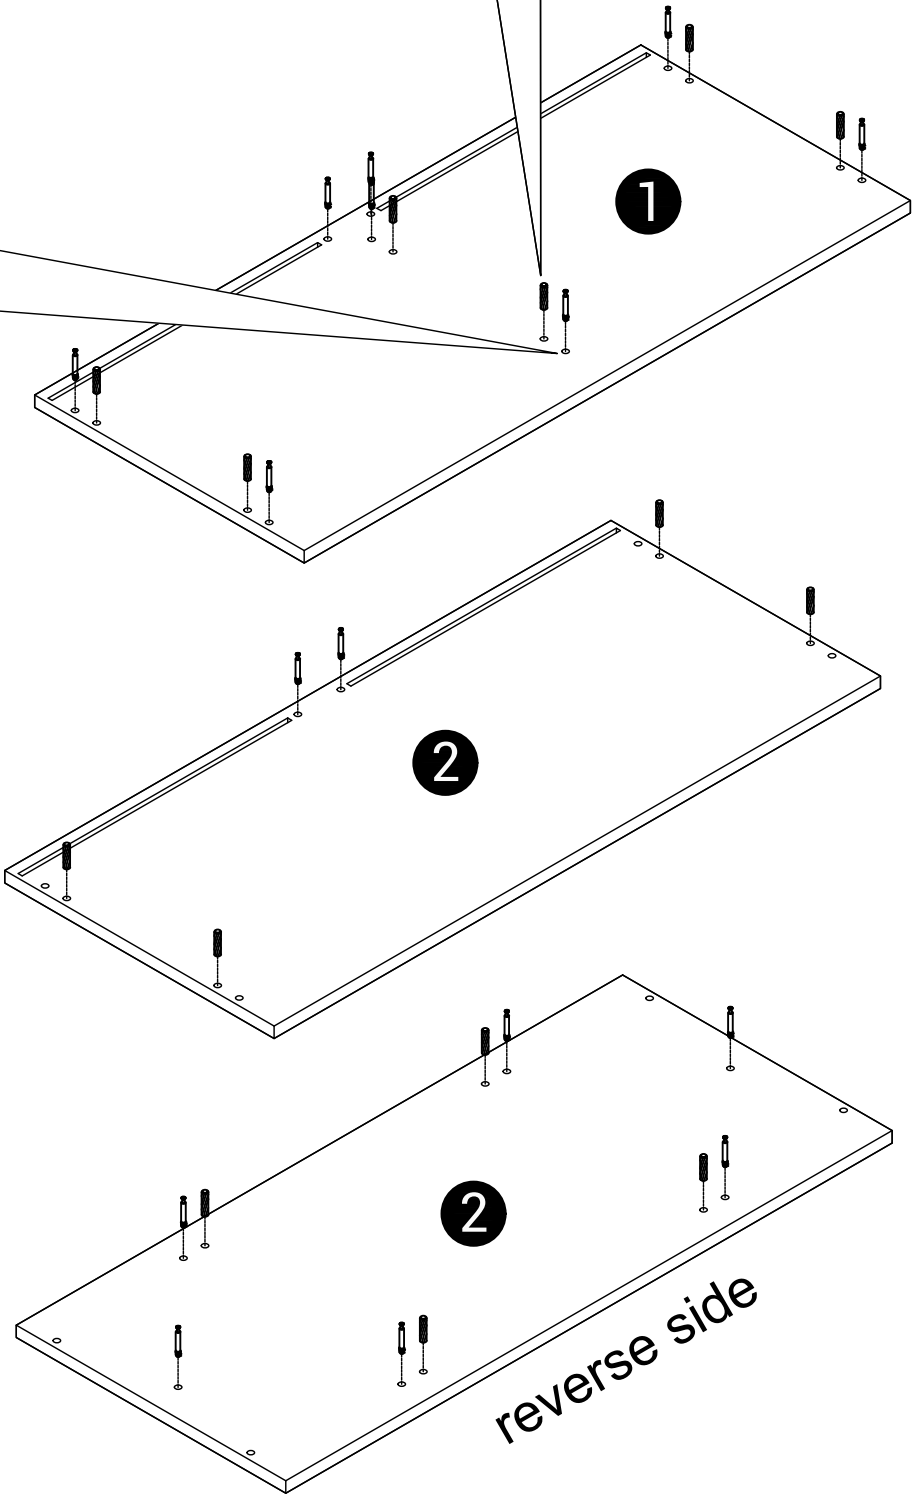


STEP 4

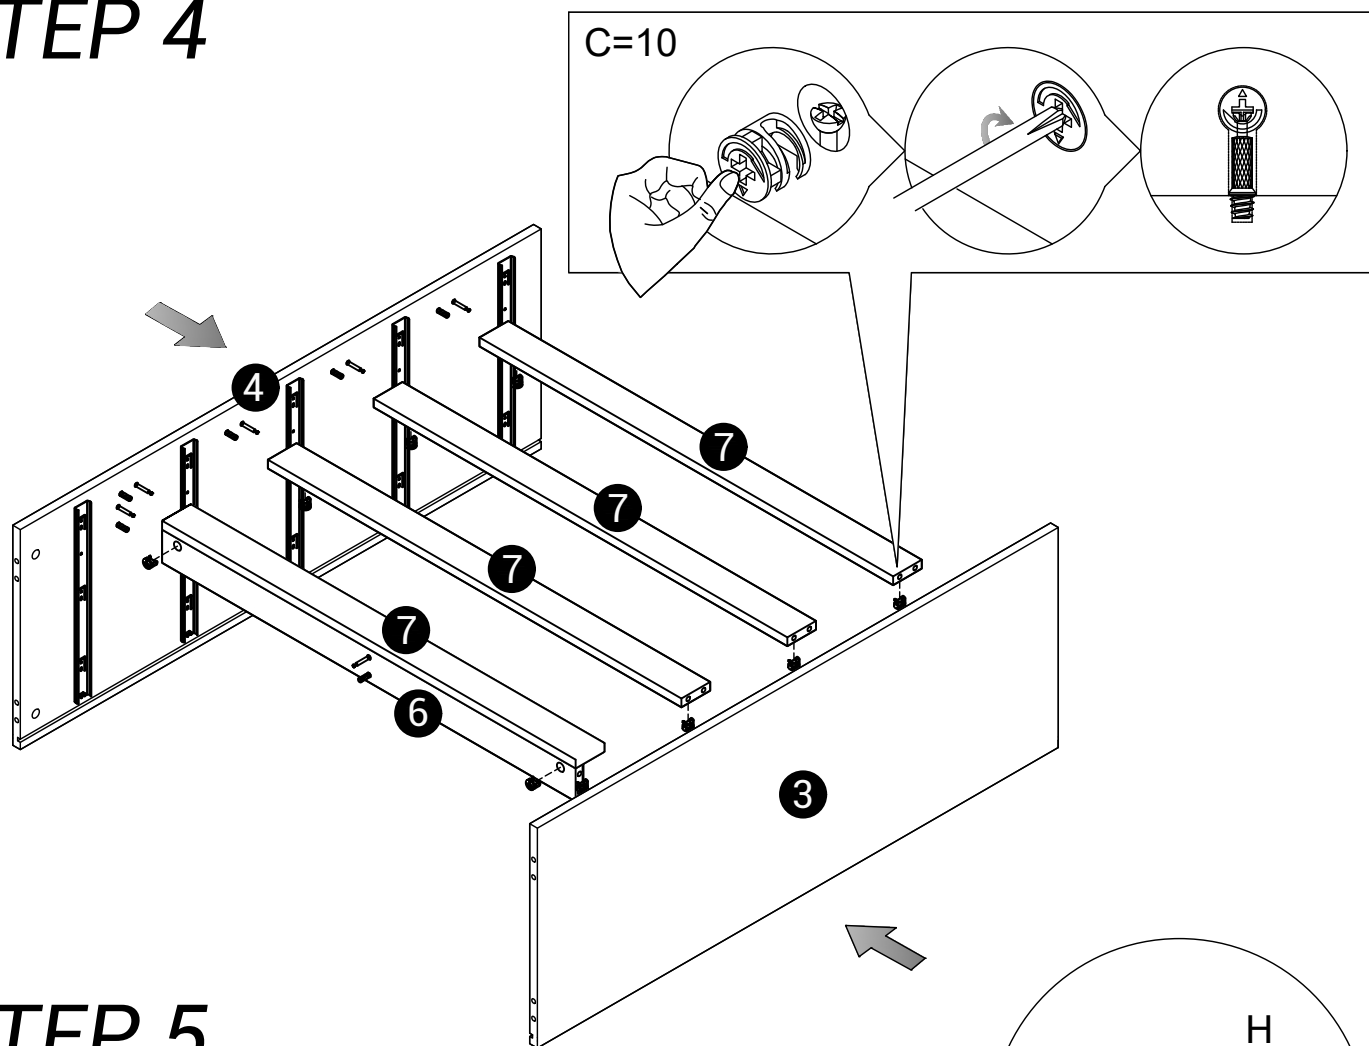


STEP 5

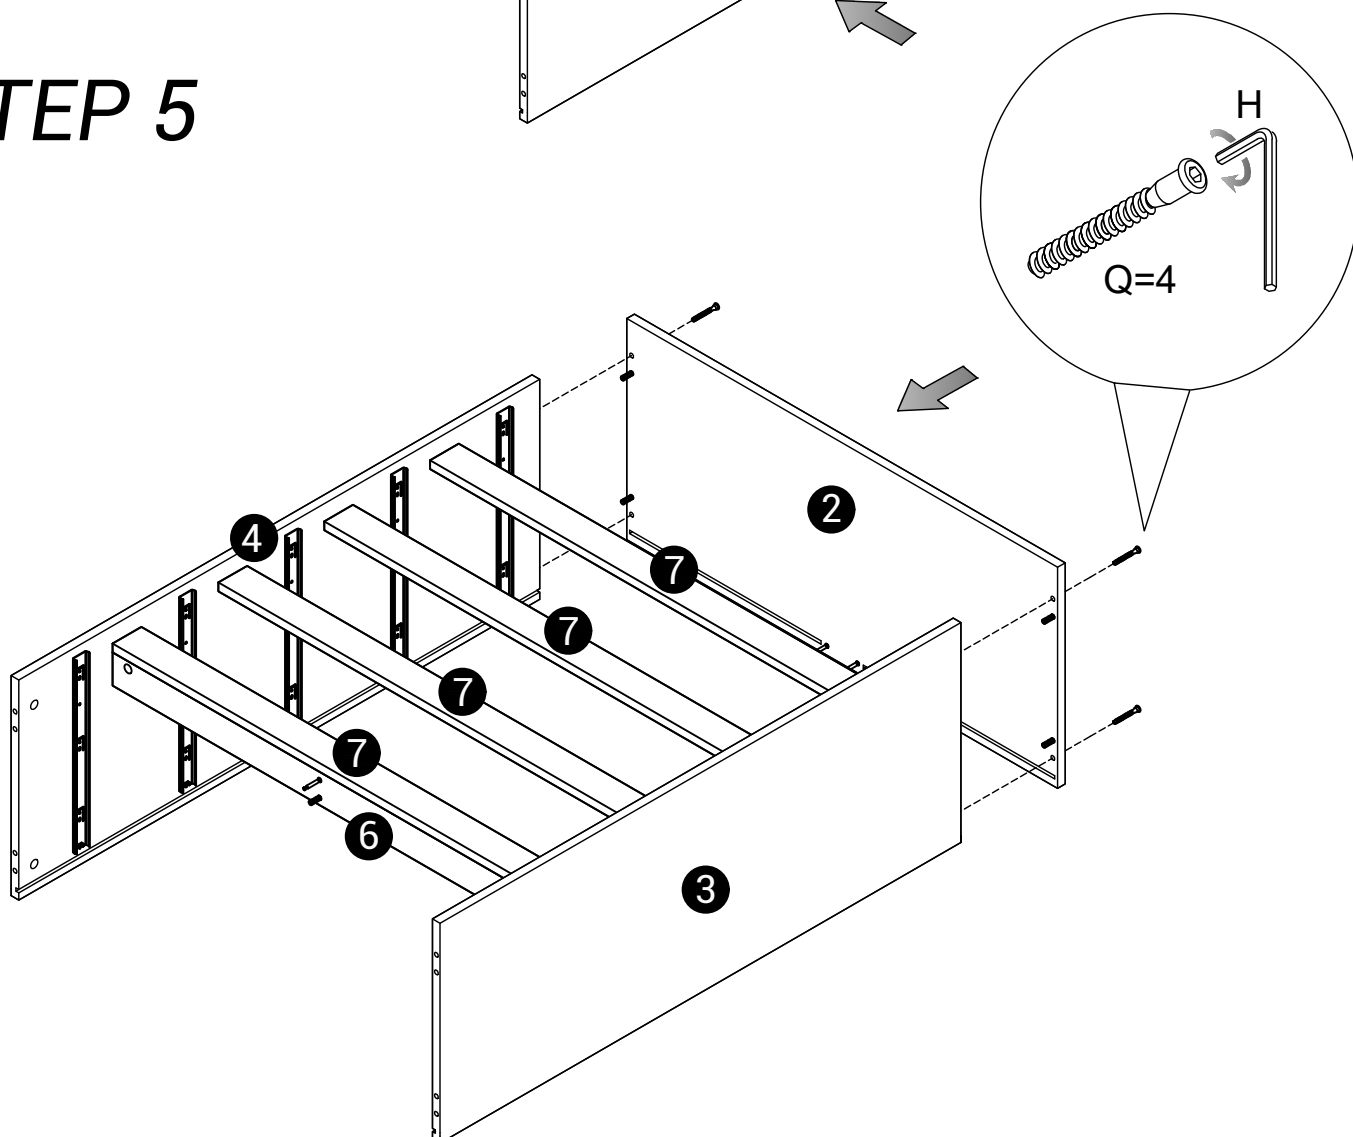


STEP 6

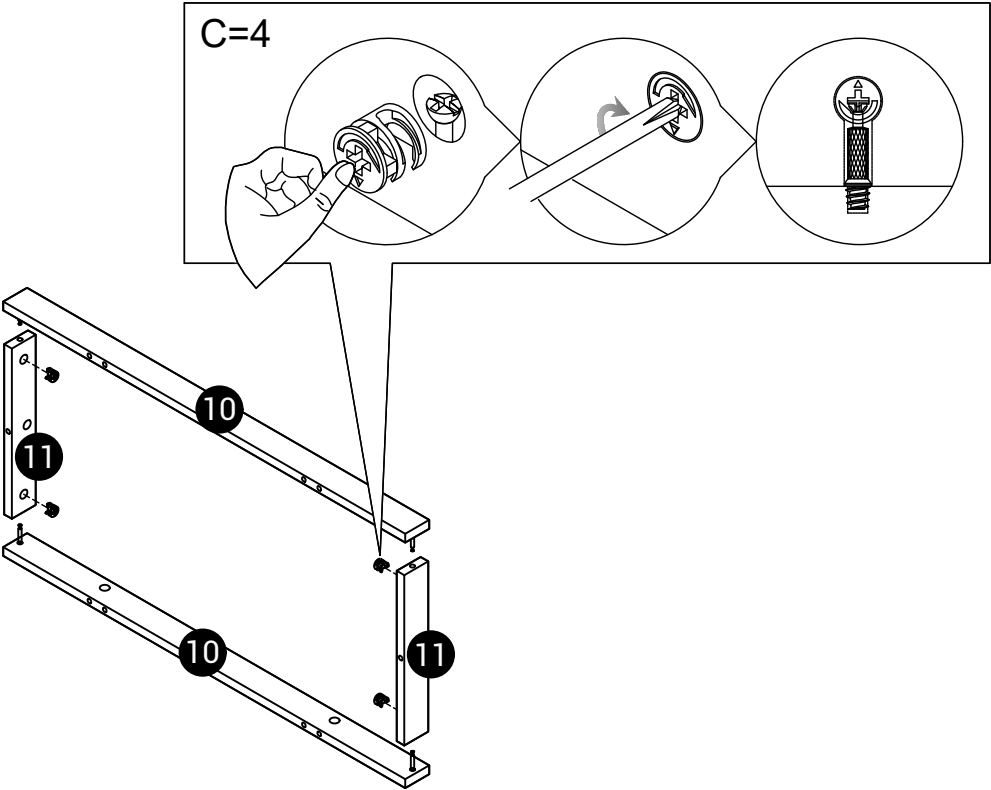


STEP 7

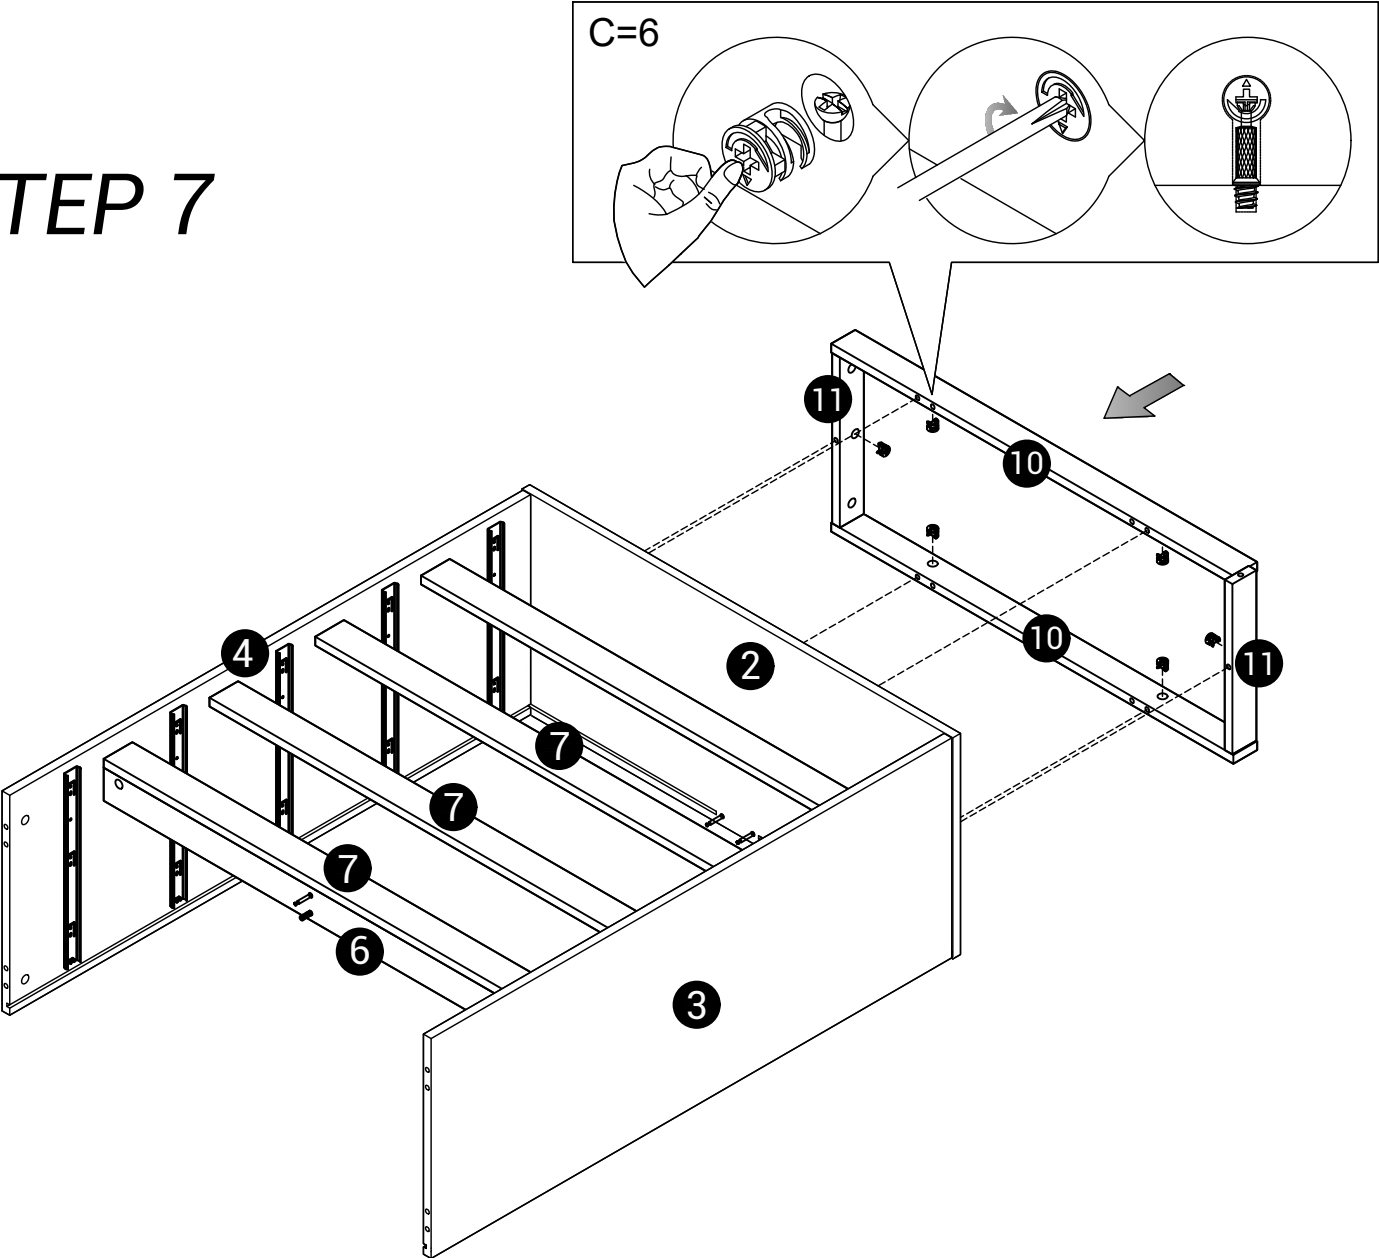


STEP 8

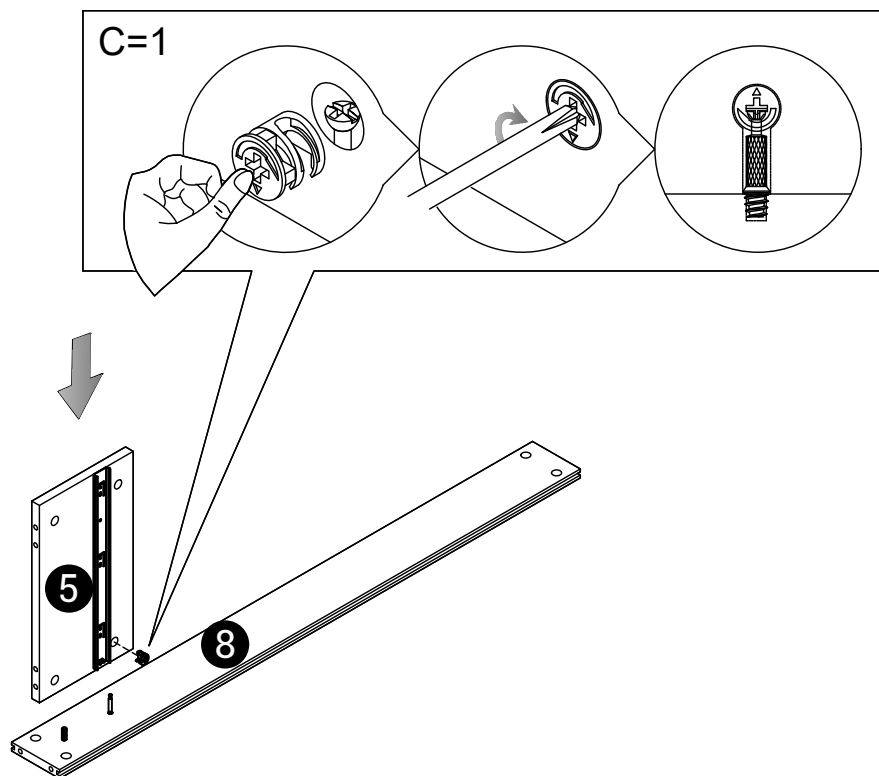


STEP 9

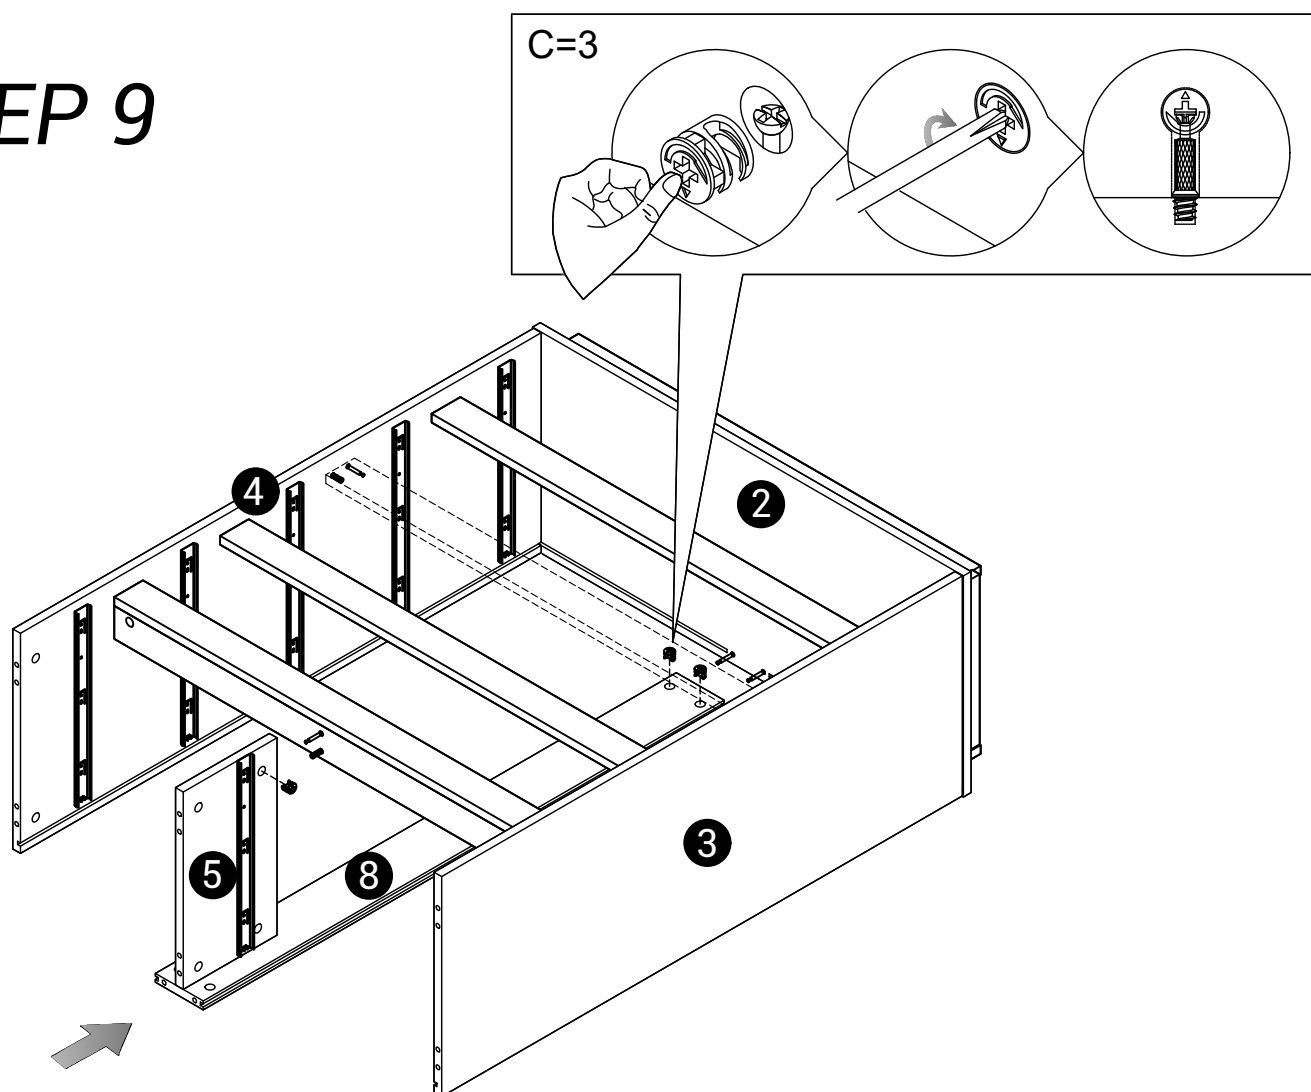


STEP 10

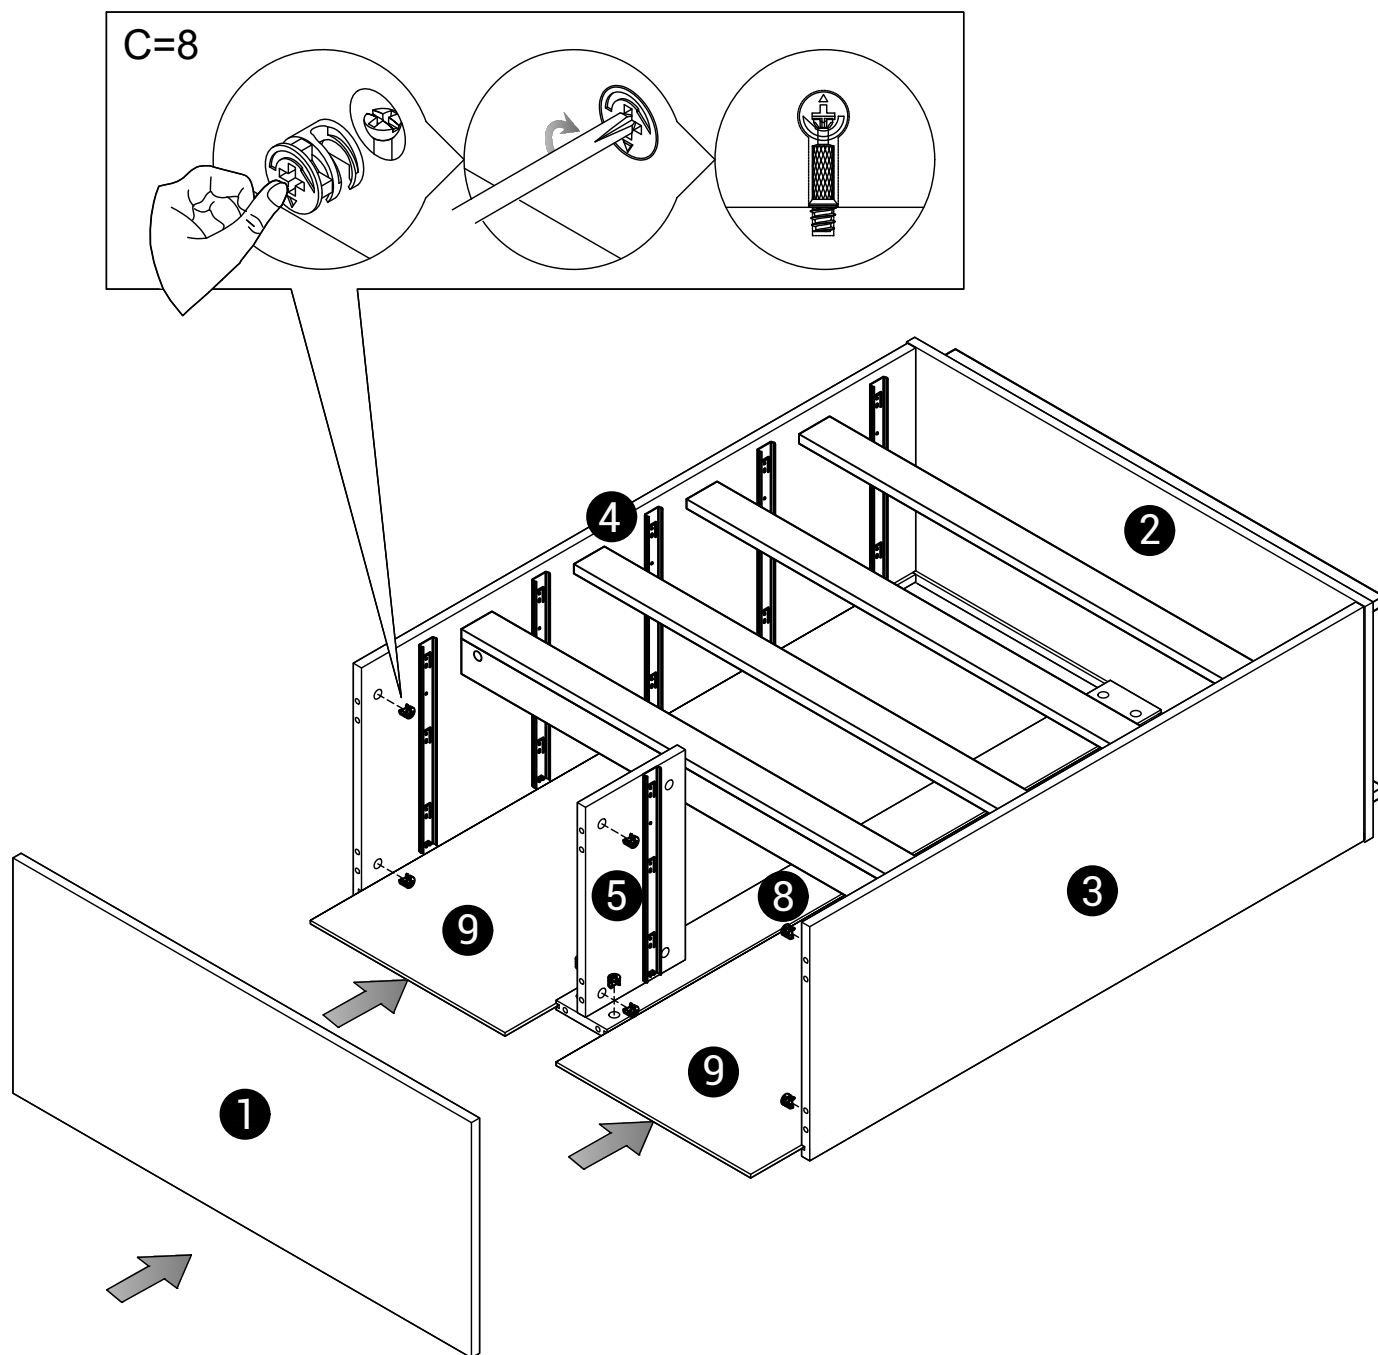

STEP 11

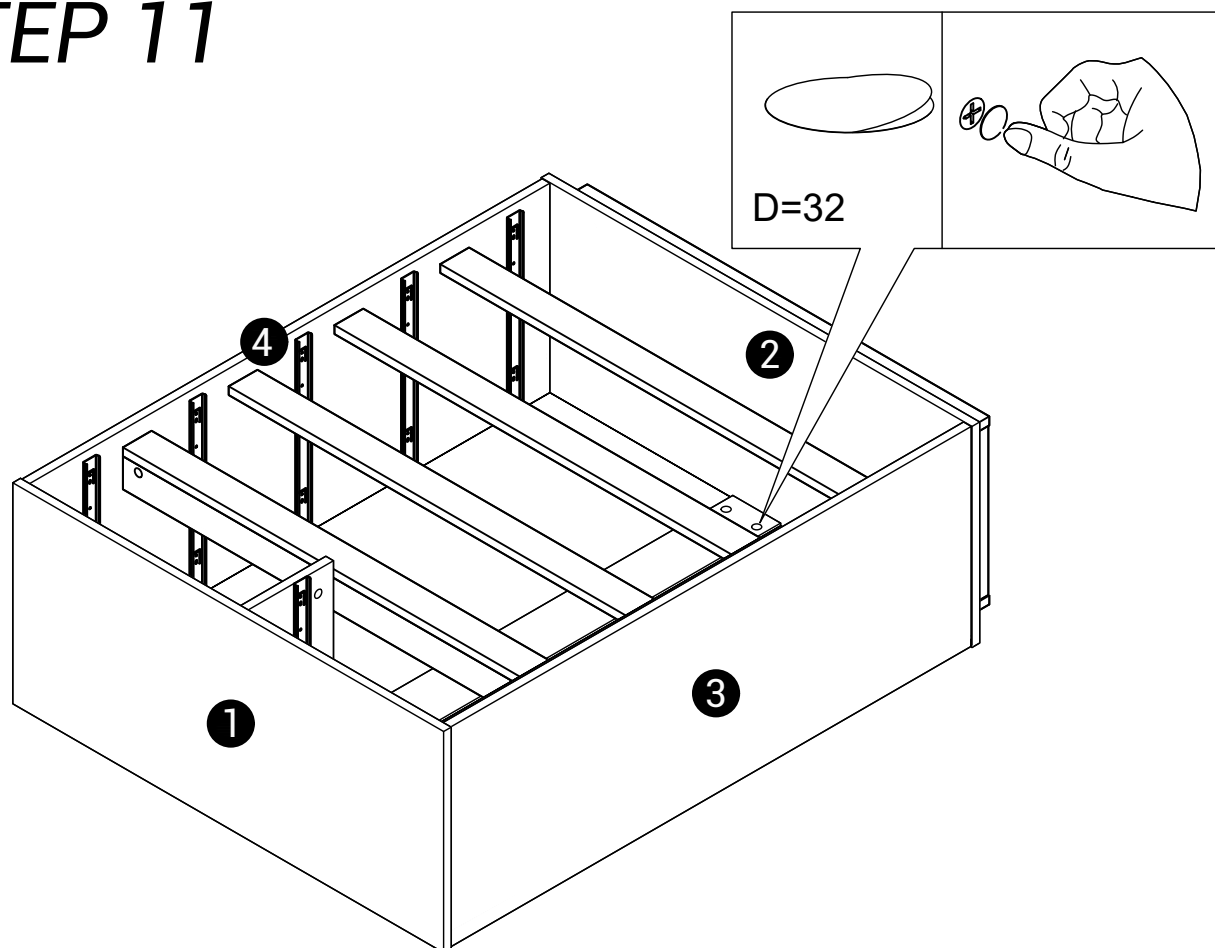


STEP 12

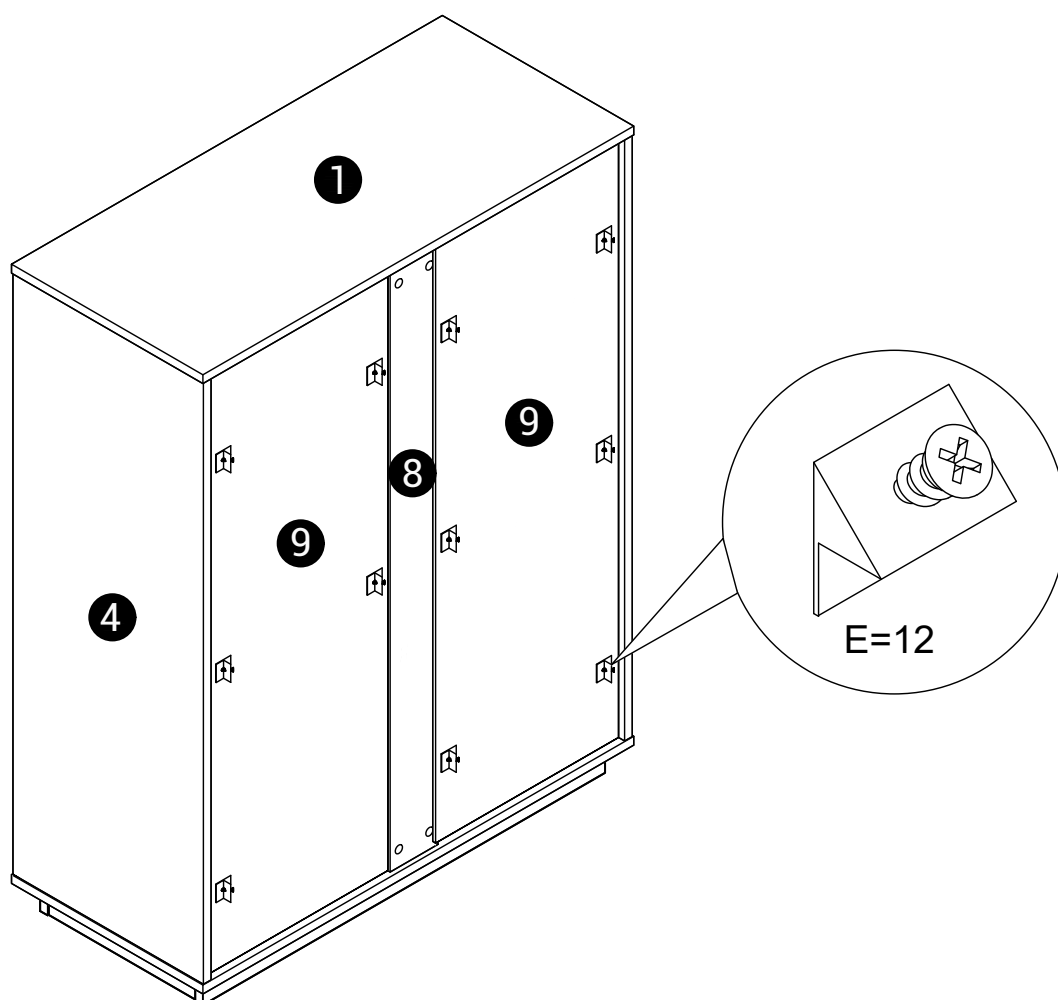


STEP 13


13-1

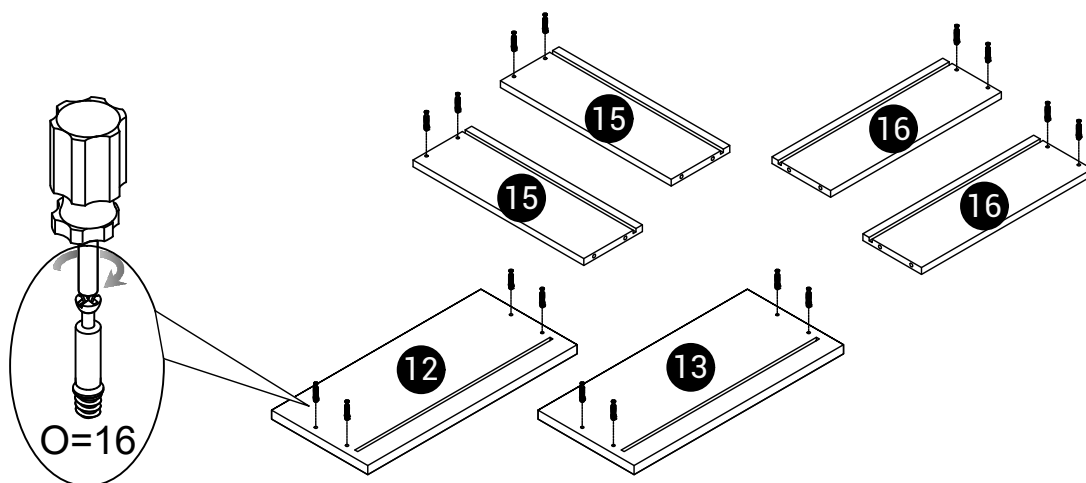

13-2

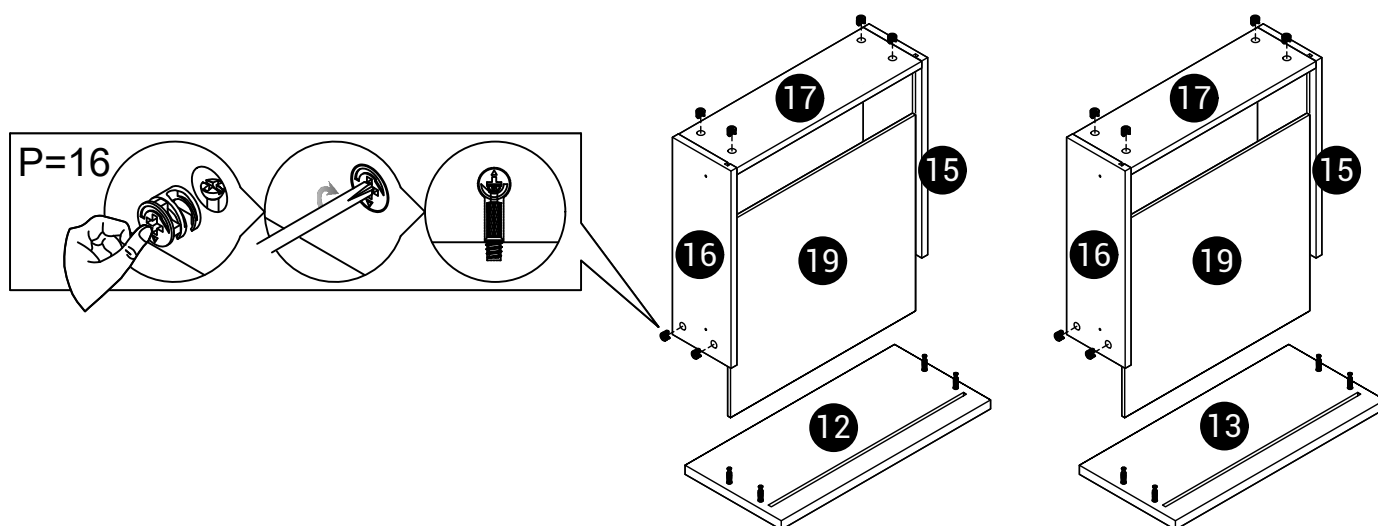


13-3

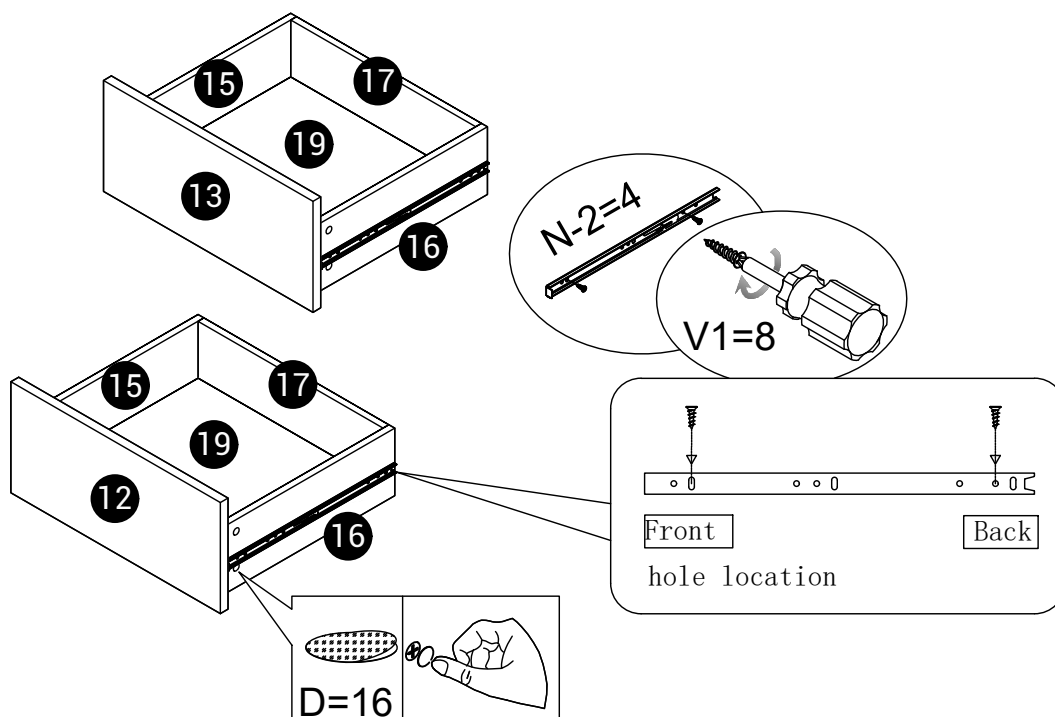


STEP 14


14-1

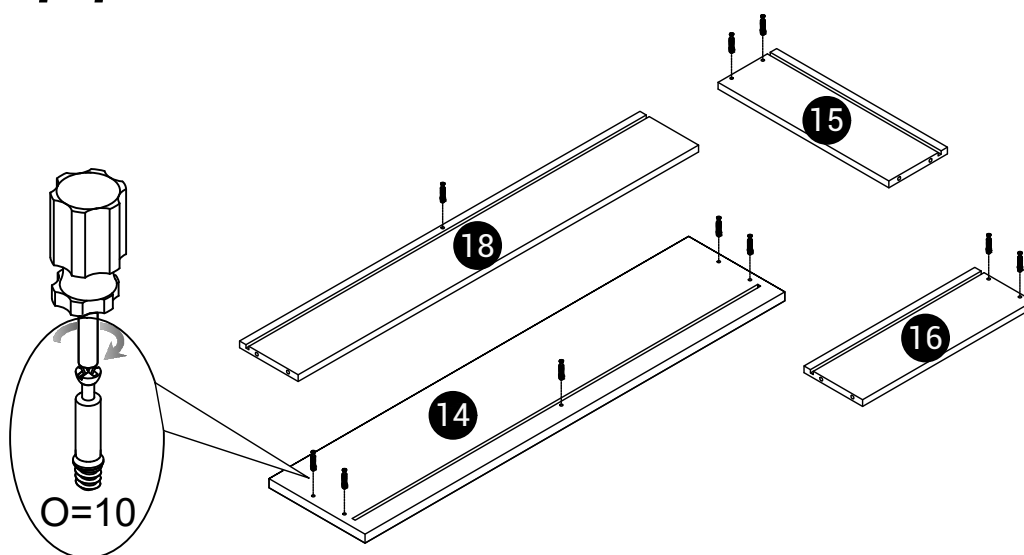

14-2

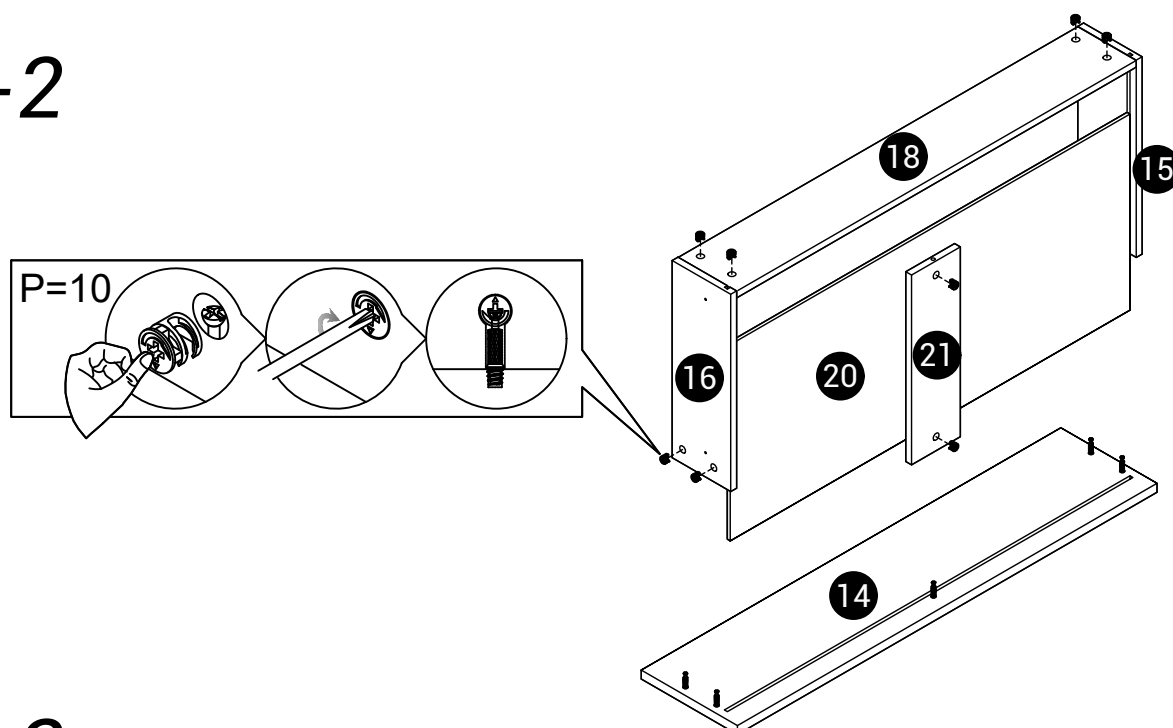


14-3

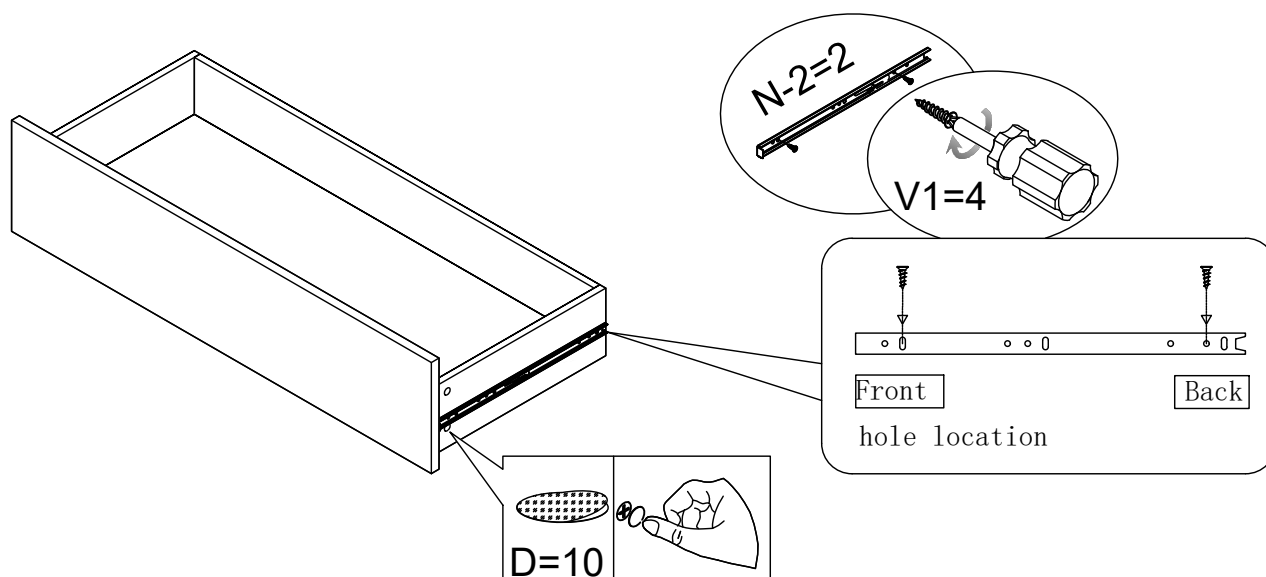


x4


STEP 15

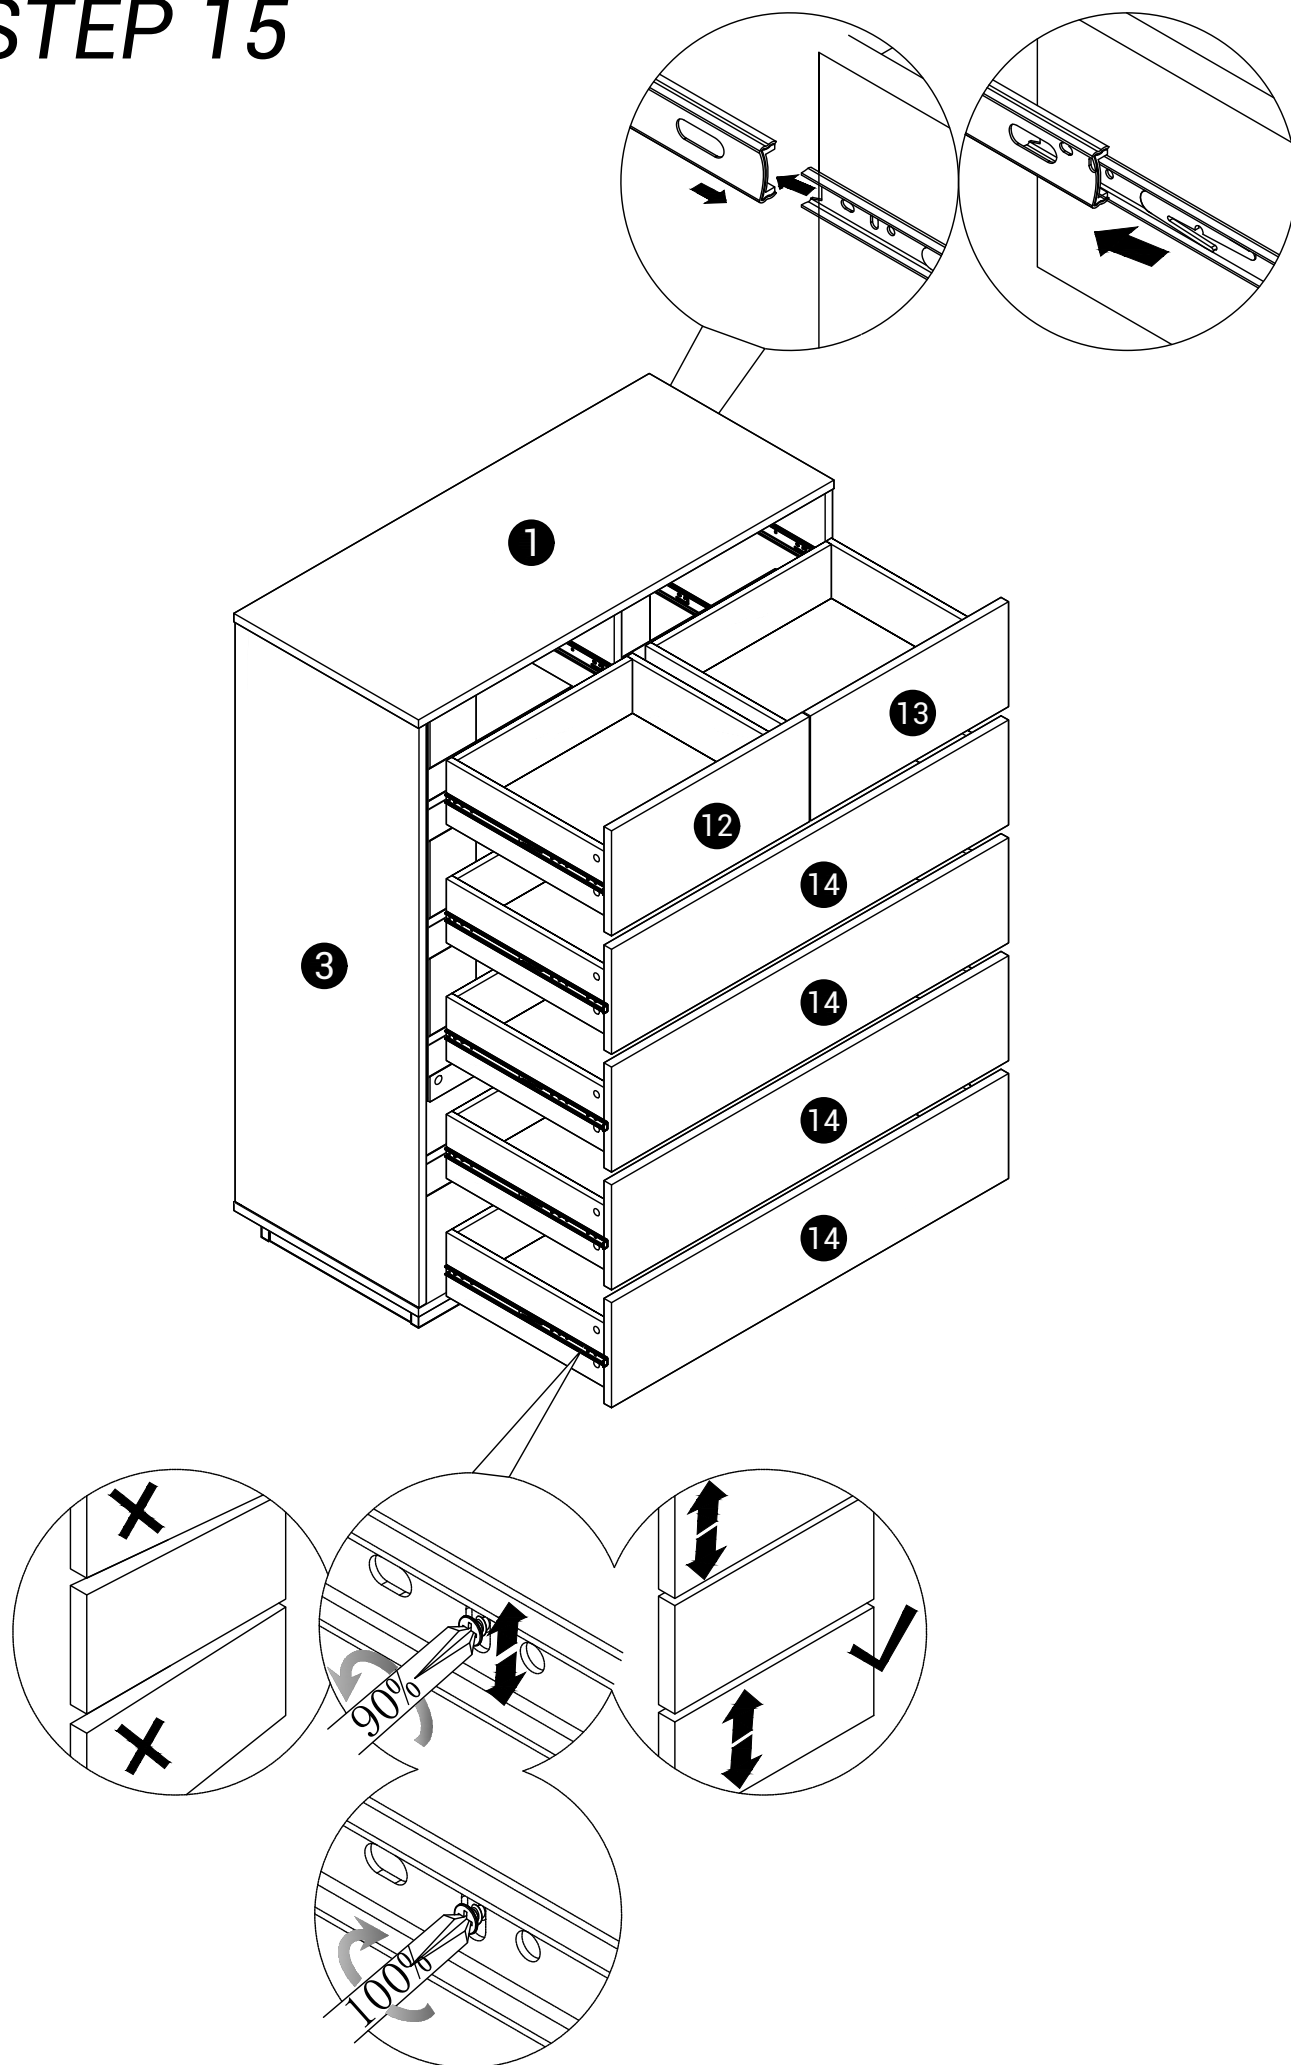

STEP 16

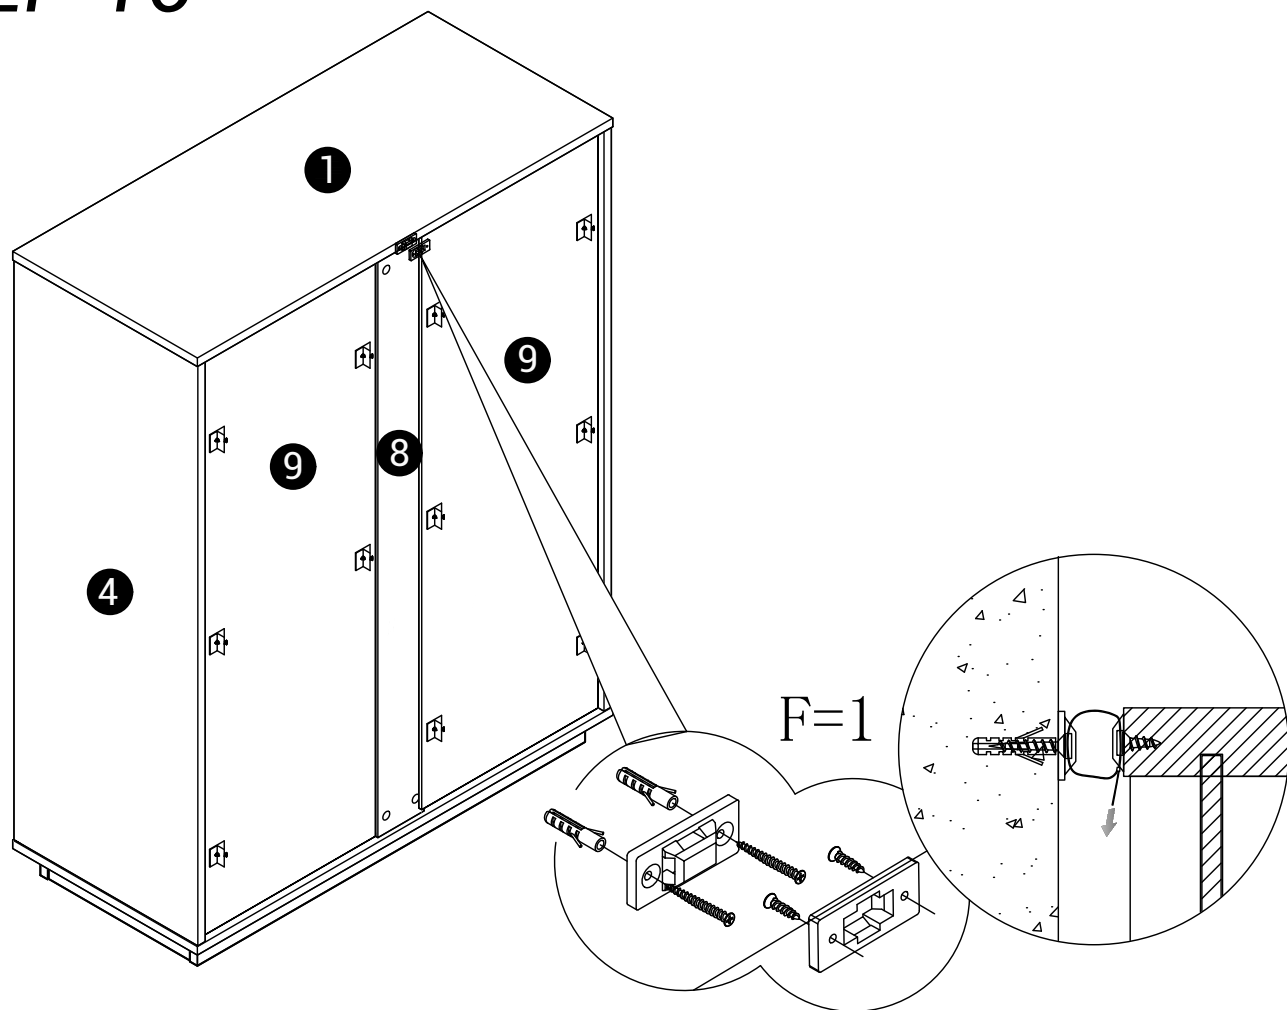

STEP 17

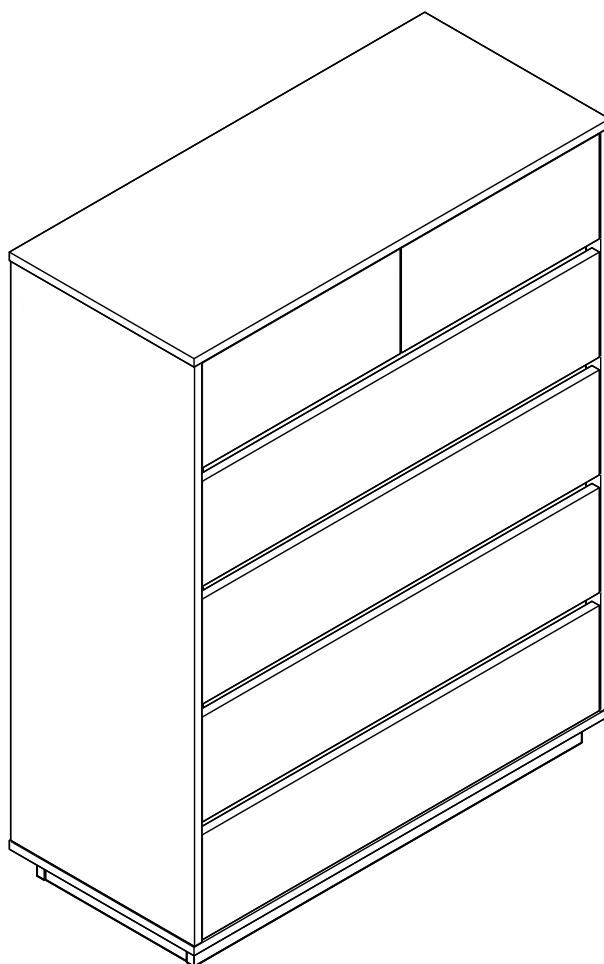

Finish